

Please rate this document after reviewing at the bottom of this page.

REMOVAL

1. Remove the under cover.
(Refer to Engine Mechanical System - "Engine Room Under Cover")
2. Disconnect the EOP connector (A) and remove the EOP (B) by loosening the bolts.
Tightening torque :
19.6 - 25.5 N·m (2.0 - 2.6 kgf·m, 14.5 - 18.8 lb·ft)





INSTALLATION

1. Install in the reverse order of removal.

NOTICE

- Check the assembled state of o-ring (A) and pipe seal (B) before reinstalling the EOP.
- When replacing the EOP, the existing pipe seal (B) must be replaced with a new one.

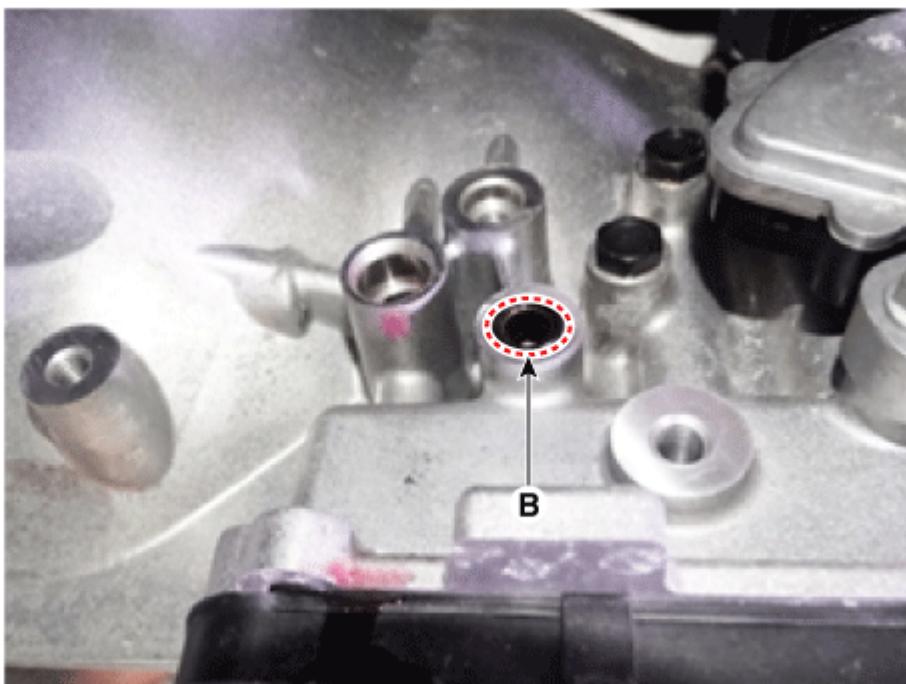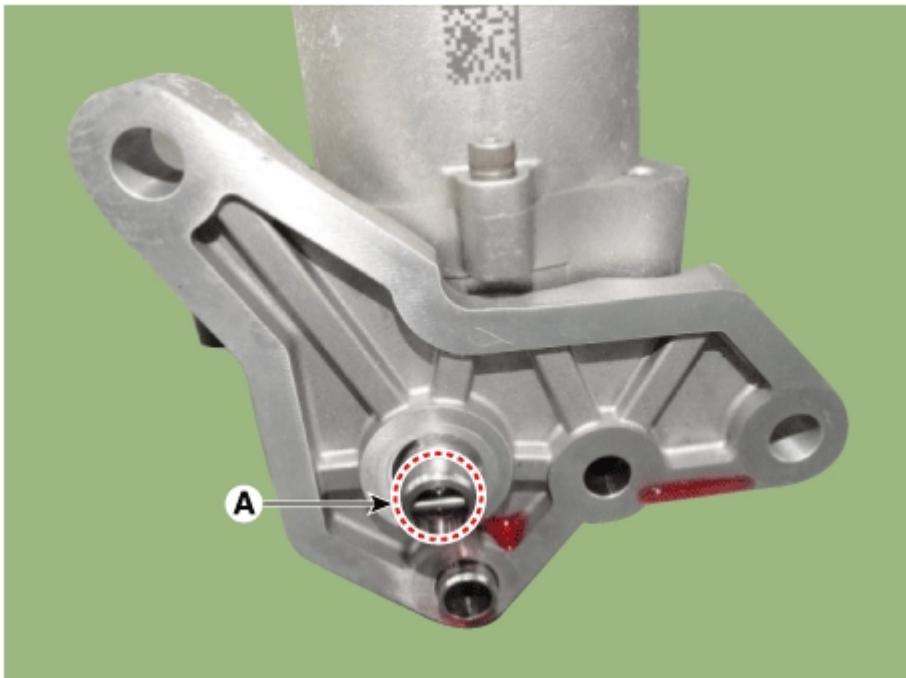

2. Refill the automatic transmission with fluid.

(Refer to Hydraulic System - "Fluid")

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**