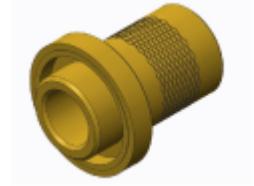


Please rate this document after reviewing at the bottom of this page.

SPECIAL SERVICE TOOLS

Tool Name / Number	Illustration	Description
Oil seal installer (Main Shaft) 0K473-J5100		Installation of transfer case oil seal (Main Shaft). Used with the handle (09231-H1100)
Oil seal installer (Rear Flange) 0K473-J5200		Installation of transfer case oil seal (Rear Flange). Used with the handle (09231-H1100)
Handle 09231-H1100		Installation of transaxle case oil seal. Used with the installer (0K473-J5100, 0K473-J5200)

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.