

Please rate this document after reviewing at the bottom of this page.

REMOVAL

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the crash pad lower panel.
(Refer to Body - "Crash Pad Lower Panel")
3. Remove the knee airbag.
(Refer to Restraint - "Knee Airbag (KAB) Module")
4. Disconnect the AWD ECU connector (A).



5. Loosen the AWD ECU bracket nuts and then remove the AWD ECU (A).



1. Install in the reverse order of removal.

NOTICE

Prior to installing a new ECU, upload the original ECU's clutch learning to the new ECU using the KDS tool.
(Refer to 4 Wheel Drive (AWD) System - "Repair procedures")

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**

Cardiagn.Com