
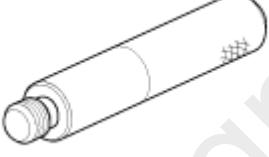
 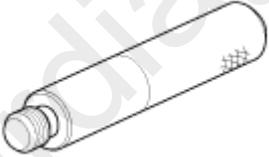


Please rate this document after reviewing at the bottom of this page.

## SPECIAL SERVICE TOOLS

Tool Name / Number	Illustration	Description
09495-3K000 Band installer		Installation of ear type boot band
09495-39100 Band installer		Installation of hook type boot band
09231-H1100 Bar		
09500-11000 Bar		
09432-3D900 Front differential carrier side bearing race installer		Installation of the side bearing race. (Use with 09231-H1100 )
09474-4E100 Front differential carrier side oil seal installer		Installation of the differential carrier oil seal installer. (Use with 09231-H1100)
09474-4E200 Front/Rear differential bearing remover		Used for removing differential bearing
09474-4E300		Installation of pinion cage oil seal.




09474-4E400  
Front differential assembly  
working stand




Removal & Installation of the differential  
assembly working stand.

09474-4E500  
Front differential pinion front  
bearing race installer

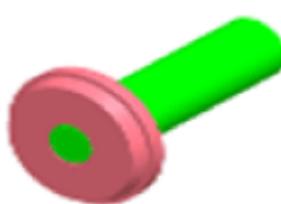

Installation of pinion front bearing race.  
(Use with 09231-H1100)

09432-3D500  
Front differential side bearing  
installer

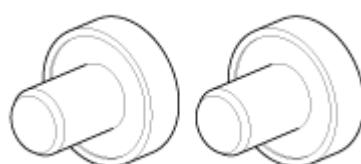


Installation of the differential carrier side  
bearing.  
(Use with 09231-H1100)

09432-33700  
Front/Rear differential pinion  
rear bearing race installer



Installation of the pinion bearing.  
(Use with 09231-H1100)

09452-1P100  
Front differential carrier cover oil  
seal installer

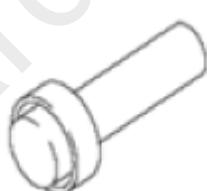

Installation of differential carrier cover oil seal.  
(Use with 09231-H1100)

09452-2W300  
Front differential side bearing  
race remover adapter



Removal of differential side bearing race.

0K530-4J100  
Rear differential assembly  
working stand



Removal & Installation of the differential  
assembly working stand.

0K530-4J200  
Rear differential pinion inner  
bearing race installer

Installation of pinion bearing race.




0K530-4J300  
Rear differential bearing installer



Installation of differential bearing.

09530-3T500  
Differential side oil seal installer

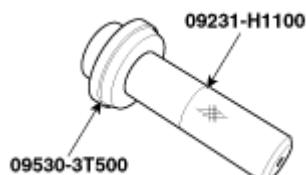


Installation of the differential side oil seal.  
(Use with 09231-H1100)

09530-3T600  
Differential pinion oil seal  
installer




Installation of the differential pinion oil seal.

09521-4H150  
Rear differential pinion outer  
bearing race installer

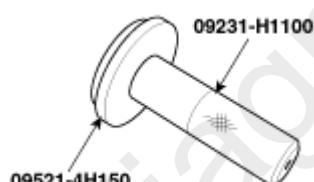

Used for installing drive pinion outer bearing  
outer race  
Used with the handle (09231-H1100)

09530-3C200  
Rear differential carrier side  
bearing installer

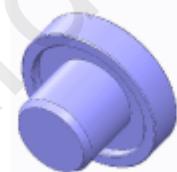

Installation of the differential bearing.

09453-3B500  
Differential case side race  
installer



Installation of the differential bearing race.  
(Use with 09231-H1100)

0K517-J5100



Knuckle expand tool