


Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

1. Remove the front driveshaft.
(Refer to Driveshaft Assembly - "Front Driveshaft")
2. Remove the TJ joint assembly.
(Refer to Driveshaft Assembly - "TJ Joint")
3. Using a plier or flat-tipped (-) screwdriver, remove the BJ boot bands (A).

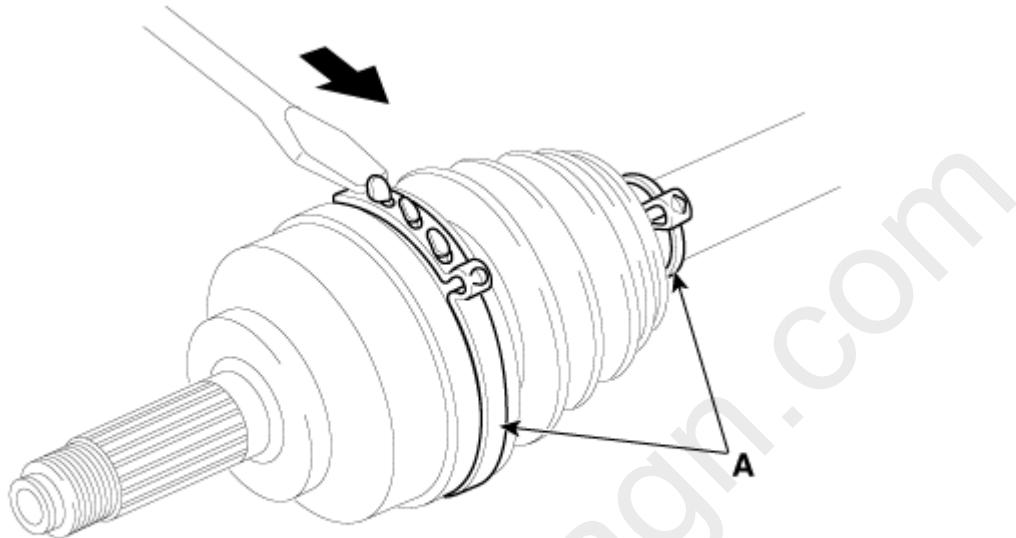

4. Remove the BJ boot.
5. Install in the reverse order of removal.

⚠ CAUTION

- Do not disassemble the BJ assembly.
- Special grease must be applied to the driveshaft joint. Do not substitute with another type of grease.
- The boot band should be replaced with a new one.

6. Check the front alignment.
(Refer to Suspension System - "Alignment")

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.