


Please rate this document after reviewing at the bottom of this page.

REMOVAL

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the luggage side trim.
(Refer to Body - "Luggage side trim")
3. Disconnect the ECS control unit connector (A).

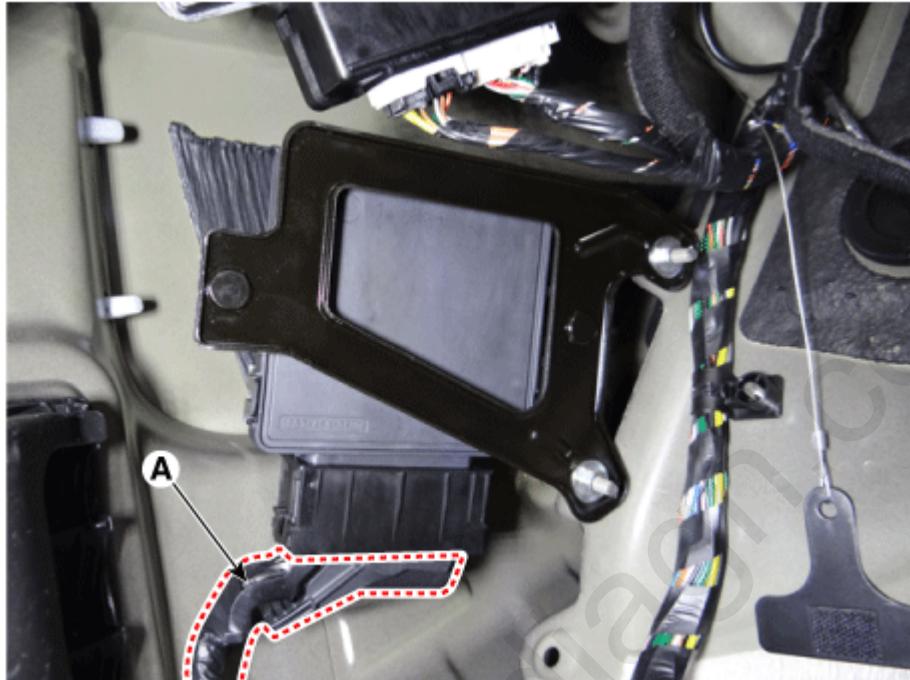

4. Loosen the ECS control unit bracket nut and then remove the ECS control unit (A).



INSTALLATION

1. Install in the reverse order of removal.

English 

2. Perform ECS variant coding.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**

Cardiagn.Com