


Please rate this document after reviewing at the bottom of this page.

## HUB NUT TIGHTENING SEQUENCE

Tighten the hub nuts as follows.

### Tightening torque:

107.9 - 127.5 N·m (11.0 - 13.0 kgf·m, 79.6 - 94.0 lb·ft)

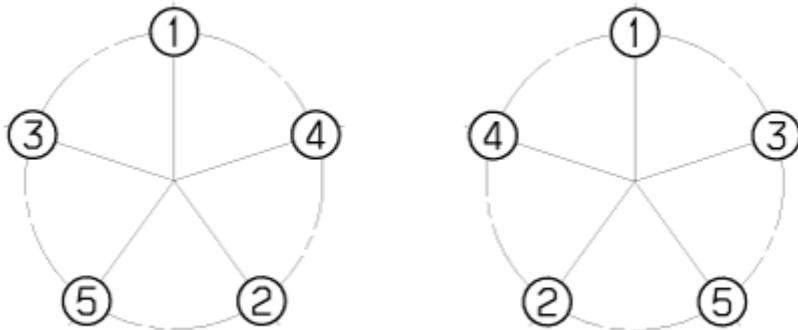

### ▲ CAUTION



When using an impact gun, final tightening torque should be checked using a torque wrench.

## Run out inspection

1. Jack up the vehicle.
2. Measure the wheel run-out by using a dial indicator as shown below.

Run-out	Aluminum
Radial mm (in.)	Below 0.3 (0.0118)
Lateral mm (in.)	Below 0.3 (0.0118)

3. If measured value exceeds the standard value, replace the wheel.

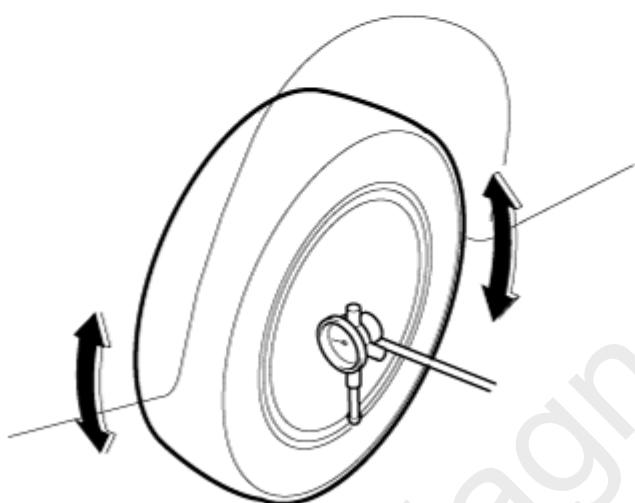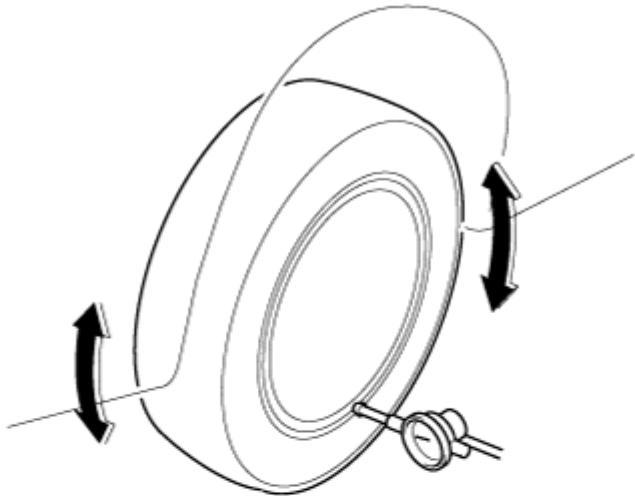

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.