

Please rate this document after reviewing at the bottom of this page.

DESCRIPTION

optimal steering column position on the tilt & telescope units and reproduce the steering column position when the position has changed. Reproduction of steering column position is prohibited while driving due to safety reasons. There is an emergency stop function that stops the reproduction and related operations. The following functions are provided.

1. Manual Operation

- You can use the manual switch to adjust the tilt of the steering column up and down and its telescope forward and backward.
- When a signal is received from the manual switch, the IPS is activated to change the steering column position.

2. Memory Function

- You can use the IMS switch to memorize and reproduce tilt and telescope positions for up to 3 people.
- When the IMS switch is activated, the system receives CAN data from DDM and recalls the optimal steering column position set by the driver.
- When IMS switch is activated, the system reproduces the saved settings based on the CAN data from DDM.

3. Memory/Reproduction using the smart key: You can use the smart key to memorize and reproduce steering wheel positions for up to 2 people.

4. Automatic tilt and telescope position adjustment: Tilt and telescope position can be adjusted automatically based on the key in/out data (CAN data from BCM).

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**