

Please rate this document after reviewing at the bottom of this page.

REMOVAL

Steering column module (SCM)

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the crash pad lower panel.
(Refer to Body -"Crash pad lower panel")
3. Disconnect the steering column module connector.

[LHD]




[RHD]



4. Loosen the steering column module bracket bolts and then remove the steering column module.



[RHD]

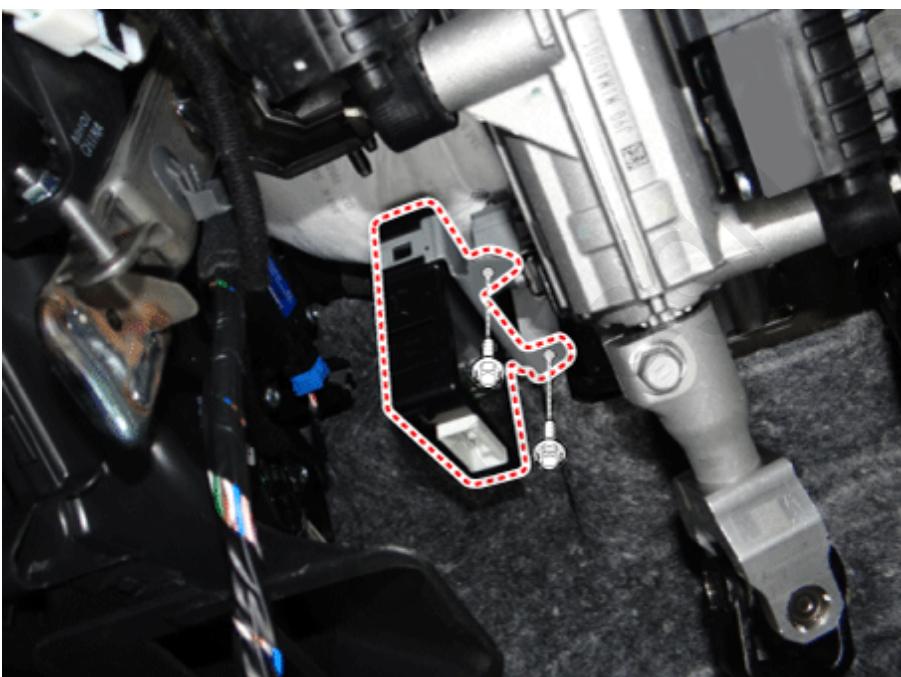

5. Install in the reverse order of removal.

Steering column module (SCM) switch

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the crash pad lower panel.
(Refer to Body - "Crash pad lower panel")
3. Disconnect the steering column module connector.
(Refer to Body - "Steering Column Shroud Panel")
4. Disconnect the steering module switch connector and clip.



5. Using the driver, remove the steering column module switch.



6. Install in the reverse order of removal.

Steering Limit Position Setting

NOTICE

- Steering Limit Position Setting is must be done when any of cases is met as below.
 - After replacing SCM Unit.
 - After replacing steering.
 - SCM Error(Only 2 second movement while pressing SCM switch)

1. Perform the "Steering Limit Position Setting" using the KDS.

S/W Management													
• Steering Limit Position Setting													
<table border="1"><tr><td>Purpose</td><td>To set steering limit position.</td></tr><tr><td>Enable Condition</td><td>1.Engine Off 2.Ignition Switch On</td></tr><tr><td>Concerned Component</td><td>Steering Column Module(SCM)</td></tr><tr><td>Concerned DTC</td><td>B1958XX, B1959XX</td></tr><tr><td>Fail Safe</td><td>Set DTC</td></tr><tr><td>Etc</td><td>In case of SCM replacement / Steering replacement / SCM error occurs(Only operates for 2 sec. whenever switch is operated)</td></tr></table>		Purpose	To set steering limit position.	Enable Condition	1.Engine Off 2.Ignition Switch On	Concerned Component	Steering Column Module(SCM)	Concerned DTC	B1958XX, B1959XX	Fail Safe	Set DTC	Etc	In case of SCM replacement / Steering replacement / SCM error occurs(Only operates for 2 sec. whenever switch is operated)
Purpose	To set steering limit position.												
Enable Condition	1.Engine Off 2.Ignition Switch On												
Concerned Component	Steering Column Module(SCM)												
Concerned DTC	B1958XX, B1959XX												
Fail Safe	Set DTC												
Etc	In case of SCM replacement / Steering replacement / SCM error occurs(Only operates for 2 sec. whenever switch is operated)												
<div style="text-align: center;"><input type="button" value="OK"/></div>													

Fig.1

S/W Management

■ Steering Limit Position Setting

● [Steering Limit Position Setting]

This function is for steering limit position setting. It must be done when any of cases is met as below.

1. After replacing SCM Unit
2. After replacing steering
3. SCM Error (Only 2 second movement while pressing SCM switch)

Press the **[Set]** button to complete the limit position setting.

● [Condition]

1. Ignition ON, Engine OFF

Set **Cancel**

Fig.2

S/W Management

■ Steering Limit Position Setting

Now in progress...

Please wait a moment...

Fig.3



Fig.4

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.