

Please rate this document after reviewing at the bottom of this page.

## COMPONENT REPLACEMENT AFTER DEPLOYMENT

### NOTICE

Before any SRS repairs, use the KDS to check for DTCs. Refer to the Diagnostic Trouble Code list for repairing related DTCs.

When the front airbag(s) deployed after a collision, replace the following items.

- SRSCM
- Deployed airbag(s)
- Seat belt pretensioner(s)
- Front impact sensors
- Inspect the clock spring for heat damage.  
For any damage found, replace the clock spring.

When the side/curtain airbag(s) deployed after a collision, replace the following items.

- SRSCM
- Deployed airbag(s)
- Side impact sensor(s) for the deployed side(s)
- Airbag wiring harness
- Seat belt pretensioner(s)

After the vehicle is completely repaired, confirm the SRS airbag system is OK.

- Turn the ignition switch ON; the SRS indicator should light on for about six seconds and then off.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**