

Please rate this document after reviewing at the bottom of this page.

THE AIRBAG MODULE DISPOSAL PROCEDURE


- When disposing a vehicle that is equipped with an airbag system and other restraint devices such as seatbelt pretensioners, airbags must first be deployed.
- Airbag deployment must be performed by an experienced technician.
- Airbags that have been deployed cannot be reused and must not be mounted to any other vehicles.

⚠ CAUTION

- Deployment of airbags upon disposal of a vehicle is necessary as unintended deployment of such airbags can inflict serious physical injury.
- At the time of disposal, the airbag module should, in principle, be deployed as it is mounted in the vehicle. Do not remove the airbag module unless it is absolutely necessary.
- If the airbag module has been removed from the vehicle due to airbag replacement (when repairing after a traffic accident, during warranty repair, etc.), the module must be deployed outside the vehicle following the instructions that apply.
(Deploying the airbag module inside the vehicle may damage the vehicle.)
- Do not disassemble module.
- Do not damage the airbag module.
- Do not drop the airbag module.
- Deployment of the airbag module must be performed on an even surface where there are no risk elements.
- To deploy the airbag system, operate the airbag module at least 7 meters away from the airbag system.
- As it can emit smoke, deploy in a well ventilated area with no smoke detector nearby
- To deploy the airbag system, use the specified special service tools at all times and perform the procedure in a location where there is no electrical noise.
- Always wear protective gloves, goggles, and earplugs during deployment.
- Keep deployed module away from water.

Tools and equipment required to dispose of the airbag module

Illustration	Tool Name	Remarks
	Gloves	
	Goggles	
	Earplugs	

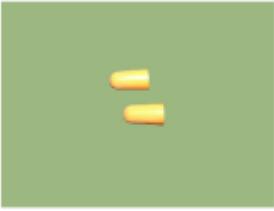		
	2 tires with wheel rim	(Top / Bottom)
	3 tires without wheel rim	(Middle)
	Rope Strap / Ratchet Strap	(Use for connecting the airbag module equipment and tires according to the deployment instructions)
	12V battery	

Deployed within the vehicle

1. Turn the ignition switch OFF and disconnect the negative battery terminal.

NOTICE

After disconnecting the cables, wait at least 30 seconds.

2. Confirm that each airbag module is securely mounted.
3. Refer to the following to prepare for the deployment of the airbag system:
 - (1) Inside the vehicle, remove the connector of the airbag to be deployed.
 - (2) Connect the deployment adaptor from airbag/pretensioner.
 - For the driver airbag module, remove the connector and connect the deployment adapter. Reattach the module to the steering wheel.
4. The mechanic shall be located at least 7 meters away from the vehicle.
5. Connect the external battery after connecting the deployment tool (0957A-34100A) from the deployment adaptor.
 - (1) Battery (12V)
 - (2) Deployment tool (0957A-34100A)
 - (3) Deployment adaptor
 - Driver airbag (0K57A-3U100A)

- Passenger airbag (0K57A-3U100A)
- Curtain airbag (0K57A-3U100A)
- Knee airbag (0957A-3F100)
- Side airbag (0957A-2W100)
- Seat belt pretensioner (0K57A-3U100A)
- Anchor pretensioner (0K57A-3U100A)

English 



6. Activate the switch of the airbag deployment tool to deploy the airbag system.

- (1) When properly connected to the battery (12 V), the POWER ON (1) will illuminate.
- (2) Press and hold READY (2) until the READY (2) lamp illuminate. Then, press DEPLOY (3) to deploy the system.



 **CAUTION**

The airbag system generates an explosion-like sound when deployed. Make sure to choose a safe place to avoid any disturbance the procedure may cause.

Airbag deployment can be confirmed by audio (from the intense noise) and visually, as airbags instantly inflate and then gradually deflate.


7. Place deployed airbags in a sturdy plastic bag, securely seal the bag, and dispose of the bag.

**⚠ CAUTION**

- Allow at least 30 minutes for cooling before handling the airbag system as it generates extreme heat upon deployment.
- Wash your hands thoroughly with soap and water after disposal.

Deployment in a vehicle outside

1. Lay the rope (A) on the floor to form a cross and place the wheeled tire (B) over it.

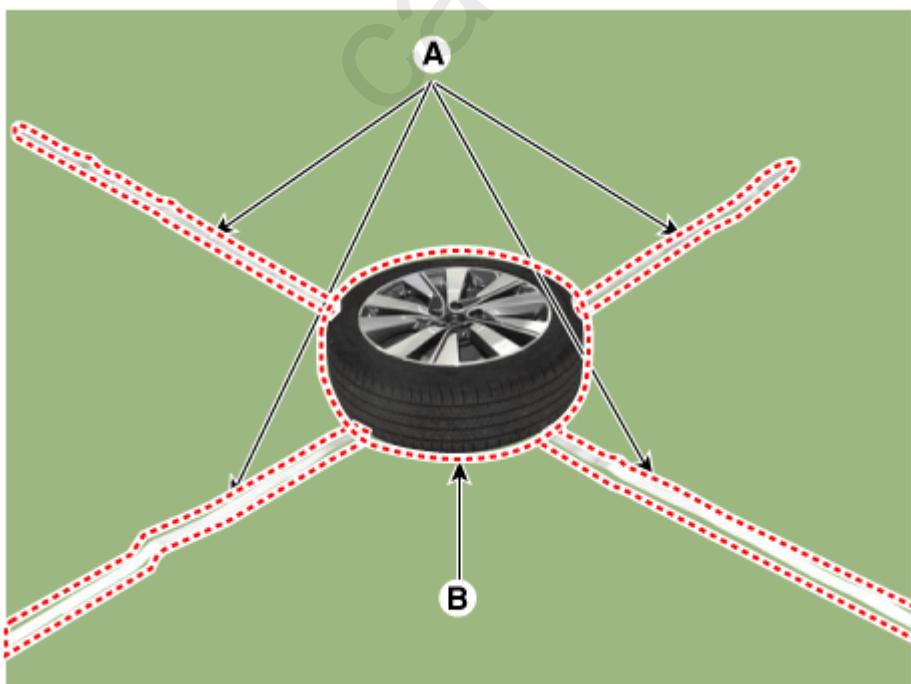

2. Install the deployment adaptor (0K57A-3U100A) from airbag module/pretensioner.



3. Fix the airbag module/pretensioner (A) from wheel.

[Airbag Module]



CAUTION

The deployed side of the airbag must face up. The airbag may spring up and cause a serious physical damage to the operator if the deployed side is facing down.

[Pretensioner]

**⚠ CAUTION**

Install the anchor pretensioner with the end of the piston tube facing the floor.

4. Place three waste tires (A) first, then place wheeled tire (B) on top of the pile.
5. Secure the tire with the ratchet strap (C).



6. Connect to the battery. Connect the airbag deployment tool (0957A-34100A) to the deployment adapter (0K57A-3U100A).



7. When the POWER ON (A) is illuminated on the airbag deployment tool, press READY (B), and then DEPLOY (C) to deploy the airbag.



 **CAUTION**

The airbag system generates an explosion-like sound when deployed. Make sure to choose a safe place to avoid any disturbance the procedure may cause.

 **Information**

Airbag deployment can be confirmed by audio (from the intense noise) and visually, as airbags instantly inflate and then gradually deflate.

8. Place deployed airbags in a sturdy plastic bag, securely seal the bag, and dispose of the bag.

**⚠ CAUTION**

- Allow at least 30 minutes for cooling before handling the airbag system as it generates extreme heat upon deployment.
- Wash your hands thoroughly with soap and water after disposal.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.