
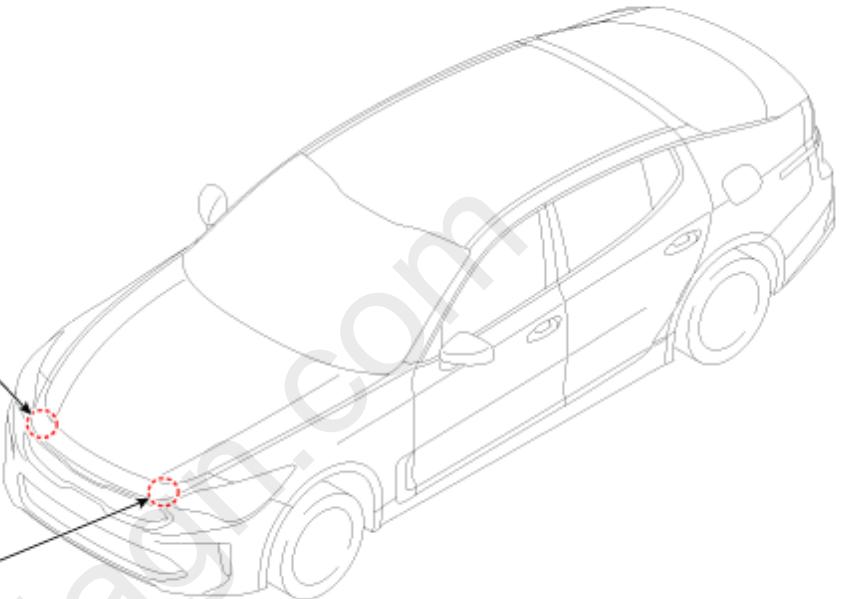



Please rate this document after reviewing at the bottom of this page.

REMOVAL

1. Disconnect the negative battery cable and wait for at least thirty seconds before beginning to work.
2. Disconnect the front impact sensor connector (A).

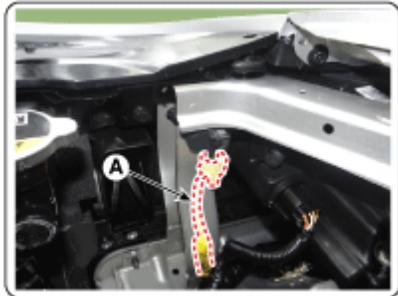

3. Remove the front impact sensor mounting bolt (A).

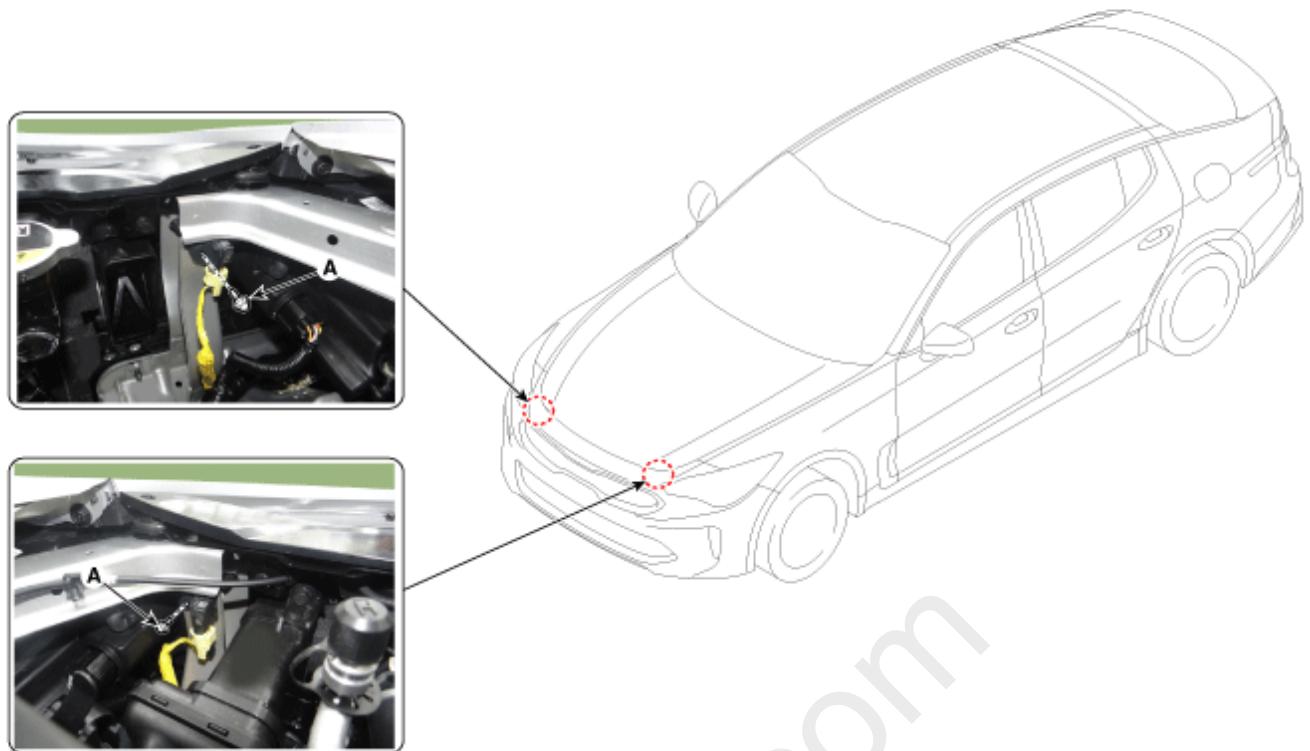

INSTALLATION

CAUTION

Do not switch "ON" the ignition or connect the battery terminal while replacing the front impact sensor.

1. Install the new front impact sensor.
2. Tighten the front impact sensor mounting bolt.
Tightening torque :
7.8 - 11.7 N·m (0.8 - 1.2 kgf·m . 5.7 - 8.6 lb·ft)
3. Connect the front impact sensor.
4. Reconnect the negative battery terminal.
5. After installing the Front Impact Sensor, confirm proper system operation:
 - Switch "ON" the ignition. The SRS indicator light should turn on for about six seconds and then off.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**