

Please rate this document after reviewing at the bottom of this page.

DESCRIPTION

The SRSCM shall monitor the status of the driver and front passenger seat belt buckle. The SRSCM provides one pin each for the driver and front passenger seat belt buckle status input. The seat belt buckle circuit operates from internal boost voltage supplied by the SRSCM, and uses chassis ground for the signal return. The buckle status shall modify the SRSCM deployment. If the seat belt is unbuckled, the corresponding pretensioner will not be deactivated.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**

Cardiagn.Com