

Please rate this document after reviewing at the bottom of this page.

## REMOVAL

1. Disconnect the negative battery terminal, and wait for at least three minutes before beginning to work.
2. Remove the front seat assembly.  
**(Refer to the Body - "Front Seat Assembly")**
3. Loosen the mounting bolt and then remove the seat belt buckle switch.



## INSTALLATION

1. Disconnect the negative battery terminal, and wait for at least three minutes before beginning to work.
2. Install in the reverse order of removal.
3. Reconnect the negative battery terminal.
4. After installing the seat belt buckle switch, confirm proper system operation:
  - Switch "ON" the ignition. The SRS indicator light should turn on for about six seconds and then off.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**