

Please rate this document after reviewing at the bottom of this page.

DESCRIPTION

The Seat Belt Pretensioners (BPT) are installed inside the Center Pillars (LH & RH). When a vehicle crashes at a certain degree of frontal impact, the seat belt pretensioners help reduce the severity of injury to the front seat occupants by retracting the seat belt webbing.

This prevents the front occupants from thrusting forward and hitting the steering wheel or the instrument panel when the vehicle crashes.

⚠ CAUTION

Never attempt to measure the circuit resistance of the Seat Belt Pretensioner (BPT) even if you are using the specified tester. If the circuit resistance is measured with a tester, the pretensioner will be ignited accidentally. This will result in serious personal injury.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.