

Please rate this document after reviewing at the bottom of this page.

## REMOVAL

1. Disconnect the battery negative terminal, and wait for at least three minutes before beginning to work.
2. Remove the door scuff trim.  
**(Refer to Body (Interior and Exterior) - "Door Scuff Trim")**
3. Remove the center pillar trim.  
**(Refer to Body (Interior and Exterior) - "Center Pillar Trim")**
4. Remove the upper anchor bolt (A).



5. Disconnect the seat belt pretensioner connector (A) and then remove the seat belt pretensioner.




6. Loosen the seat belt pretensioner bolts (A,B).

## Tightening torque

Bolt (A) : 7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

Bolt (B) : 39.2 - 53.9 N·m (4.0 - 5.5 kgf·m, 28.9 - 39.7 lb·ft)

English 

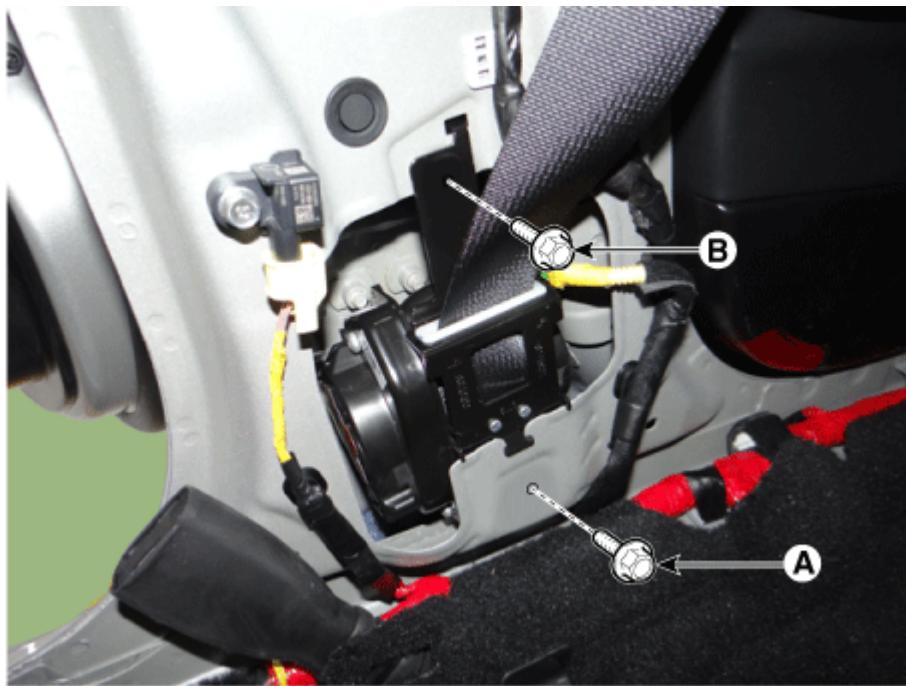

## INSTALLATION

1. Disconnect the negative battery terminal, and wait for at least three minutes before beginning to work.
2. Install in the reverse order of removal.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**