


Please rate this document after reviewing at the bottom of this page.

## REMOVAL

1. Disconnect the battery negative terminal, and wait for at least three minutes before beginning to work.
2. Remove the door scuff trim.  
**(Refer to Body (Interior and Exterior) - "Door Scuff Trim")**
3. Remove the center pillar trim.  
**(Refer to Body (Interior and Exterior) - "Center Pillar Trim")**
4. Remove the EFD connector (A).
5. Remove the EFD mounting bolt.

### Tightning torque

39.2 - 53.9 N·m (4.0 - 5.5 kgf·m, 28.9 - 39.7 lb·ft)

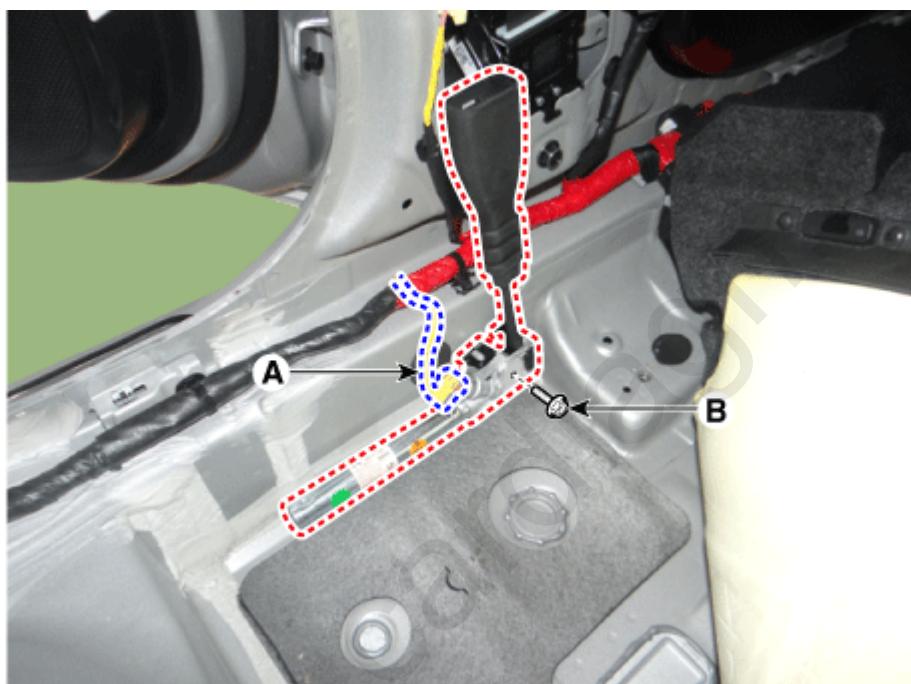

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.