

Please rate this document after reviewing at the bottom of this page.

## REMOVAL


1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Using the remover, remove the console upper cover (A).




3. Disconnect the connector (A) from the console upper complete.




4. Disconnect the connector (A) from the upper console.

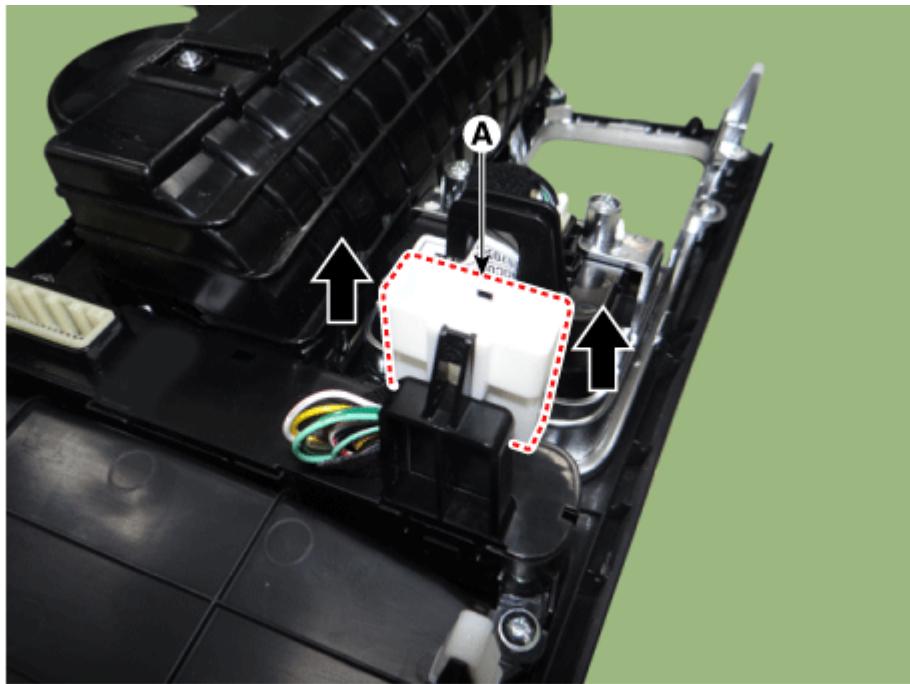


5. Loosen the screw and then remove the console floor switch complete (A).

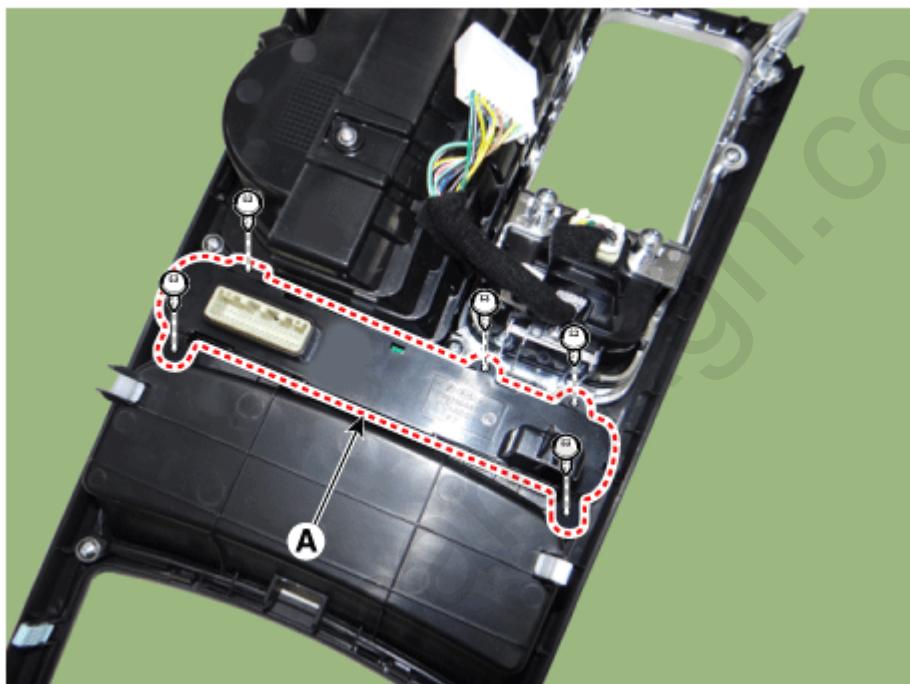

6. Remove the cup holder (A).

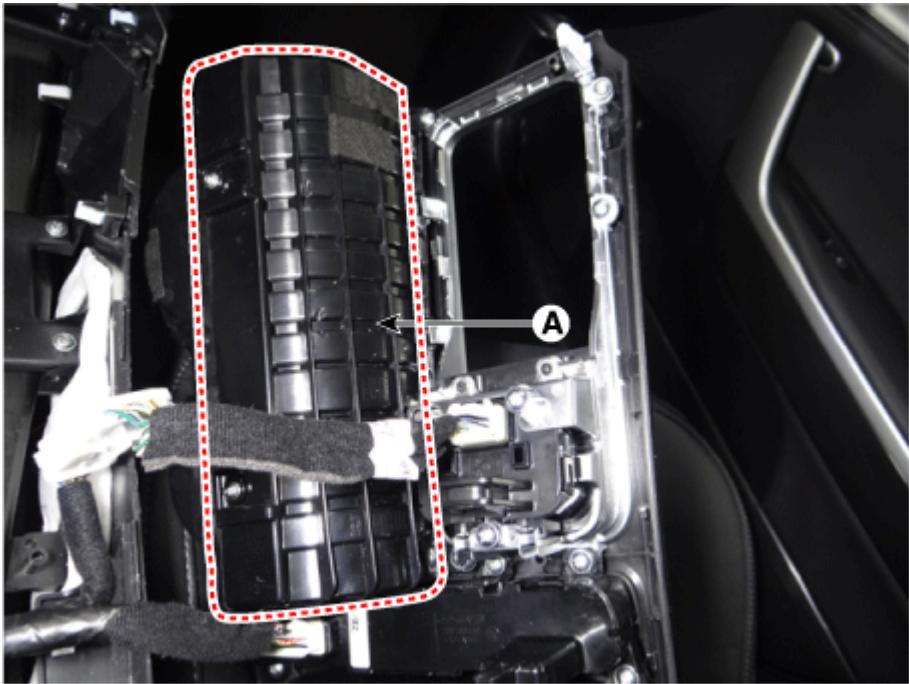

7. Loosen the screw and then remove the ESP switch (A).

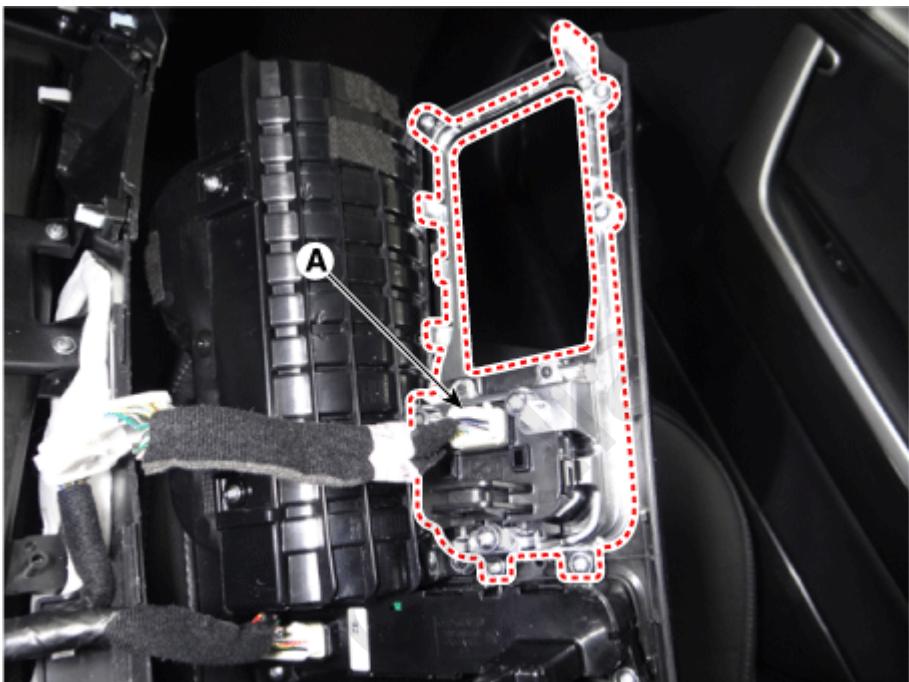

8. Disconnect the ESP connector (A) from the upper console.



9. Install in the reverse order of removal.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**