

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT


CAUTION

Put on gloves to protect your hands.

Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the front tire.
2. After loosening the mounting clips, nuts, bolts and screws, remove the front wheel guard (A).

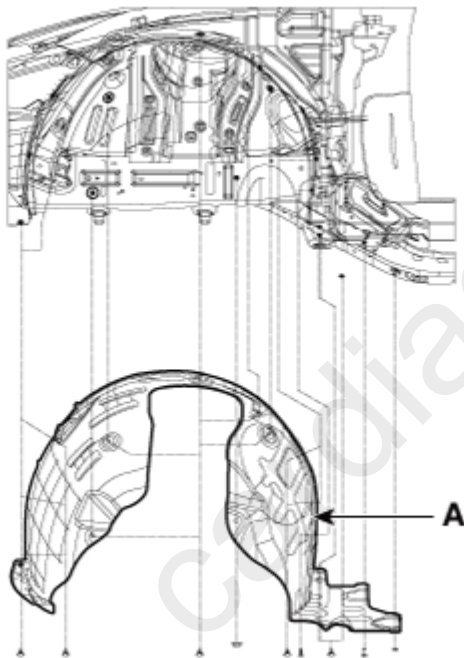

3. Install in the reverse order of removal.

Information

Replace any damaged clips.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**