

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

⚠ CAUTION

Put on gloves to protect your hands.

ℹ Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the tail gate trim.
(Refer to Tail Gate - "Tail Gate Trim")
2. Remove the tail gate lever bumper (A) after loosening the mounting screw.



3. Loosen the rear spoiler mounting nuts.

Tightening torque :

5.9 - 6.4 N·m (0.6 - 0.65 Kgf·m, 4.3 - 4.7 lb·ft)



4. Remove the rear spoiler (A).



5. Install in the reverse order of removal.

 **Information**

Replace any damaged clips.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.