

Please rate this document after reviewing at the bottom of this page.

## REPLACEMENT

### ⚠ CAUTION

Put on gloves to protect your hands.

### ℹ Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the reservoir cover (A) after removing the mounting clips.




2. Remove the cap (A) and then loosen the nuts (B).

#### Tightening torque :


22.6 - 26.5 N·m (2.3 - 2.7 Kgf·m, 16.6 - 19.5 lb·ft)

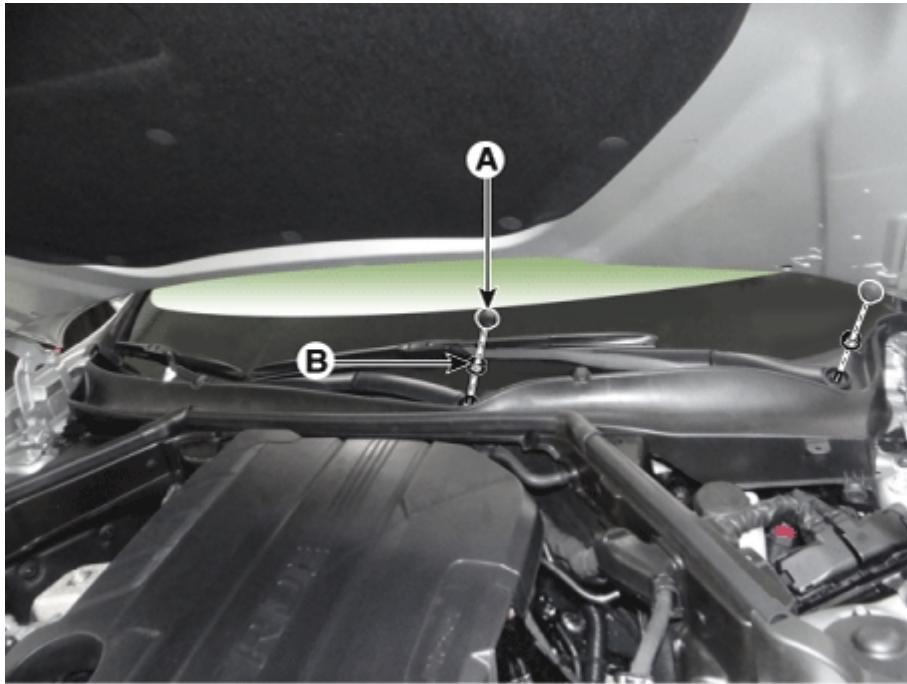


3. Remove the wiper arm (A).

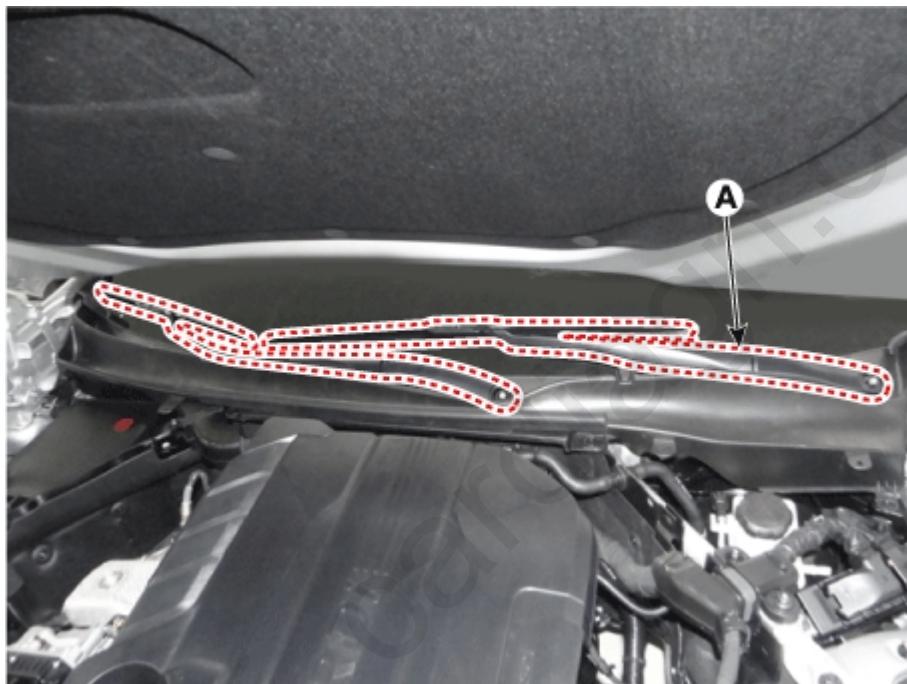

4. Disconnect the nozzle hose (A).

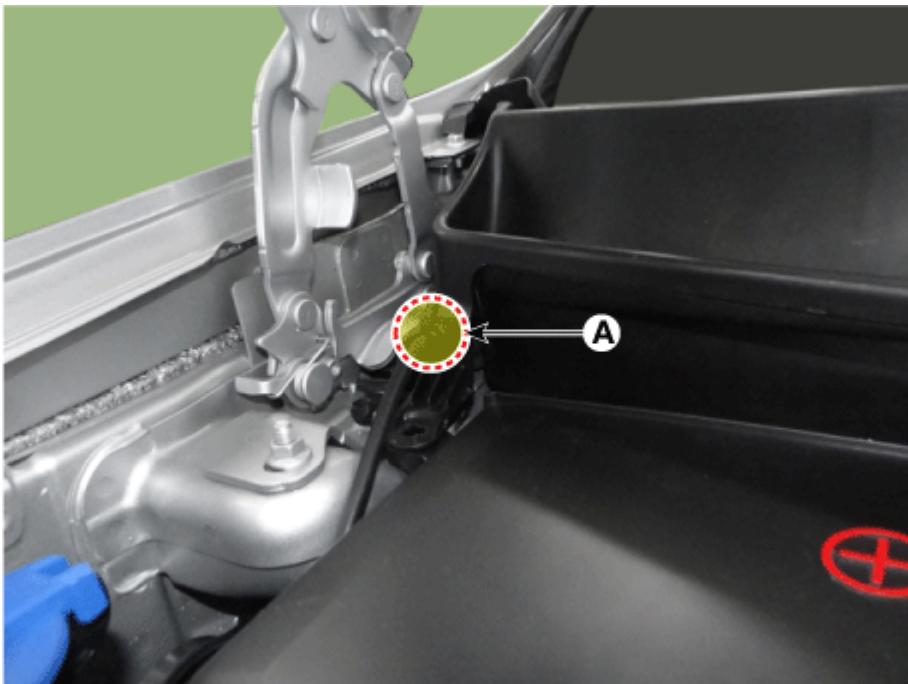

5. Detach the clips, then remove the cowl top cover (A).

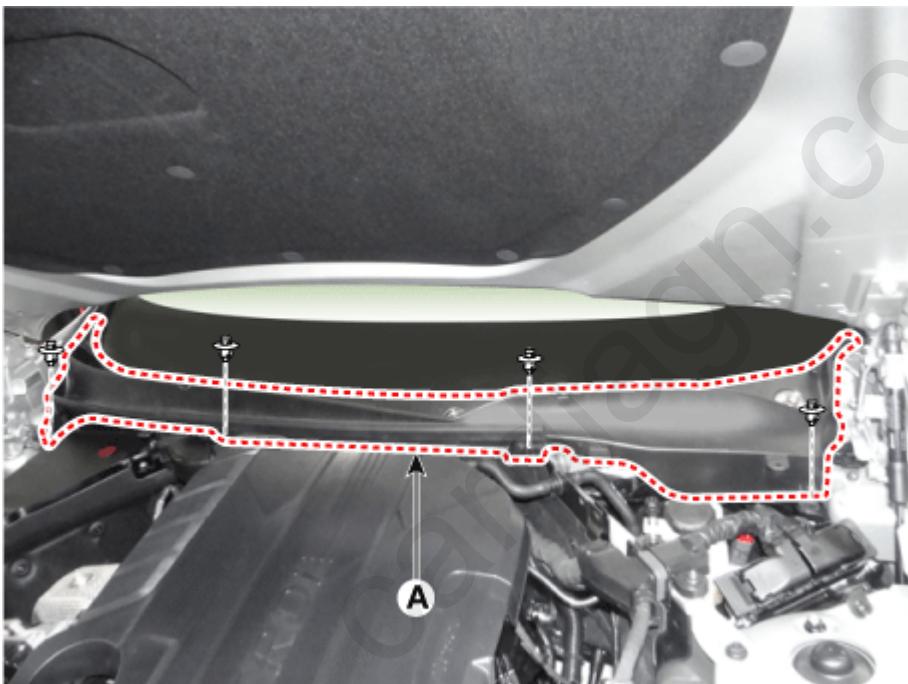

6. Install in the reverse order of removal.

 **Information**

Replace any damaged clips.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**