

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT


⚠ CAUTION

Put on gloves to protect your hands.

ℹ Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the crash pad side cover [RH] (A) by using a remover.

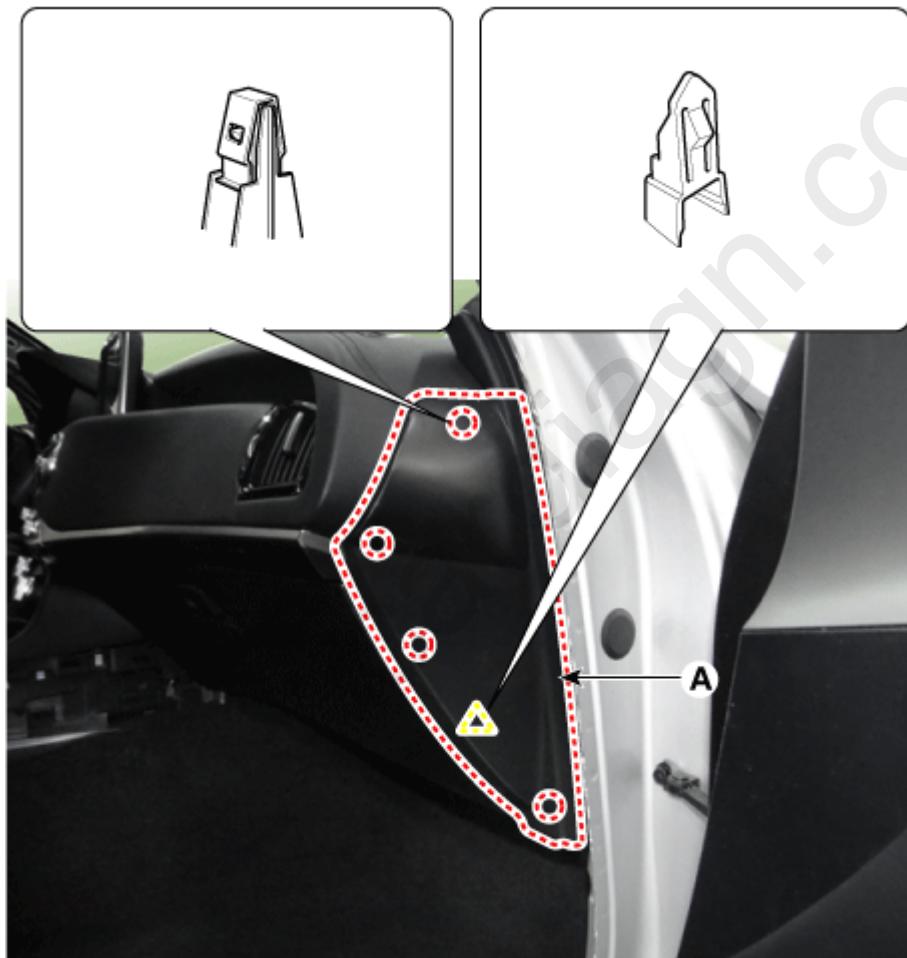


2. Remove the crash pad garnish [RH] (A) after loosening the mounting screws.




3. Pull out the both sides stopper (B) from the glove box (A).

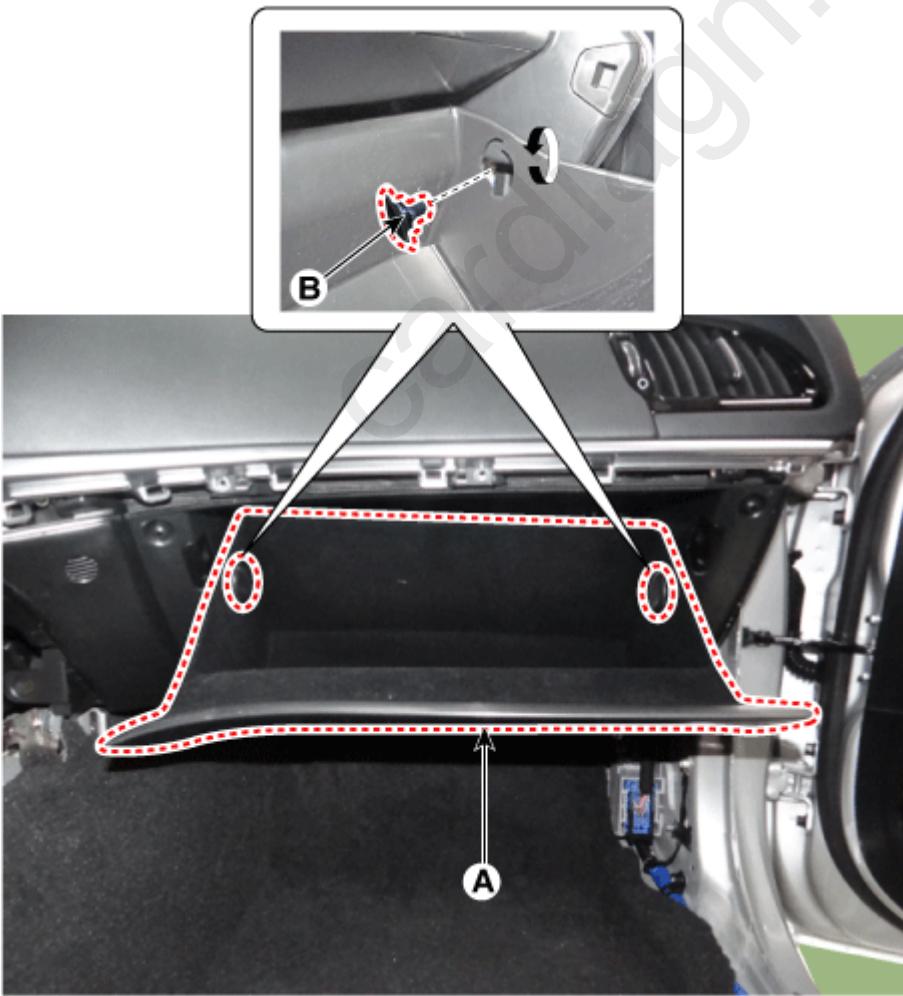


4. Remove the air damper (A) from the glove box (B).

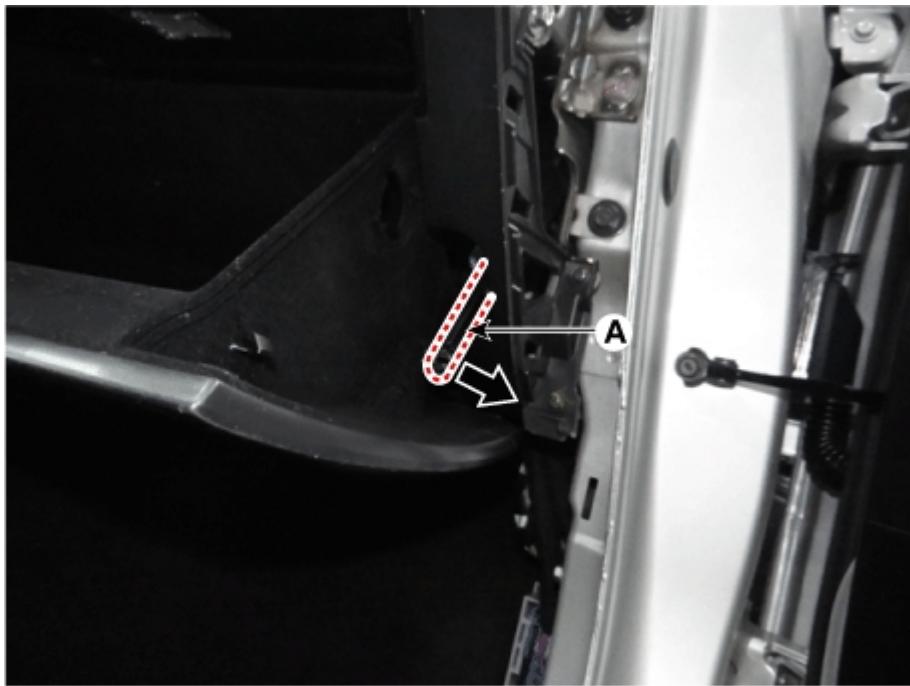


5. Remove the lock pins (A) and then remove the glove box (B).

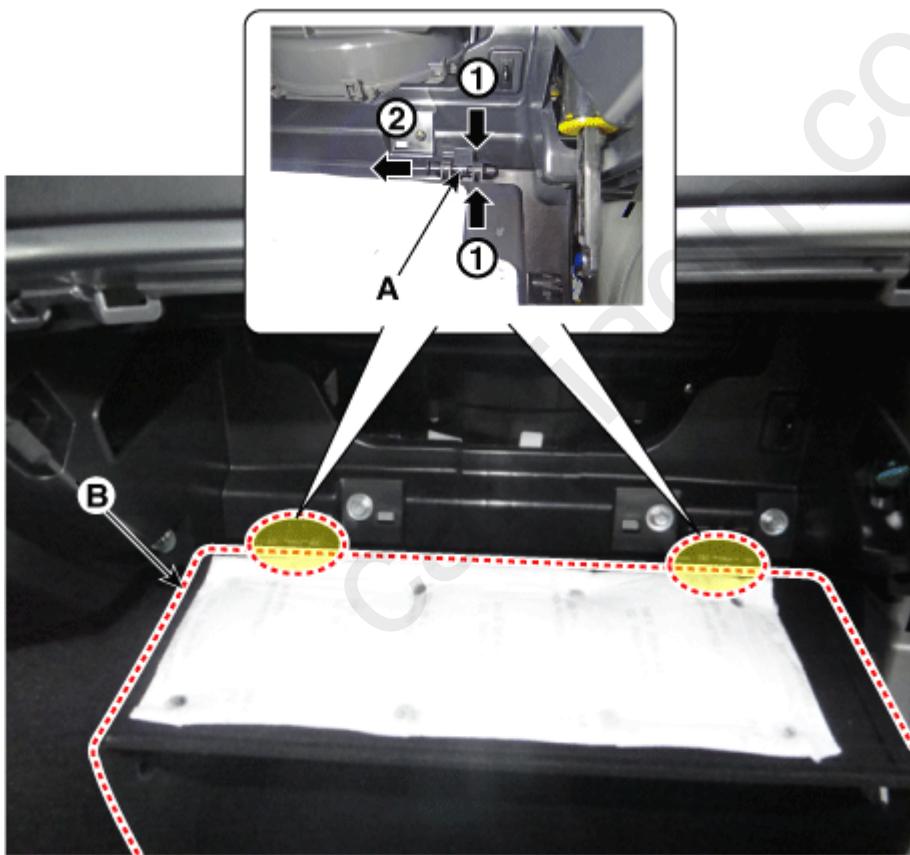


6. Separate the crash pad under cover [RH] (A).

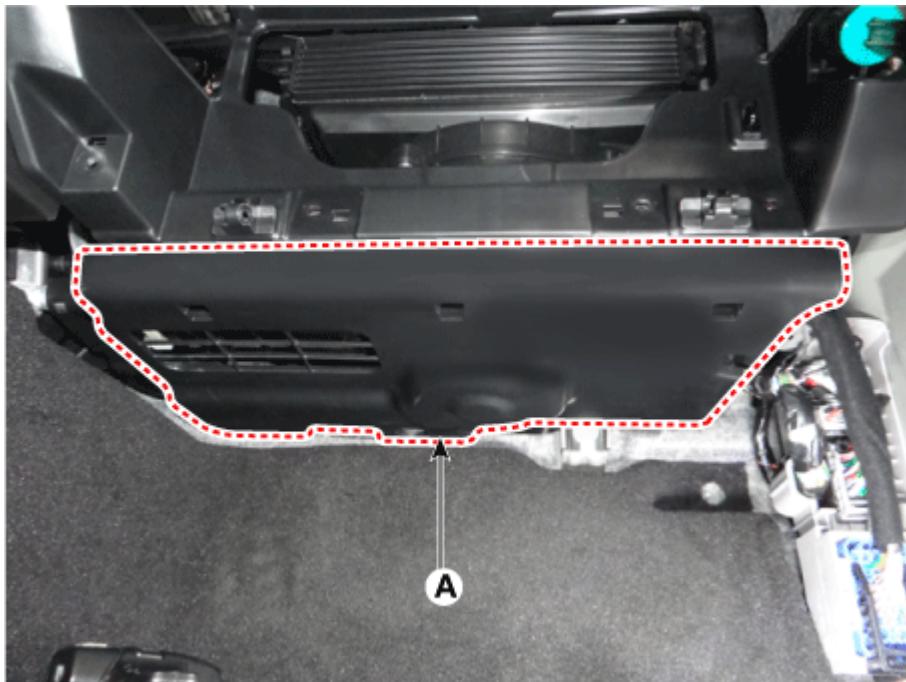


7. Disconnect the lamp connector (A) and remove crash pad under cover.

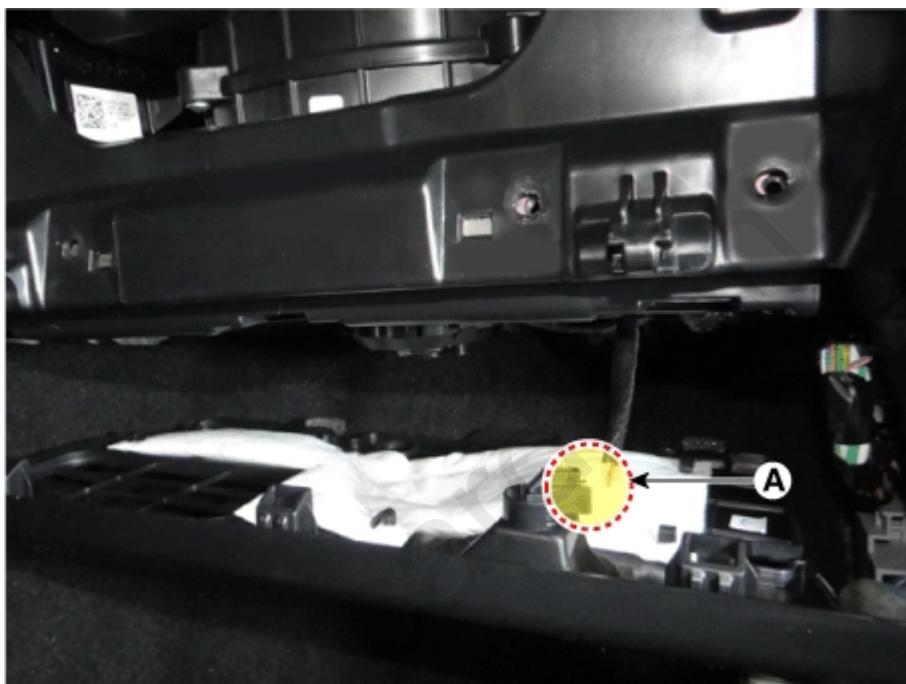


8. Separate the glove box housing (A) after loosening the mounting screws, bolts, and nuts.

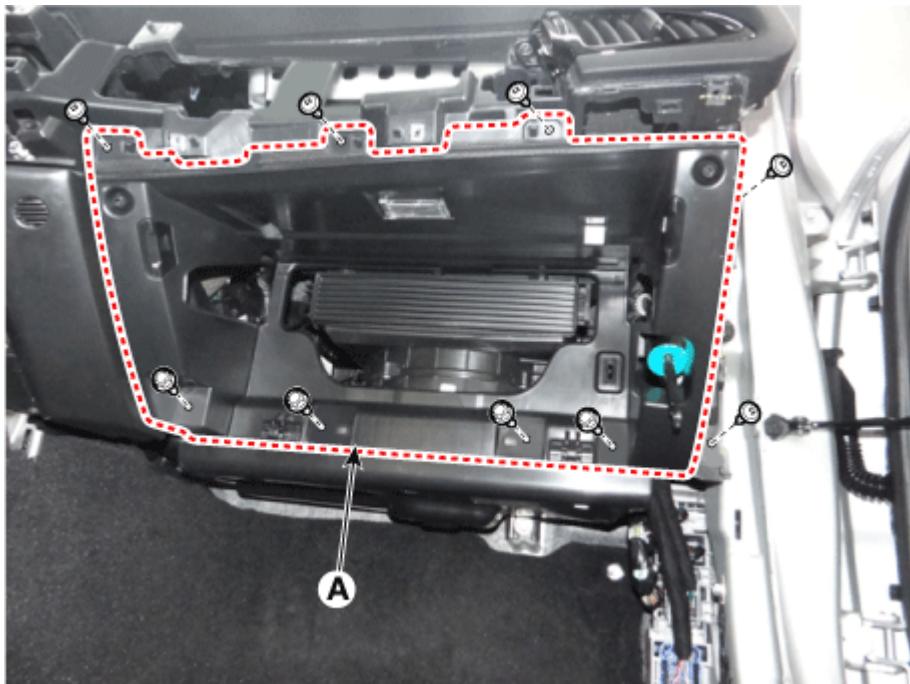

9. Remove the glove box housing after disconnecting the connector (A), (B).

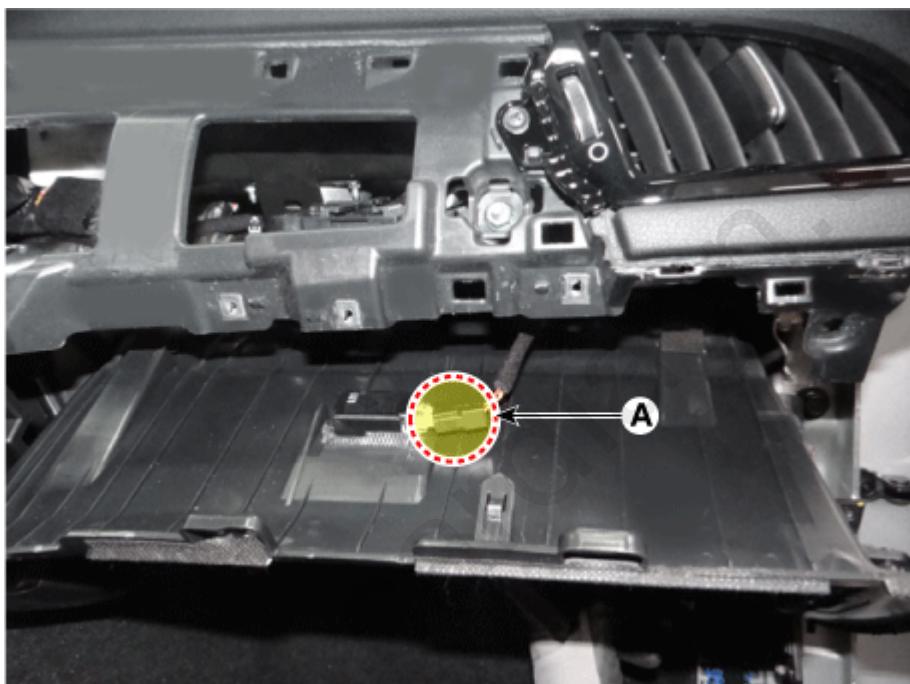

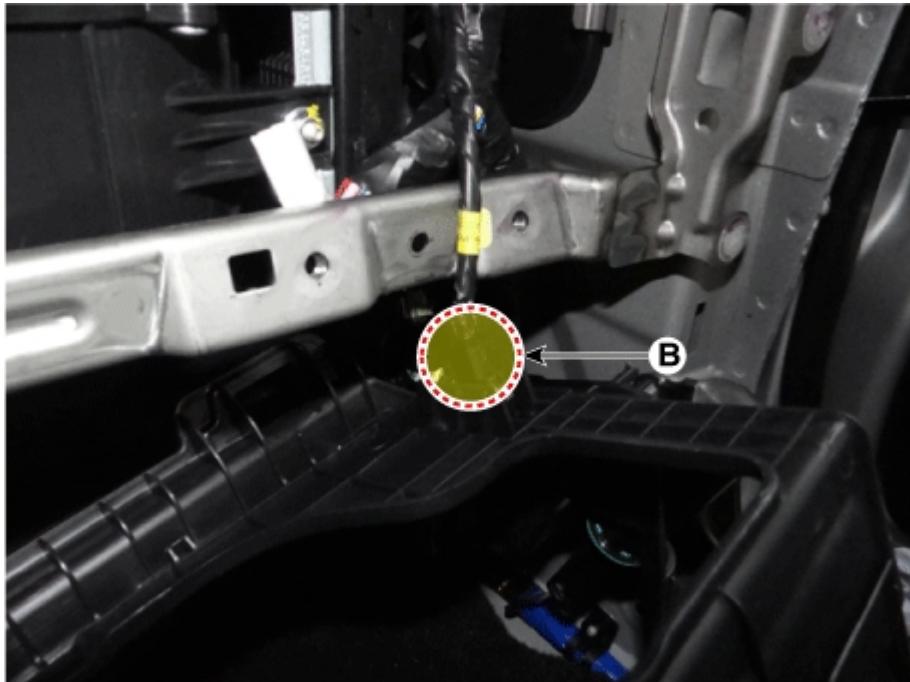

10. Install in the reverse order of removal.

 **Information**

- Make sure the connector are connected in properly.
- Replace any damaged clips.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.