

Please rate this document after reviewing at the bottom of this page.

## REPLACEMENT

### CAUTION

Put on gloves to protect your hands.


### NOTICE

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Loosen the radiator upper cover mounting clips and sides mounting bolts.




2. Loosen the engine room under cover mounting clips.

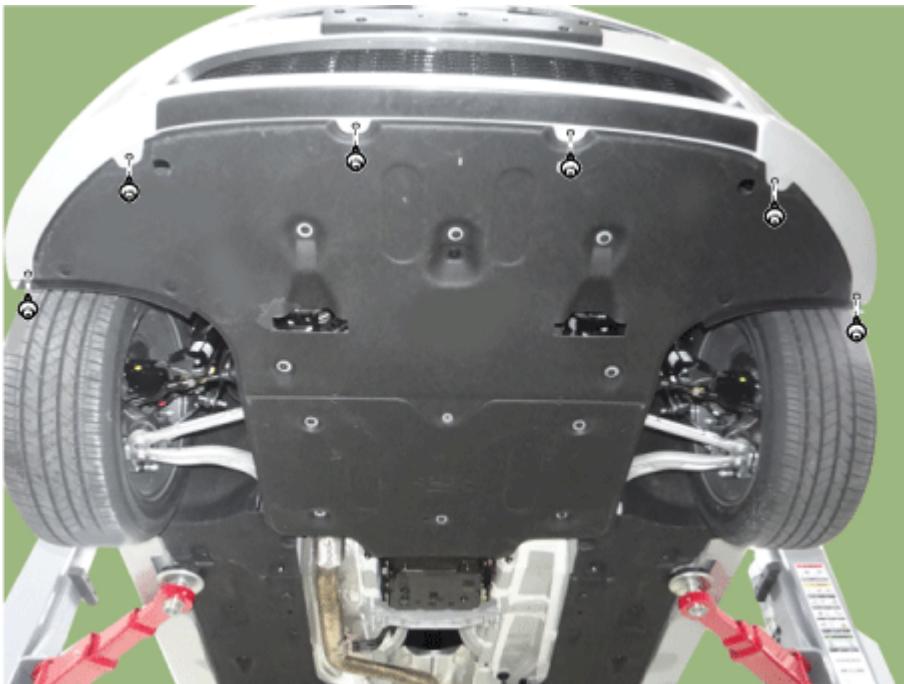

3. Separate the front bumper (A) after loosening the sides mounting clips and screws



4. Disconnect the front bumper main connector (A).

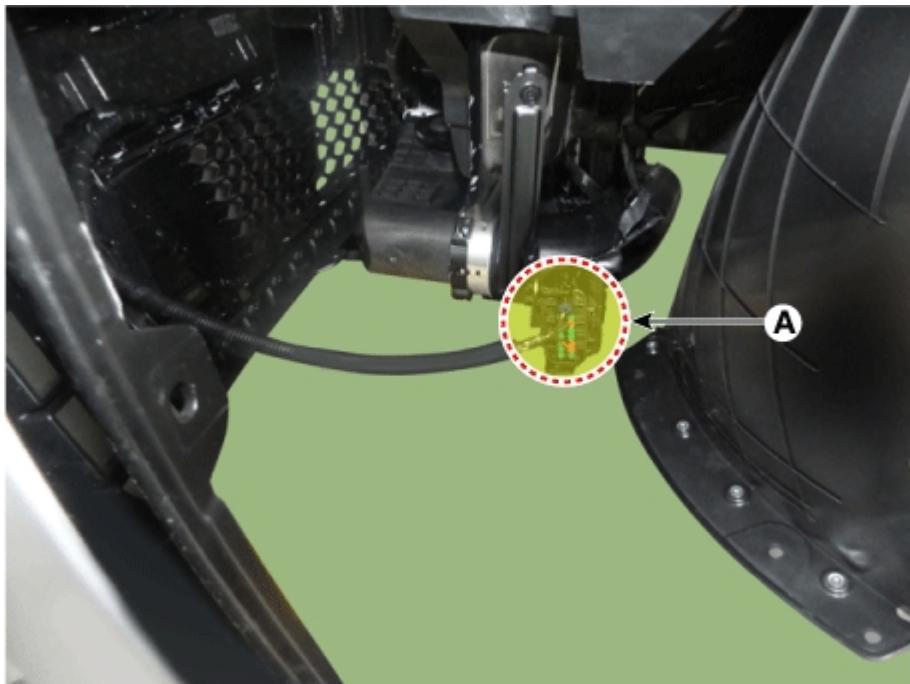

5. Remove the front bumper cover (A).



6. Install in the reverse order of removal.

 **Information**

- Make sure the connector are connected in properly.
- Replace any damaged clips.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**