

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT


CAUTION

Put on gloves to protect your hands.


NOTICE

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the front bumper assembly.
(Refer to Front Bumper - "Front Bumper Assembly")
2. Remove the mounting clip (A) and then remove the front bumper energy absorber (B).

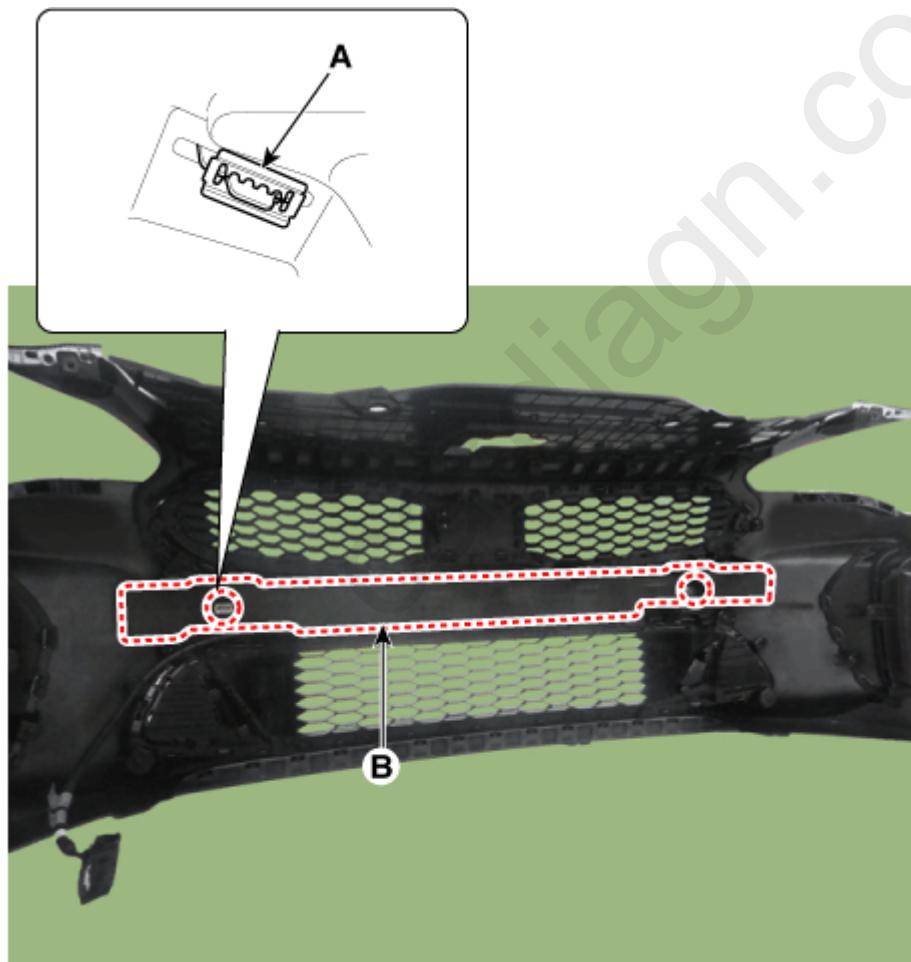


3. Remove the front bumper wiring (A).

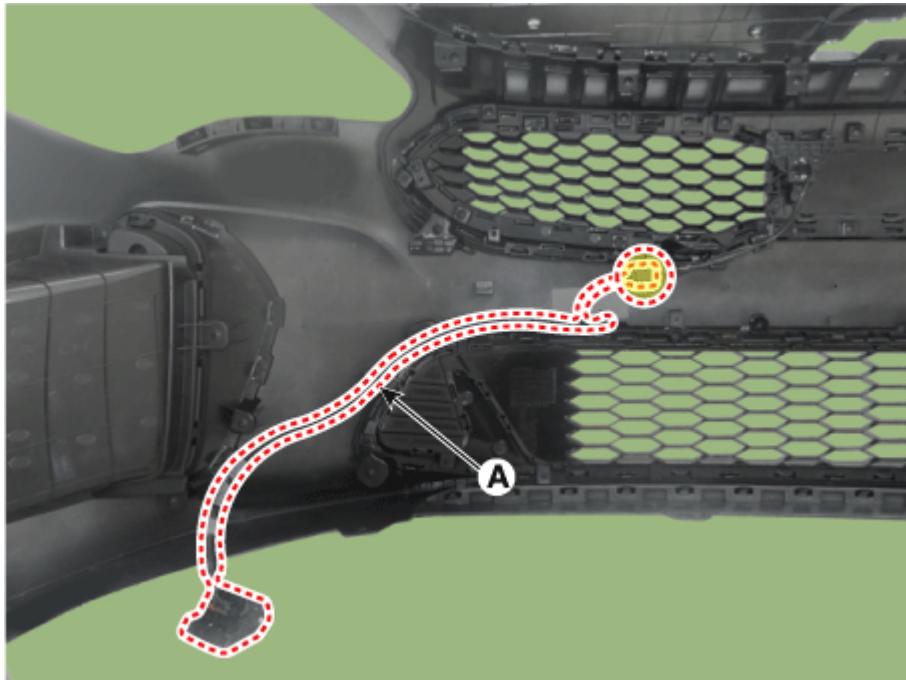


4. Remove the pанoscopic camera (A).

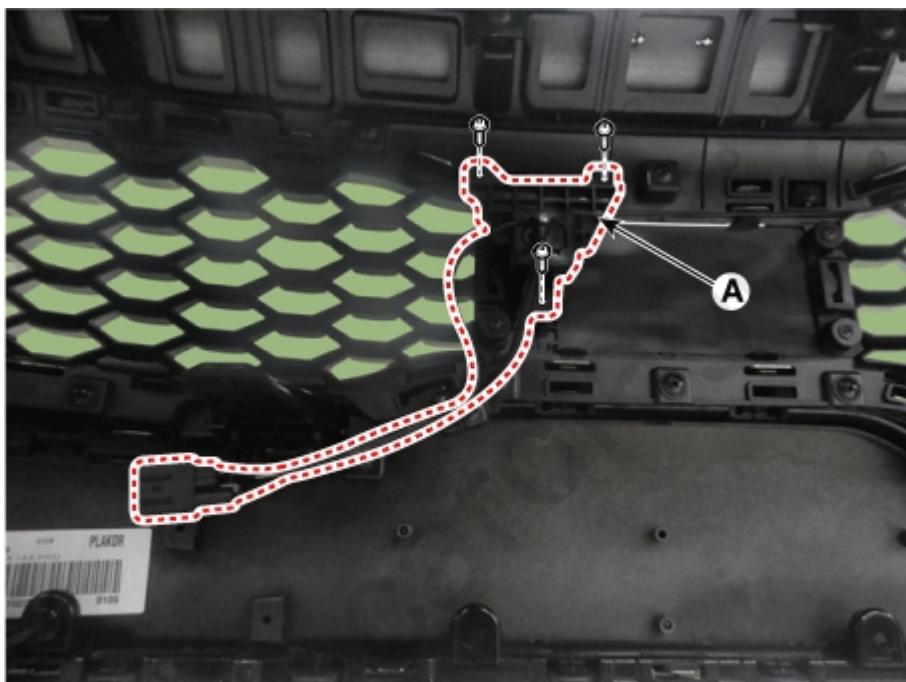

5. Remove the radiator upper cover (A) after loosening the screws.

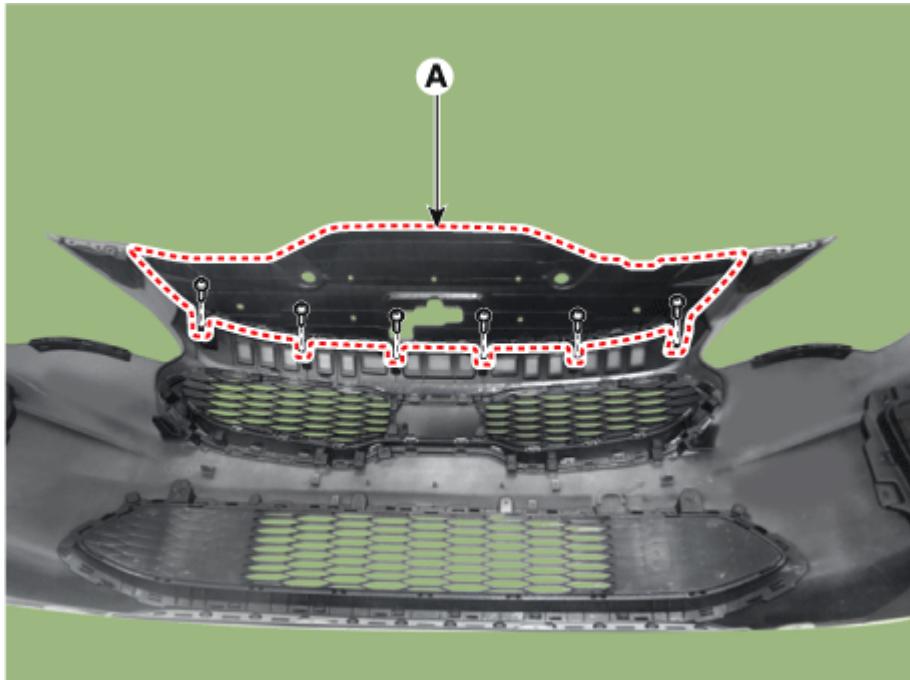

6. Remove the radiator grille (A) after loosening the screws.

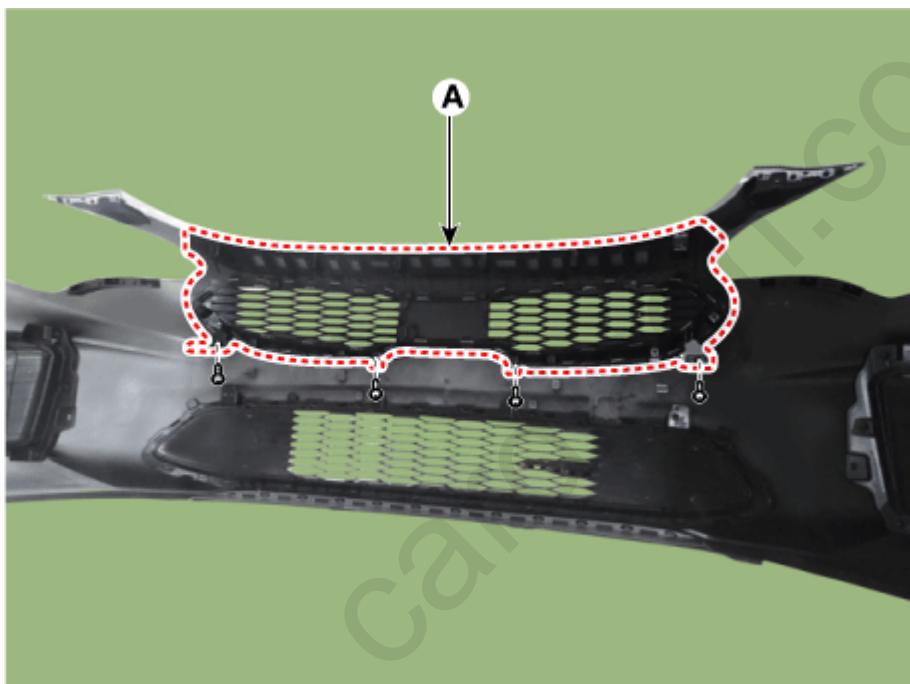



7. Install in the reverse order of removal.

 **Information**

Replace any damage clips.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.