

Please rate this document after reviewing at the bottom of this page.

FRONT DOOR MODULE


⚠ CAUTION

Put on gloves to protect your hands.

NOTICE

- When prying with a flat-tip screwdriver or using a prying trim tool, wrap protective tap around the tool and related parts to prevent damage.
- Be careful not to scratch the door trim and other parts.


1. Remove the front door window glass.
(Refer to Front Door - "Front Door Window Glass")
2. Remove the front door lock cover (A) and cap (B).

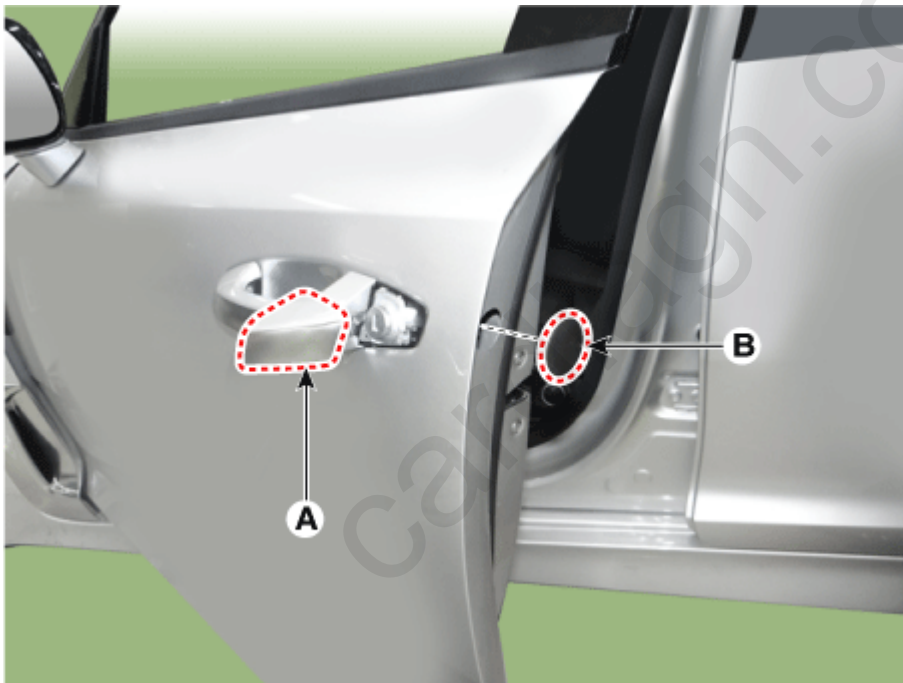


3. Remove the front door lock (A) after loosening the mounting bolt.

Tightening torque :

3.4 - 5.7 N·m (0.4 - 0.6 kgf·m, 2.9 - 4.3 lb·ft)

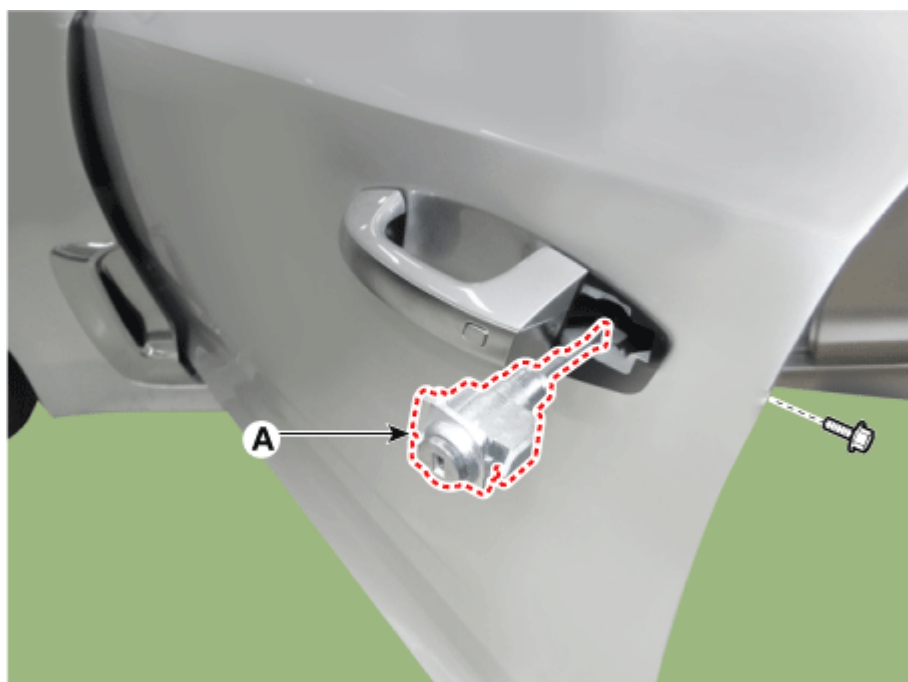


4. Remove the front door outside handle (A) by sliding it rearward.

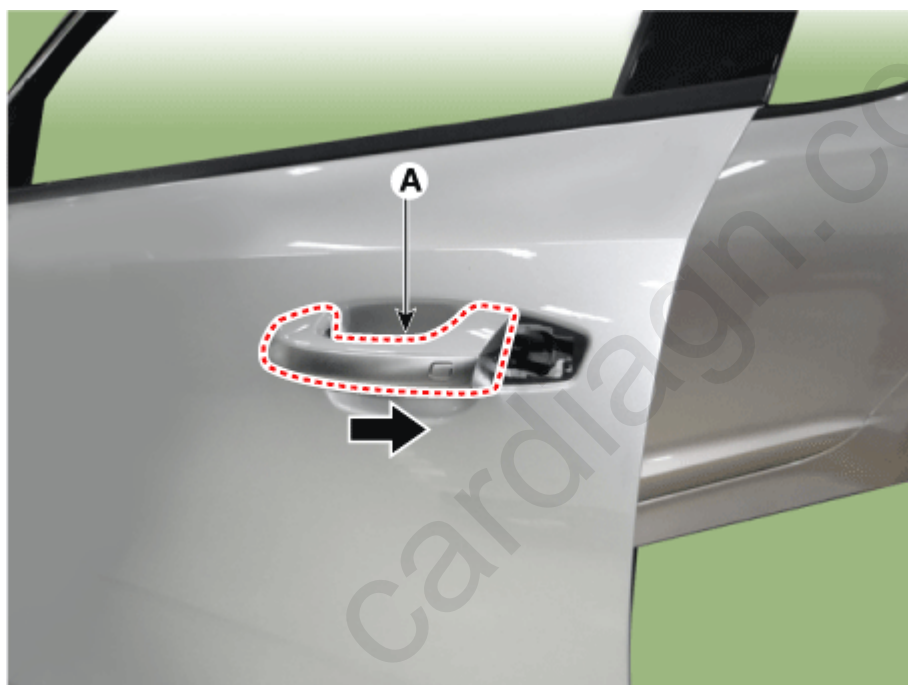

5. Disconnect the front door outside handle connector (A).



6. Remove the front door outside handle pad (A).

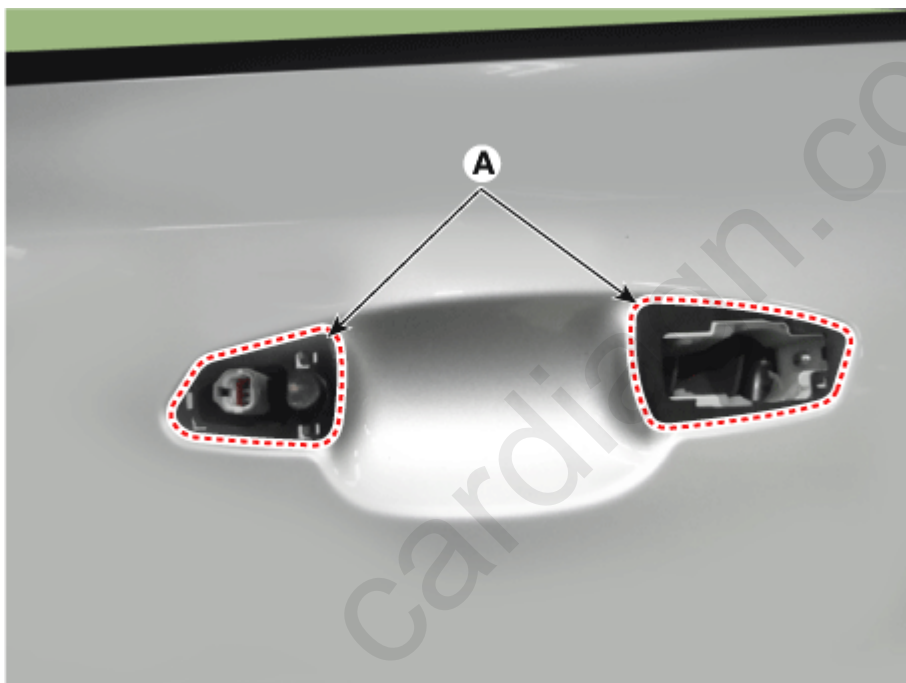


7. Loosen the front door outside handle base mounting screw (A).




8. Disconnect the outside rear view mirror connector (A).




9. Disconnect the front door main wiring connector (A).

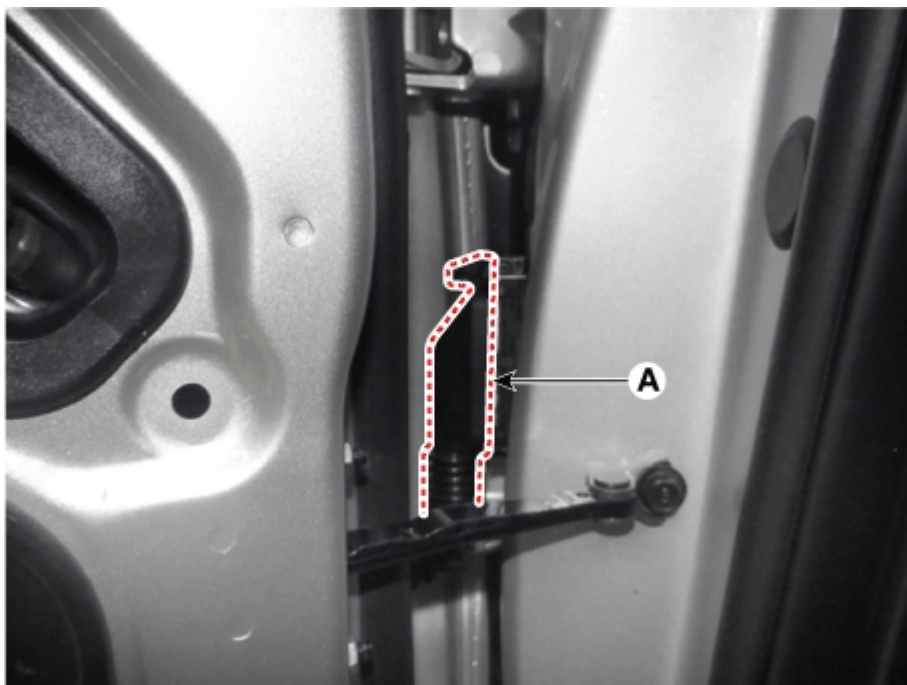


10. Loosen the front door latch mounting screws (A).

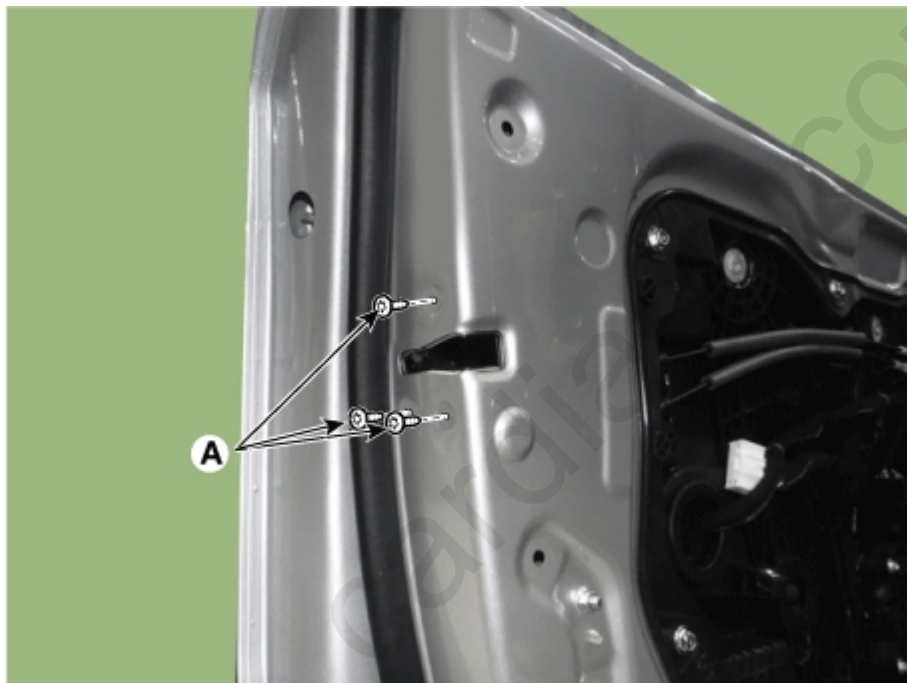


11. Remove the front door latch (A) after loosening the mounting bolts.

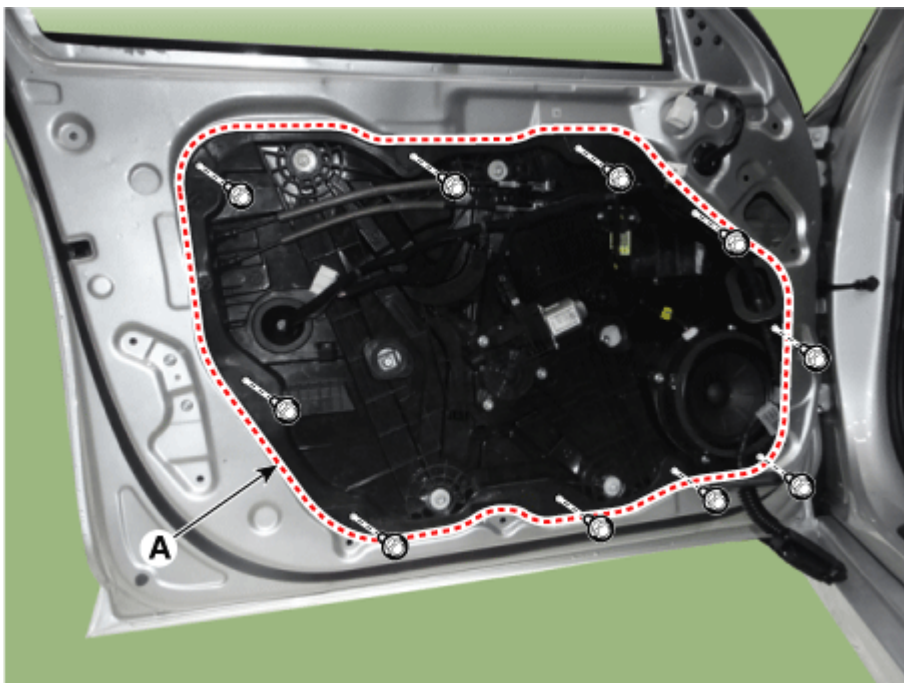


12. Remove the front door latch (B) after disconnecting the connector (A).

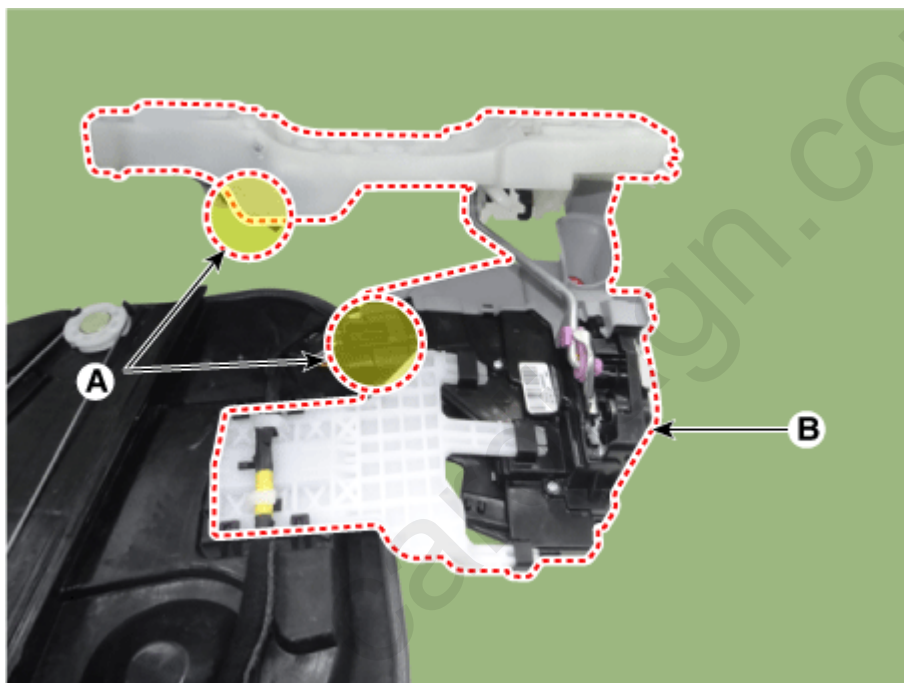


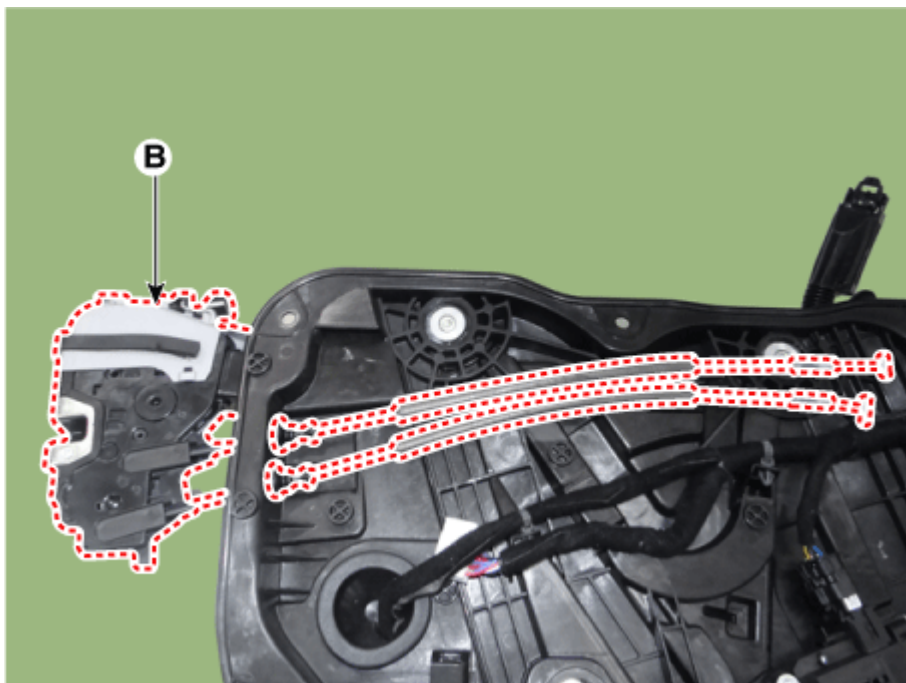

13. Remove the front door speaker (B) after disconnecting the connector (A).

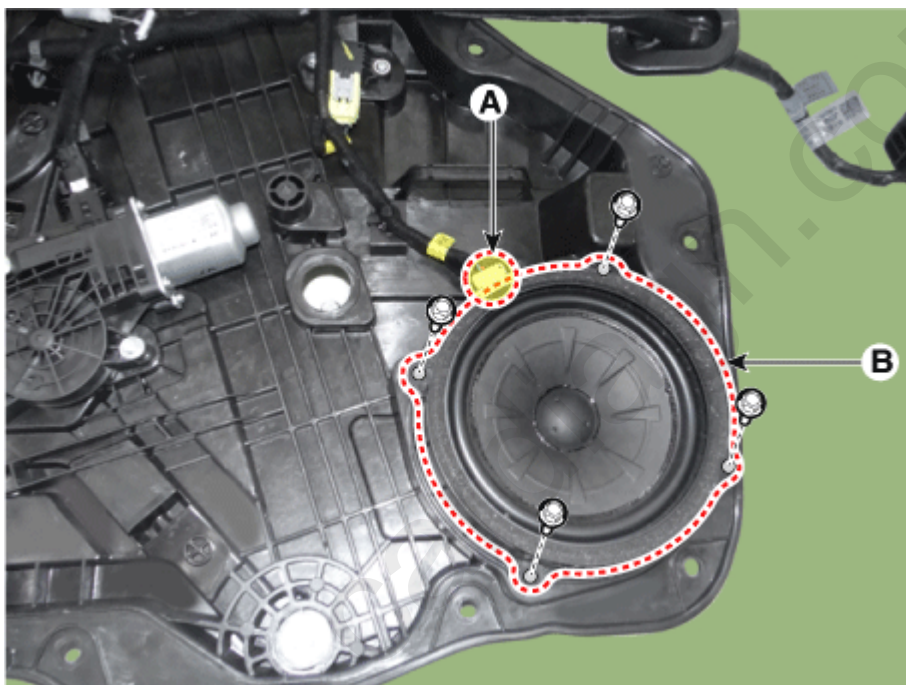

14. Remove the front door power window motor (B) after disconnecting the connector (A).

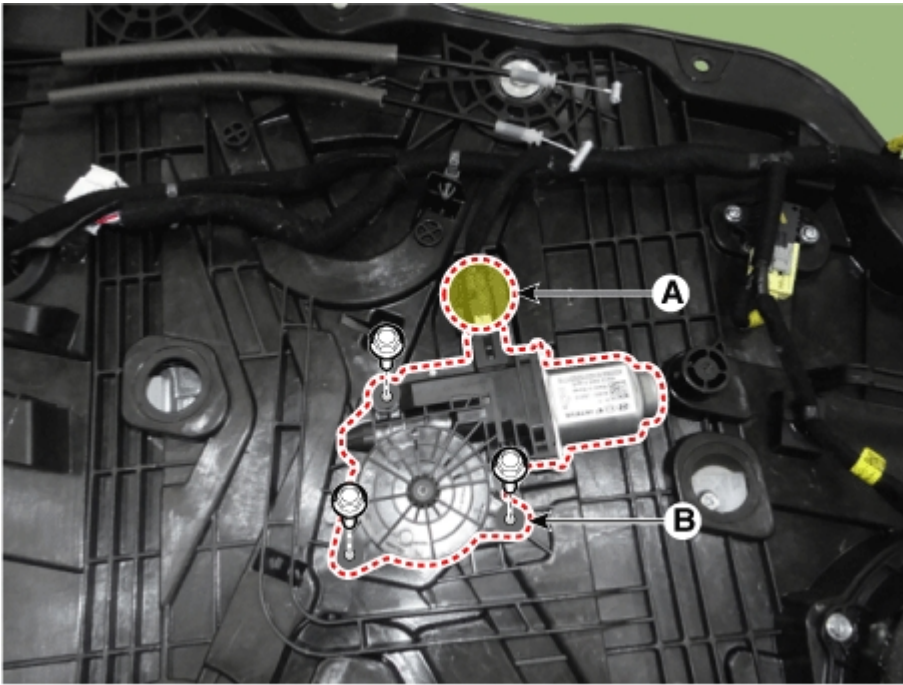

15. Disconnect the connectors and front door module wiring harness.

16. Install in the reverse order of removal.

i Information

- Check that glass operation is normal.
- Adjust glass if necessary.
- Make sure that the connector is connected properly.
- Make sure that the door locks/unlocks and opens/closes properly.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**