

Please rate this document after reviewing at the bottom of this page.

## REPLACEMENT


### CAUTION

Put on gloves to protect your hands.

### NOTICE

- When prying with a flat-tip screwdriver or using a prying trim tool, wrap protective tape around the tool and related parts to prevent damage.
- Be careful not to scratch the door trim and other parts.


1. Remove the front door lock cover (A) and cap (B).

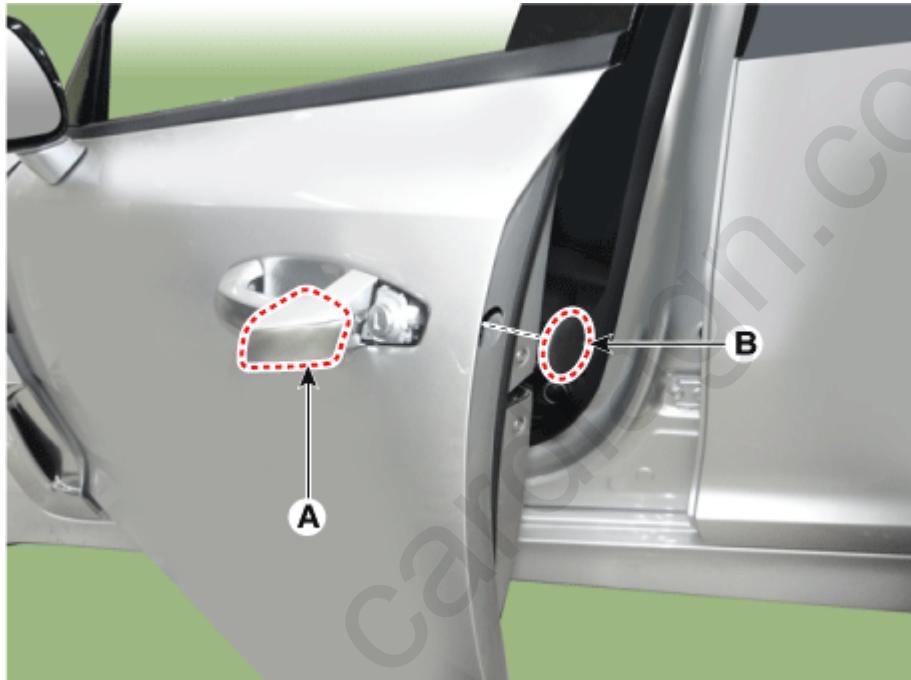

2. Remove the front door lock (A) after loosening the mounting bolt.

#### Tightening torque :

3.4 - 5.7 N·m (0.4 - 0.6 kgf·m, 2.9 - 4.3 lb·ft)

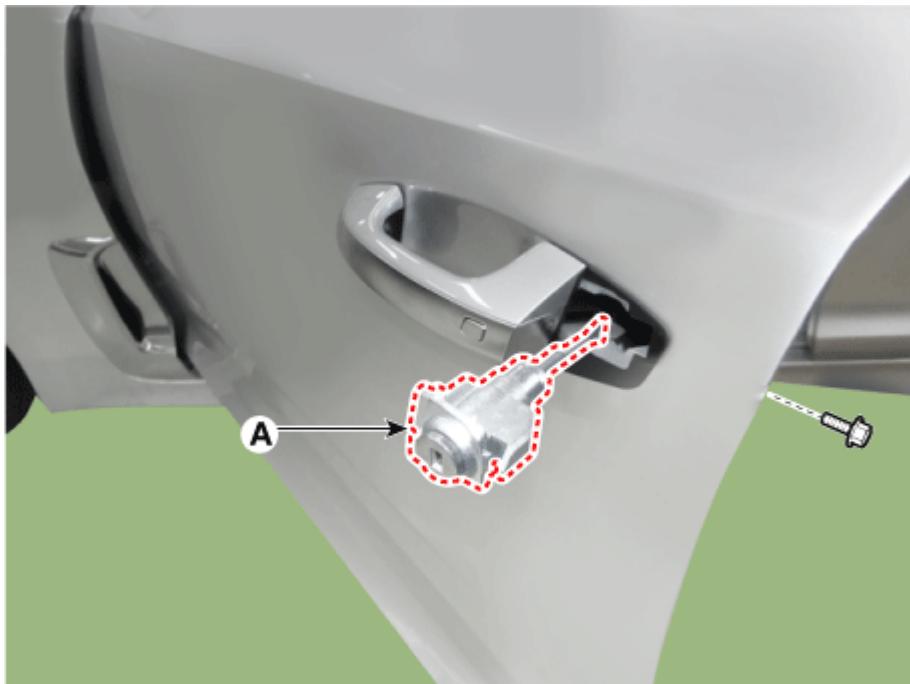

3. Remove the front door outside handle (A) by sliding it rearward.




4. Disconnect the front door outside handle connector (A).



5. Install in the reverse order of removal.

 **Information**

- Be sure to install the outside handle pad (A) between the outside handle and the door panel

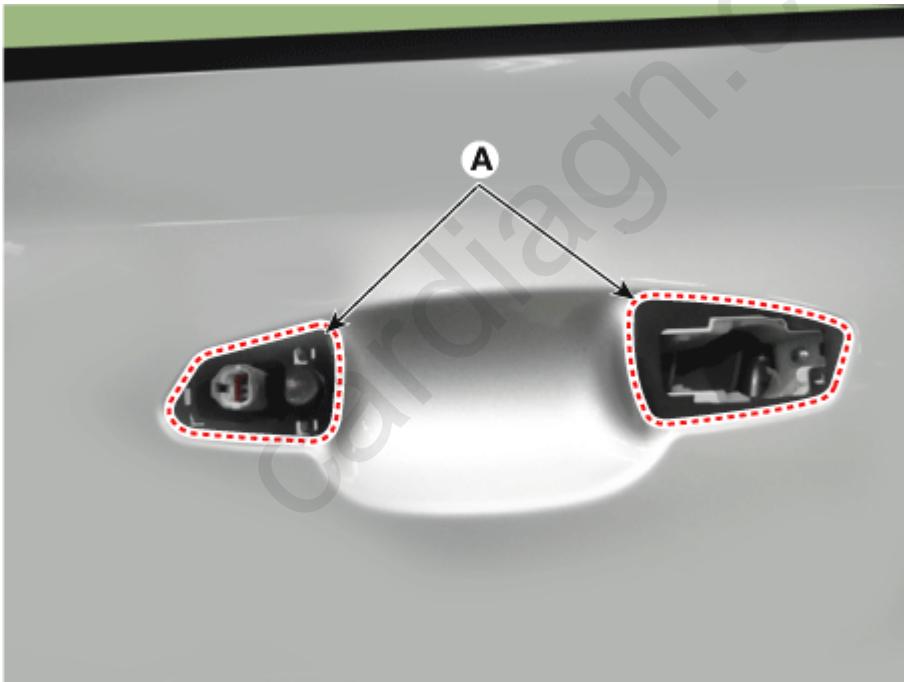

- Check that glass operation is normal.
- Adjust glass if necessary.
- Make sure that the connector is connected properly.
- Make sure that the door locks/unlocks and opens/closes properly.

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.