

Please rate this document after reviewing at the bottom of this page.

## REPLACEMENT


### CAUTION

- Put on gloves to protect your hands.
- Never attempt to measure the circuit resistance of the airbag module (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury

### NOTICE

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

- Remove the front seat back cover.  
[\(Refer to Front Seat - "Front Seat Back Cover"\)](#)
- Remove the front seat cushion cover.  
[\(Refer to Front Seat - "Front Seat Cushion Cover"\)](#)
- Remove the lumbar support assembly.  
[\(Refer to Body Electrical System - "Lumbar Support Unit"\)](#)
- After loosening the mounting bolts, disconnect the front seat back frame assembly (A) and front seat cushion frame assembly (B).

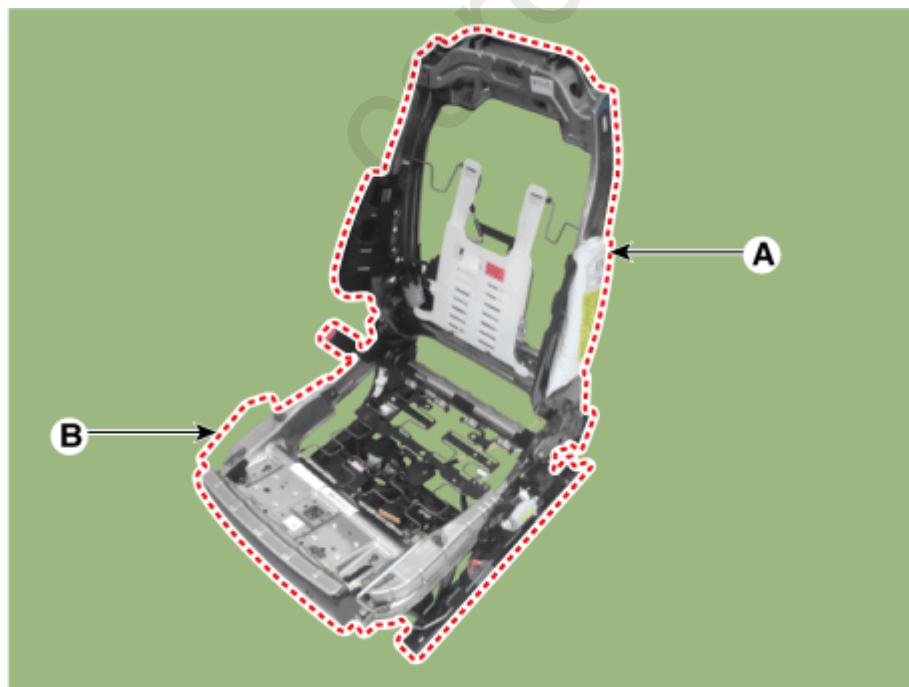

- Install in the reverse order of removal.

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.