


Please rate this document after reviewing at the bottom of this page.

REPLACEMENT


NOTICE

When installing the belt, be careful not to damage the retractor.

1. Remove the center pillar trim.
(Refer to Interior Trim - "Center Pillar Trim")
2. Separate the front seat belt upper anchor (A) after loosening the mounting bolt.
Tightening torque :
39.2 - 53.9 N·m (4.0 - 5.5 Kgf·m, 28.8 - 39.8 lb·ft)

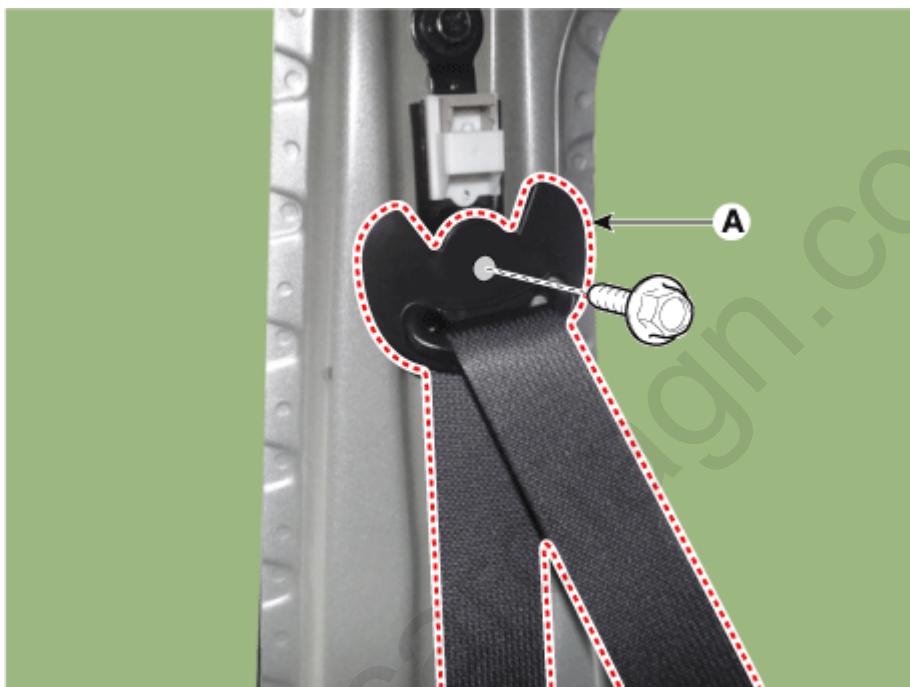

3. Disconnect the front seat belt retractor connector (A).

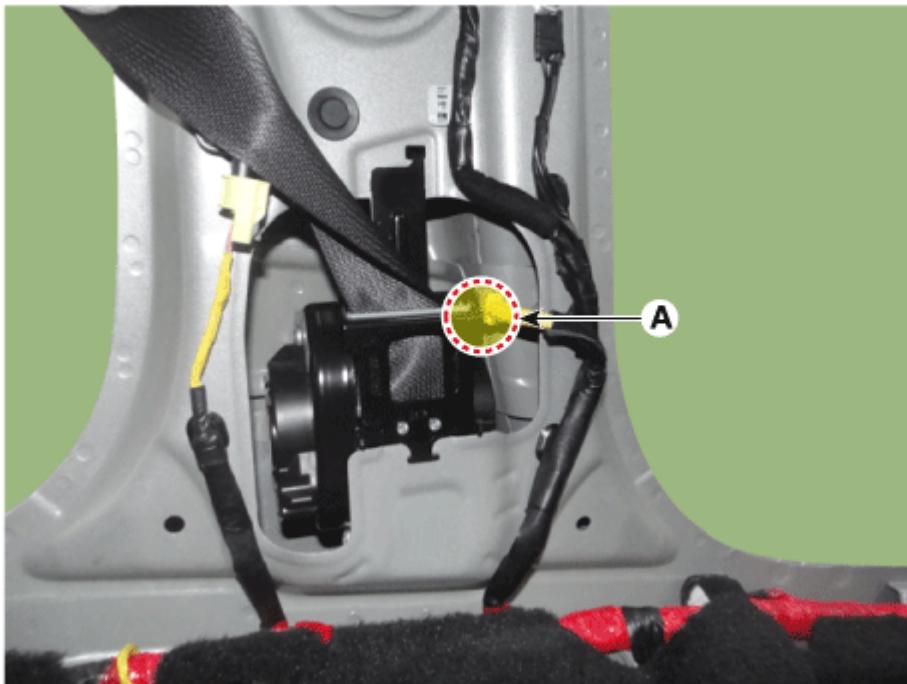


4. Remove the front seat belt retractor (A) after loosening the mounting bolt.

Tightening torque :

Lower : 39.2 - 53.9 N·m (4.0 - 5.5 Kgf·m, 28.8 - 39.8 lb·ft)

Upper : 7.8 - 11.8 N·m (0.8 - 1.2 Kgf·m, 5.8 - 8.7 lb·ft)

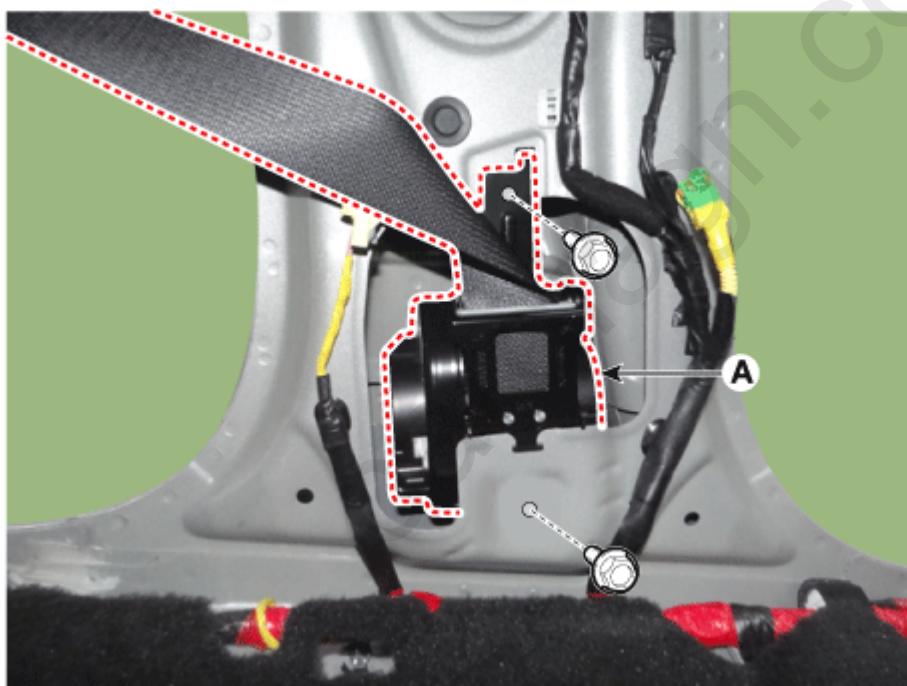

5. Install in the reverse order of removal.

Information

- Make sure that the connector is plugged in properly.
- Replace any damaged clips.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.