


Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

1. Remove the front seat belt upper anchor.
(Refer to Front Seat Belt - "Front Seat Belt Retractor")
2. After loosening the mounting bolts, remove the height adjuster (A).

Tightening torque :

39.2 - 53.9 N·m (4.0 - 5.5Kgf·m, 28.9 - 39.8 lb·ft)

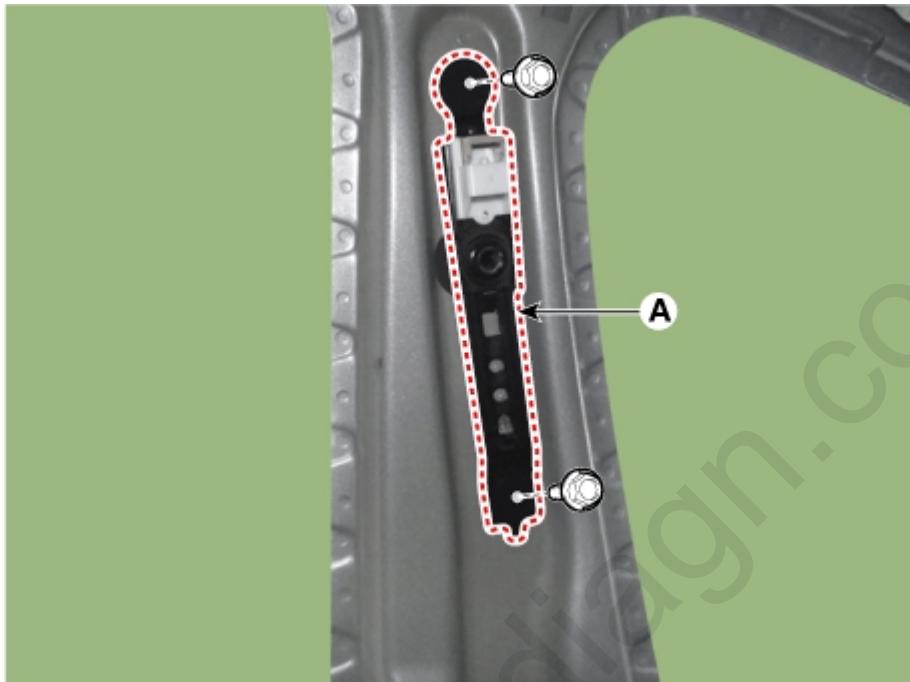

3. Install in the reverse order of removal.

Information

Replace any damaged clips.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**