


Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

1. Remove the front seat assembly.
(Refer to Front Seat - "Front Seat Assembly")
2. Remove the front seat belt buckle (A) after loosening the mounting bolt.

Tightening torque :

39.2 - 53.9 N·m (4.0 - 5.5 Kgf·m, 28.9 - 39.8 lb·ft)

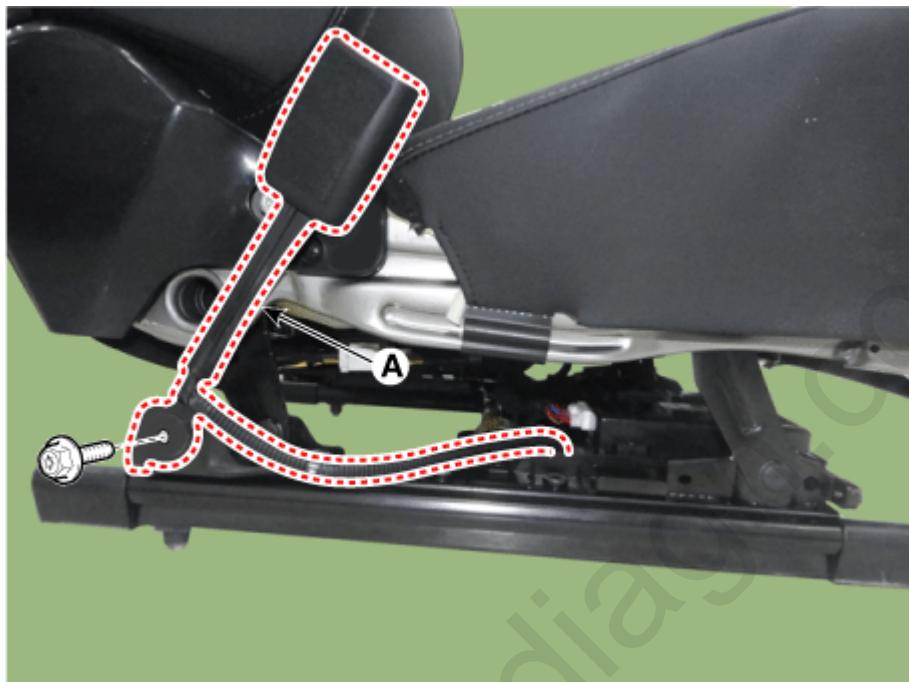

3. Install in the reverse order of removal.

 **Information**

- Make sure that the connector is plugged in properly.
- Replace any damaged clips.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.