

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

⚠ CAUTION

Put on gloves to protect your hands.

ℹ Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Open the fuel filler door cap (A).



2. Remove the fuel filler door parking (A) after loosening mounting screws.



3. Remove the fuel filler door fixing pin (A).




4. Separate the filler neck (A) after loosening the mounting nuts.



5. After loosening the mounting bolts, remove the fuel filler door (A).

 **Information**

Pull out from inside of the packing part when removing the fuel filler door housing.

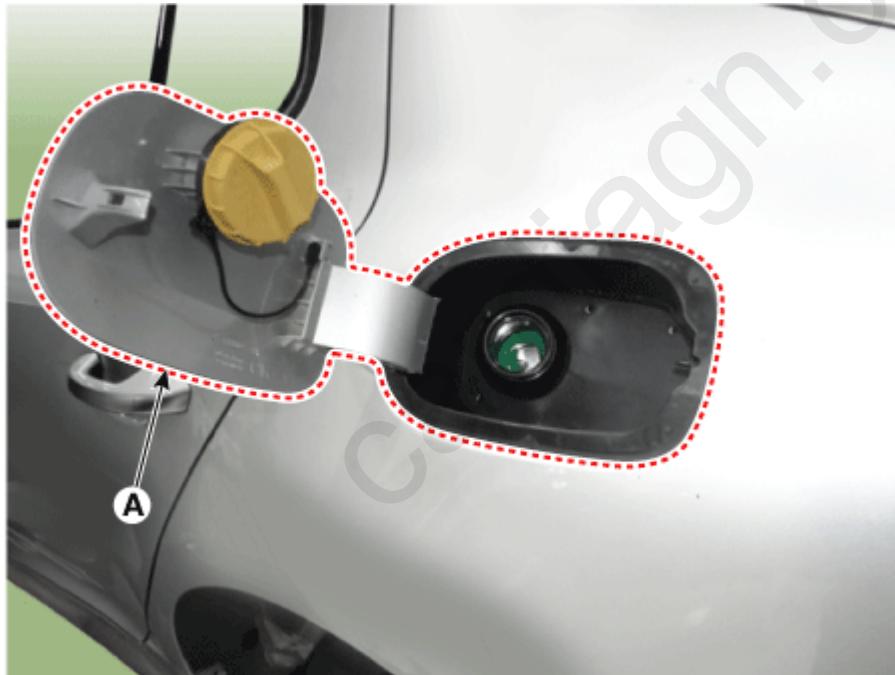

6. Install in the reverse order of removal.

 **Information**

- Make sure that the fuel filler door locks/unlocks and opens/closes properly.
- Replace any damaged clips.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.