

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

NOTICE

Be careful not to damage the hood and body.

Information

When removing and installing the hood, work in a group of two or more.

1. After loosening the hood hinge (A) mounting bolts, remove the hood assembly (B).

Tightening torque :

21.6 - 26.5 N·m (2.2 - 2.7 Kgf·m, 15.9 - 19.5 lb·ft)



2. Install in the reverse order of removal.

Information

- Make sure that the hood locks/unlocks and opens/closes properly.
- Adjust the hood alignment.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**