


Please rate this document after reviewing at the bottom of this page.

## REPLACEMENT

1. Detach the clip and then remove the hood seal weatherstrip (A).

### NOTICE

Be careful not to scratch the hood seal weatherstrip.

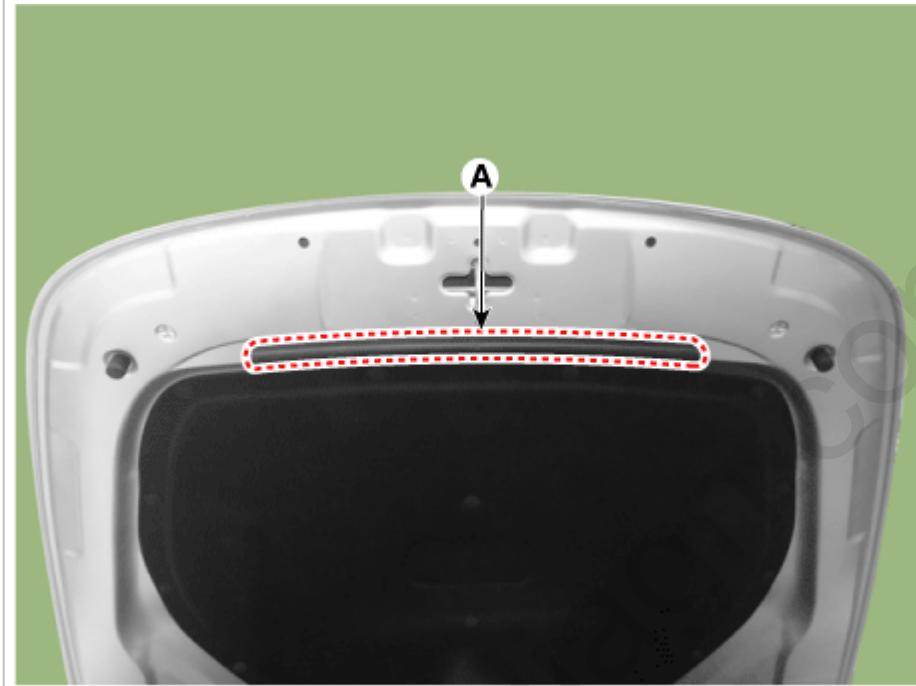

2. Install in the reverse order of removal.

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.