

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

Information

- When removing and installing the hood lifter, work in a group of two or more.
- When removing the hood lifter, first remove the lower portion and then upper portion.

1. Using a screwdriver, lift the socket clips (A) up slightly on both ends of the lifter (B), and then remove the lifter from the bracket.



2. Push the socket of the lifter into the bracket for installation.

Information

Make sure that the hood locks/unlocks and opens/closes properly.

* Thanks for your cooperation for the more quality. Please surely rate this document before

English

cardiagn.com