



Please rate this document after reviewing at the bottom of this page.

REPLACEMENT


1. Remove the front bumper.
[\(Refer to Front bumper - "Front bumper Assembly"\)](#)
2. Remove the hood latch assembly (A) after loosening the mounting screw.

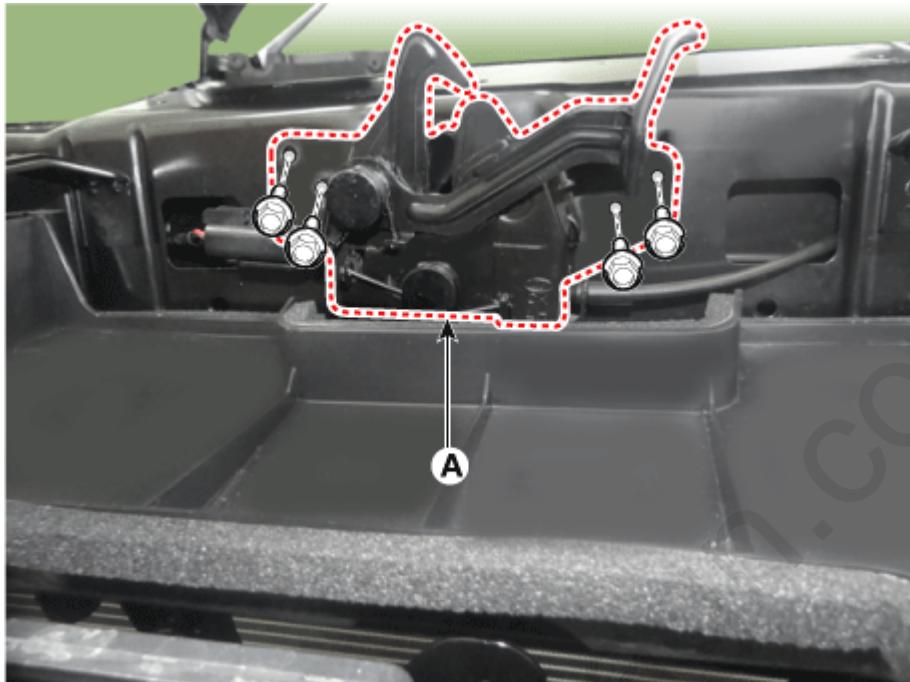

3. Disconnect the hood latch cable (A).

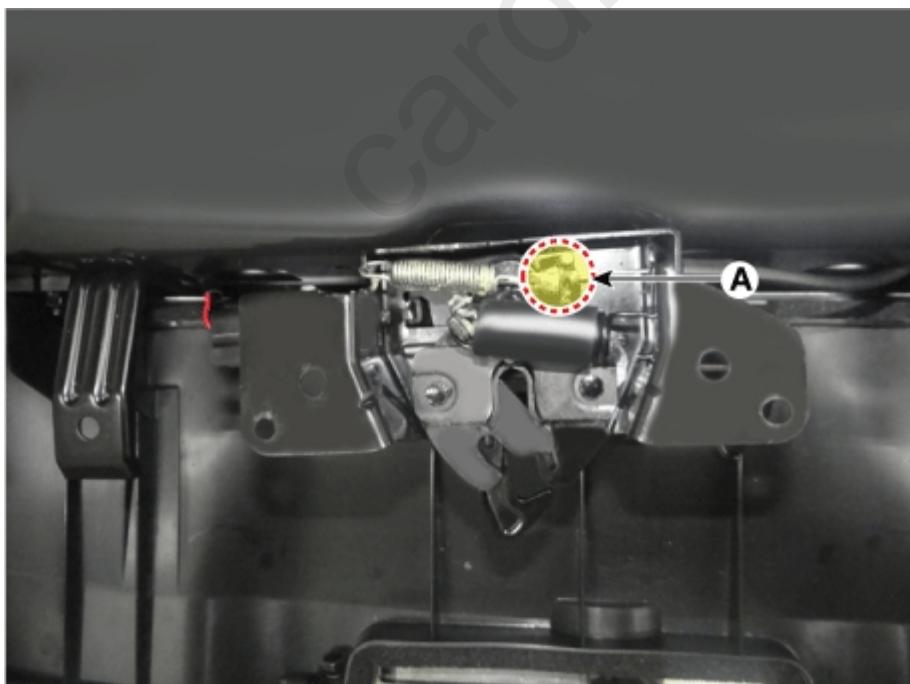

4. Disconnect the hood latch connector (A) after loosening the mounting screw.

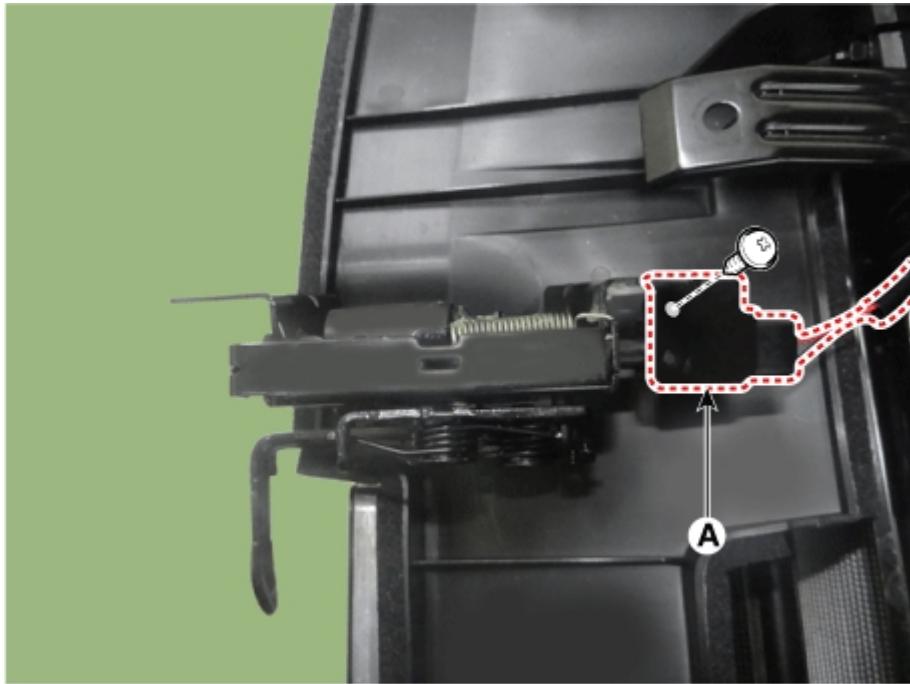

5. Install in the reverse order of removal.

Information

- Make sure that the hood latch release cable is connected properly.
- Make sure that the hood locks/unlocks and opens/closes properly.
- Adjust the latch alignment.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.