

Please rate this document after reviewing at the bottom of this page.

## REPLACEMENT

### CAUTION


Put on gloves to protect your hands.

### Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

### [Front Door Scuff Trim]

1. Remove the front door scuff trim (A) by using a remover.

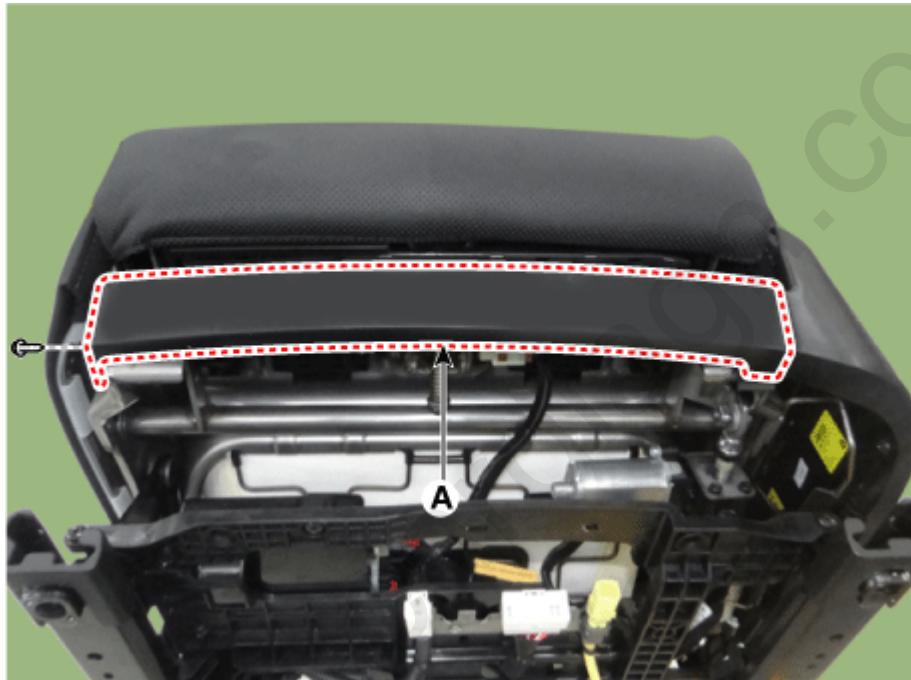


2. Install in the reverse order of removal.

### Information


Replace any damage clips.

### [Rear Door Scuff Trim]

1. Separate the rear seat cushion (A) after loosening the mounting bolts.

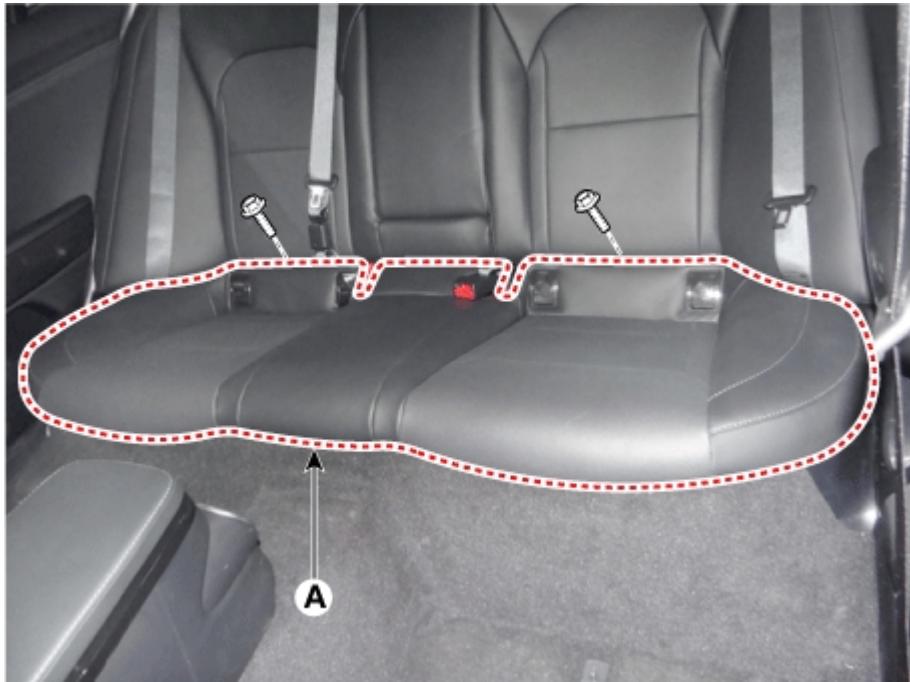


2. Remove the rear seat cushion after disconnecting the heater connector (A).

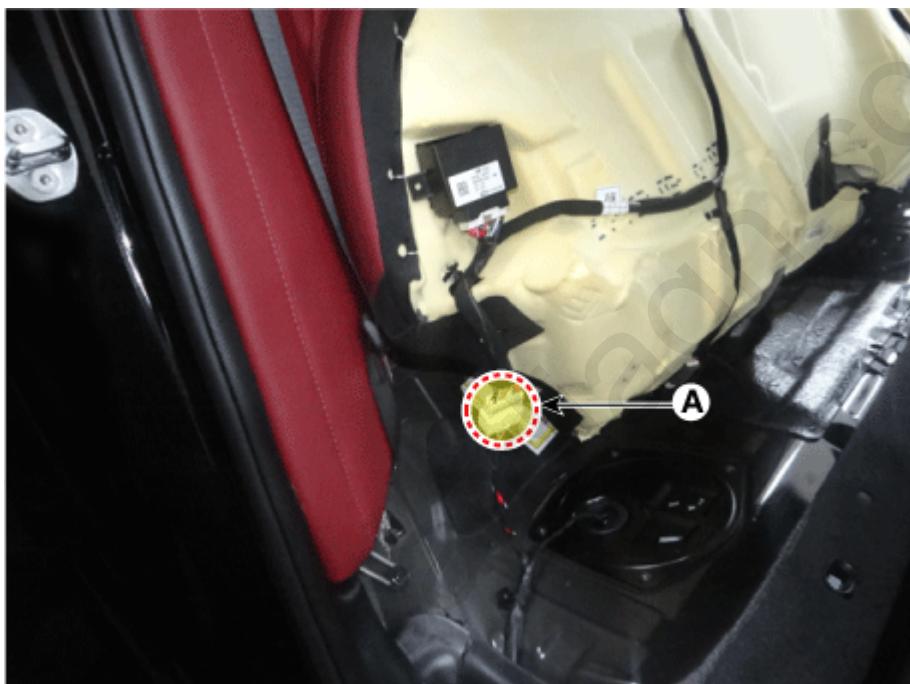

3. Remove the rear back side seat (A) by pulling it up after loosening the mounting bolts.



4. Remove the rear door scuff trim (A) after removing the mounting clip.

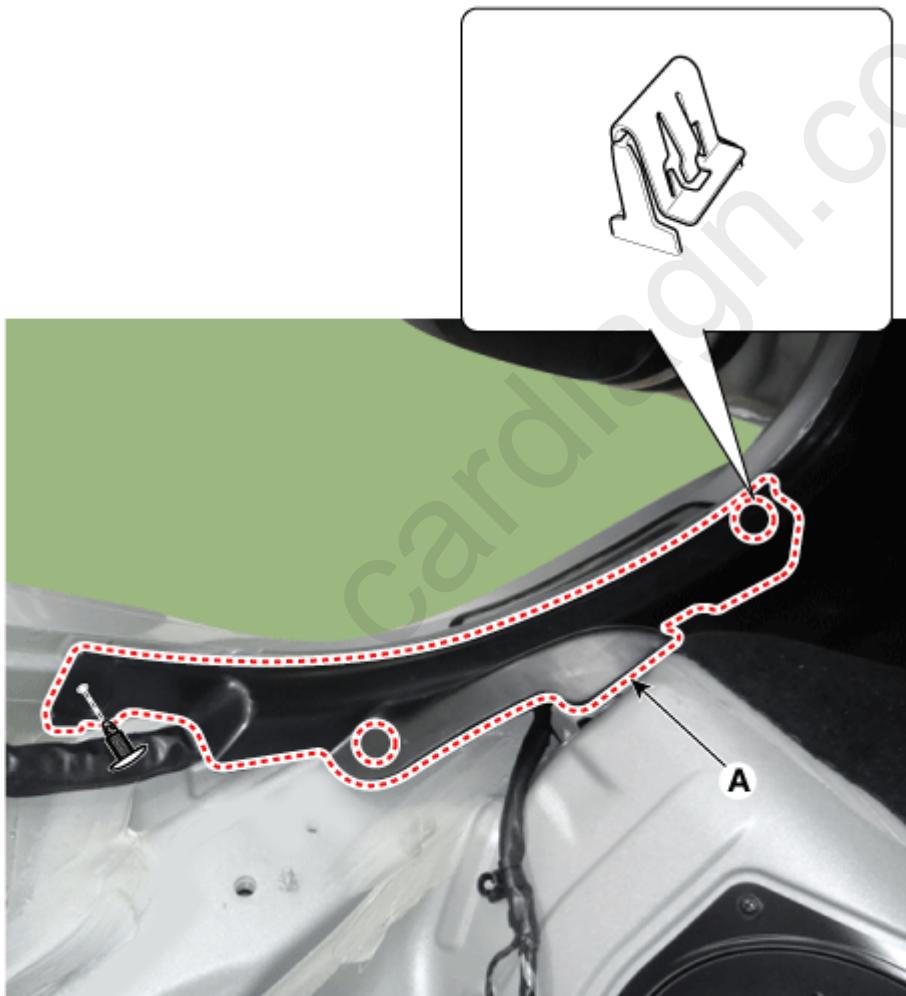

5. Install in the reverse order of removal.

 **Information**

Replace any damage clips.