

Please rate this document after reviewing at the bottom of this page.

## REPLACEMENT


### CAUTION

Put on gloves to protect your hands.


### Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the front door scuff trim (A) by using a remover.

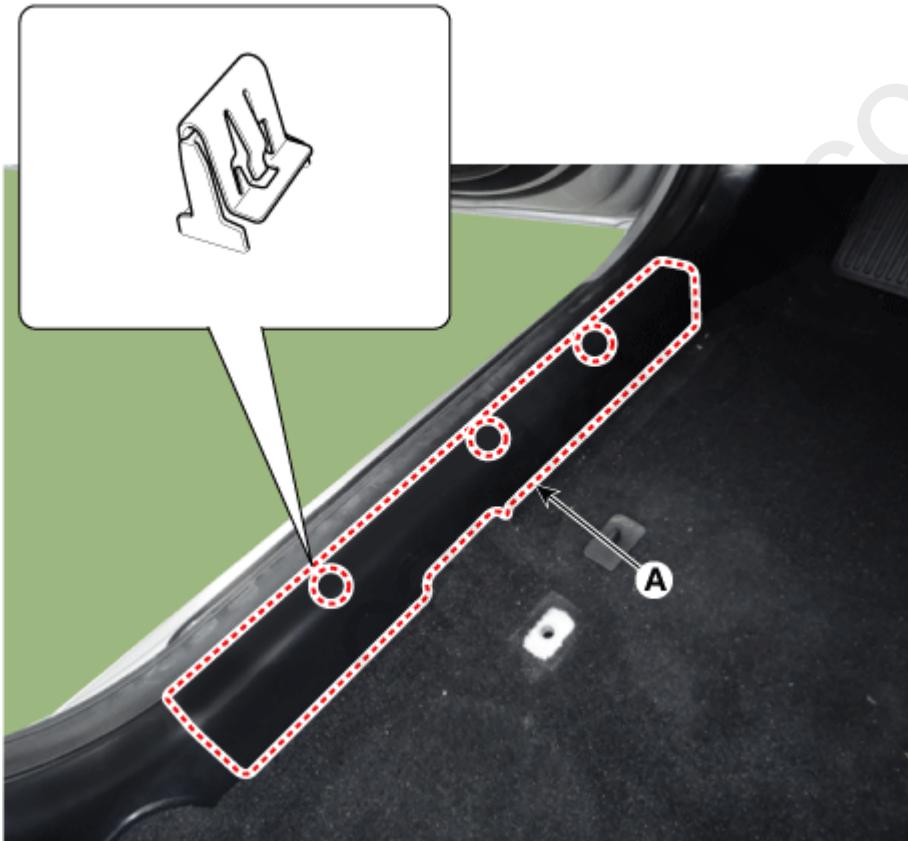

2. Separate the rear seat cushion (A) after loosening the mounting bolts.

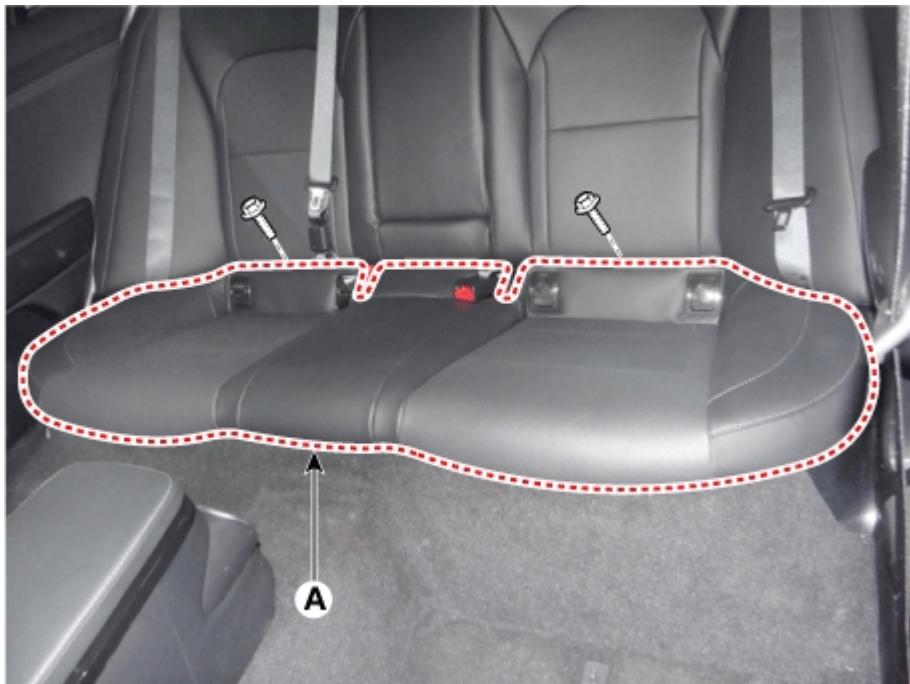



3. Remove the rear seat cushion after disconnecting the heater connector (A).

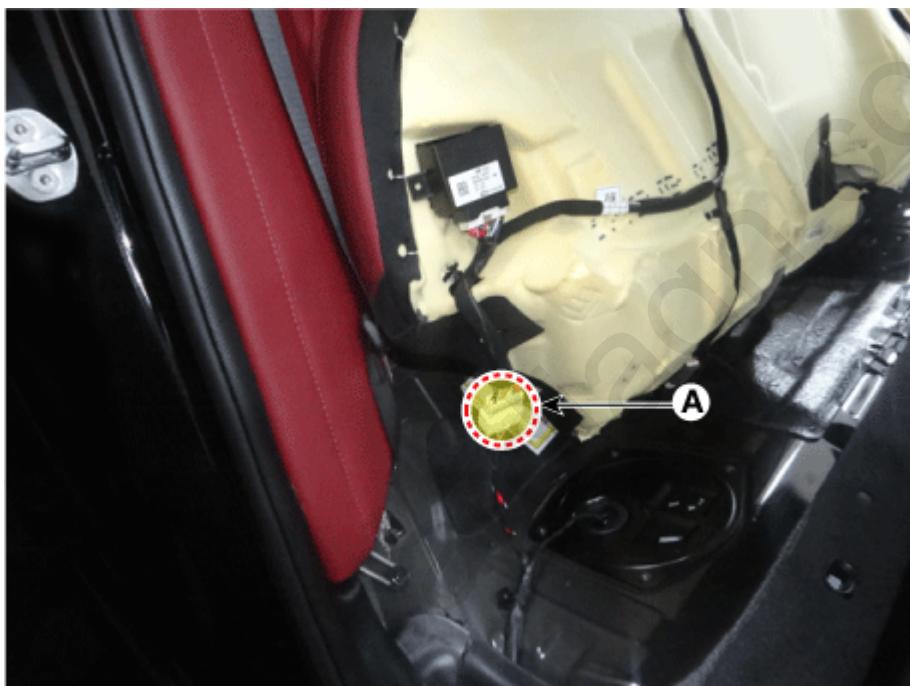


4. Remove the rear back side seat (A) by pulling it up after loosening the mounting bolts.



5. Remove the rear door scuff trim (A) after removing the mounting clip.

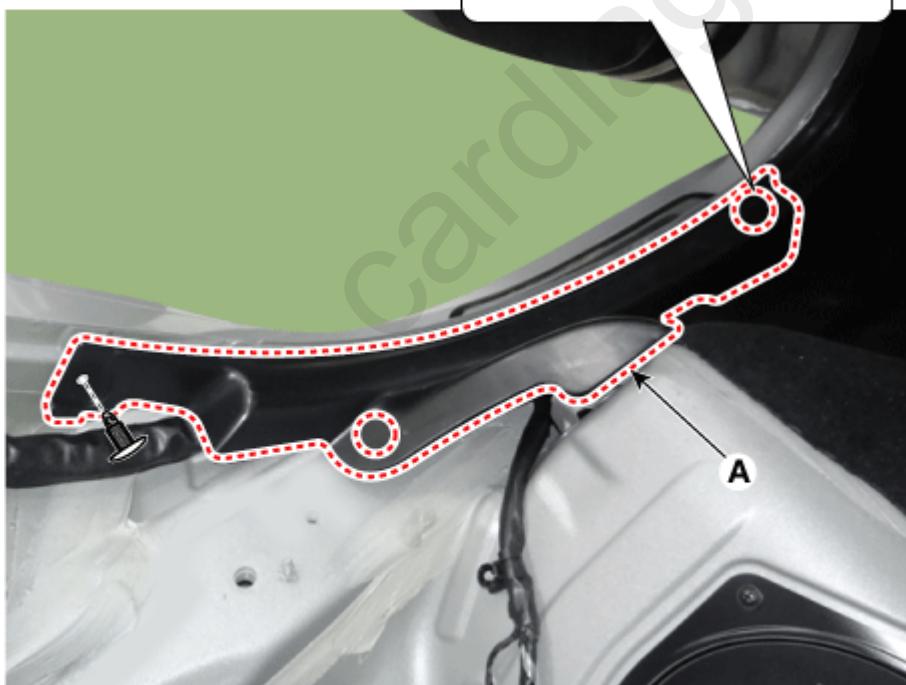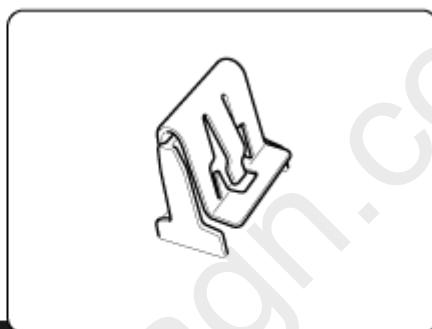



6. Remove the seat belt (B) from the EFD system (A) by using the SST (0K888-D4200).

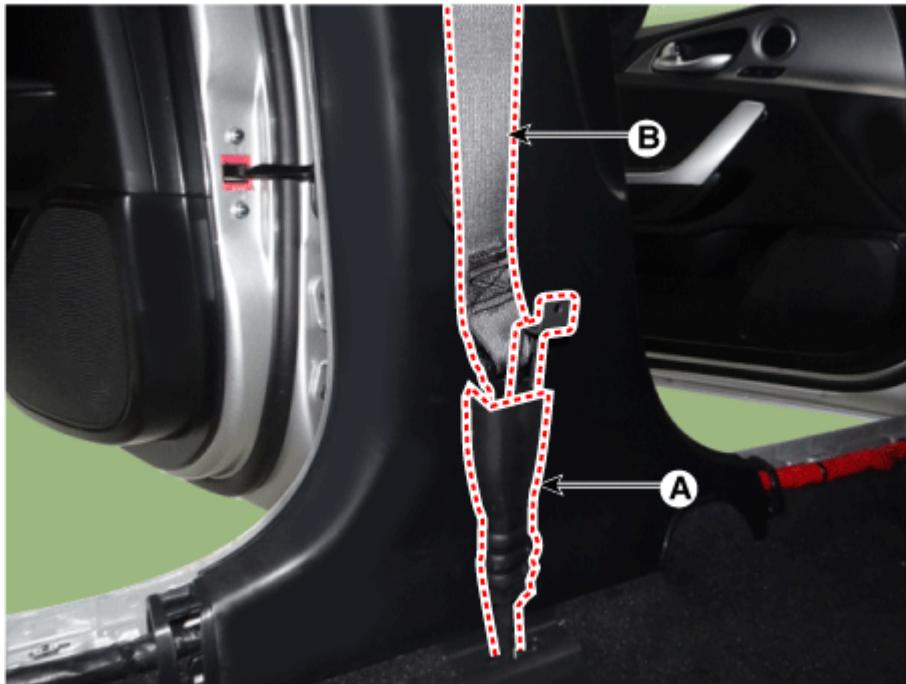

7. Remove the center pillar lower trim (A).



8. Remove the center pillar upper trim (A).

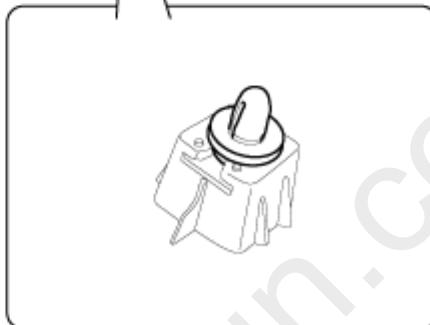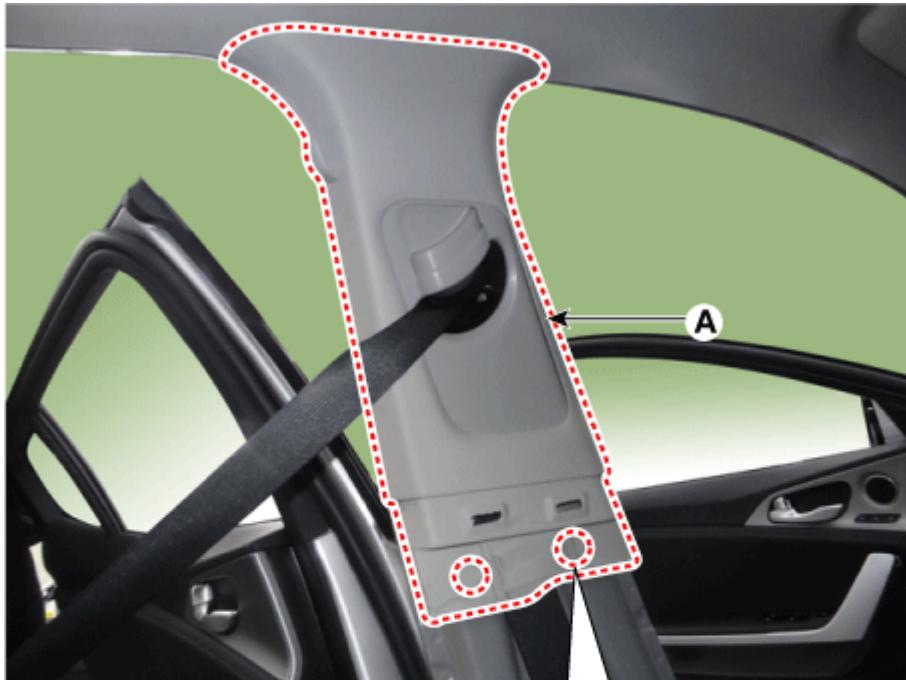

9. Install in the reverse order of removal.

 **Information**

Replace any damage clips.

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.