

Please rate this document after reviewing at the bottom of this page.

## REPLACEMENT

### CAUTION

Put on gloves to protect your hands.

### Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the rear seat assembly.  
**(Refer to Rear Seat - "Rear Seat Assembly")**
2. Remove the rear combination lamp cover (A).




3. Remove the rear combination lamp (A) after loosening the mounting nut and screw.



4. Disconnect the rear combination lamp connector (A).

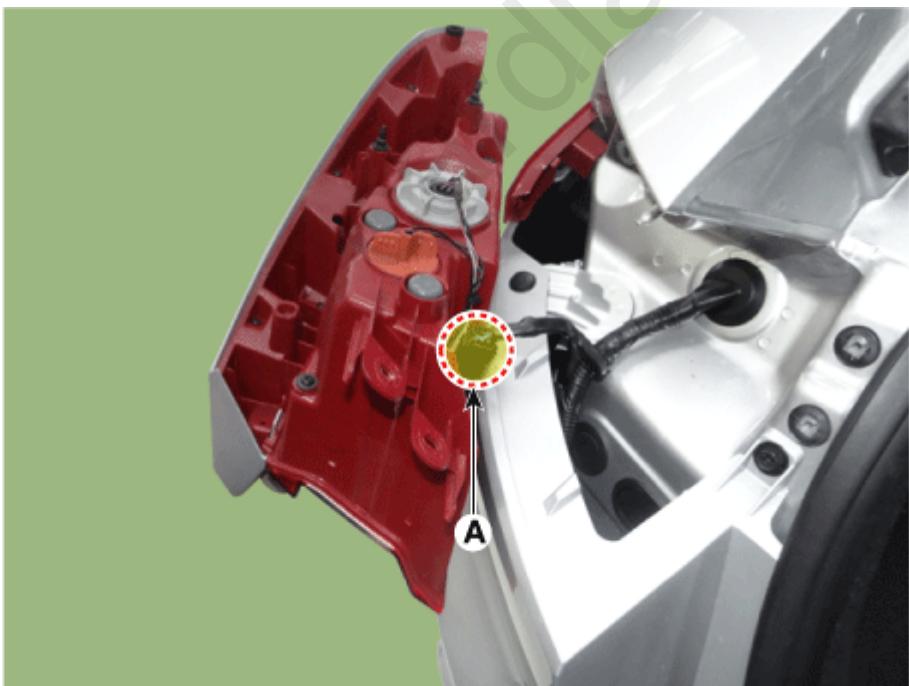


5. Remove the rear combination lamp deflector (A).

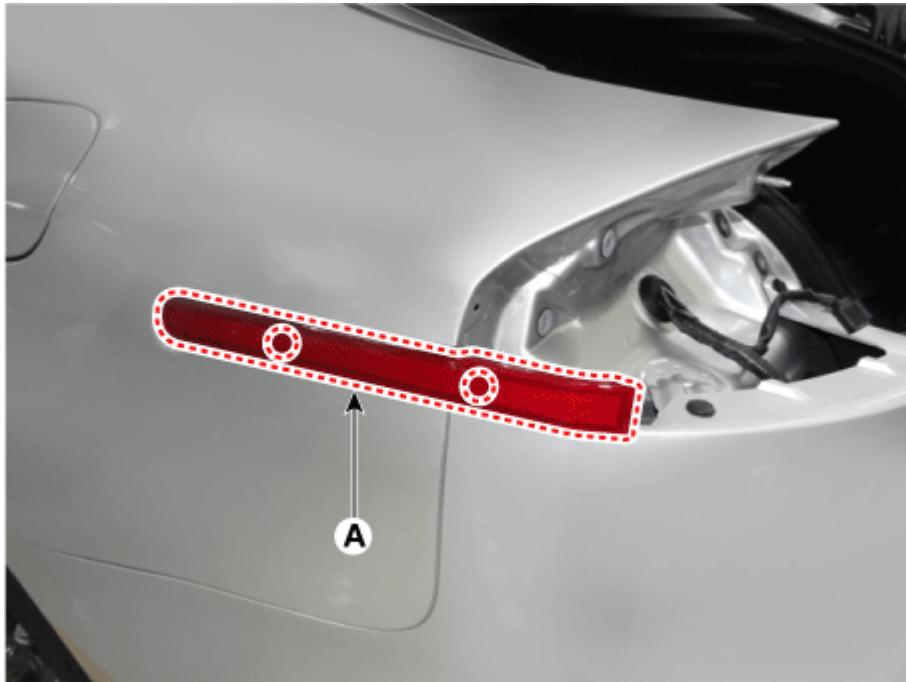

6. Loosen the rear bumper upper mounting fastener and screw.




7. Remove the rear bumper side under cover (A) after loosening the mounting nuts and clips.

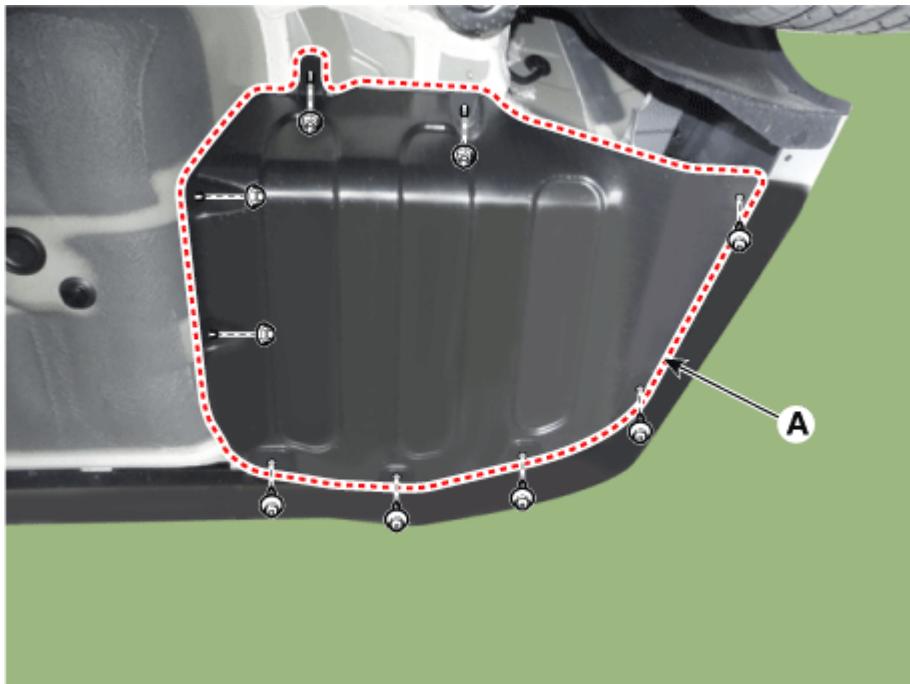


8. Separate the bumper (A) side after loosening the mounting screws and clip.




9. Remove the luggage covering mat(A).

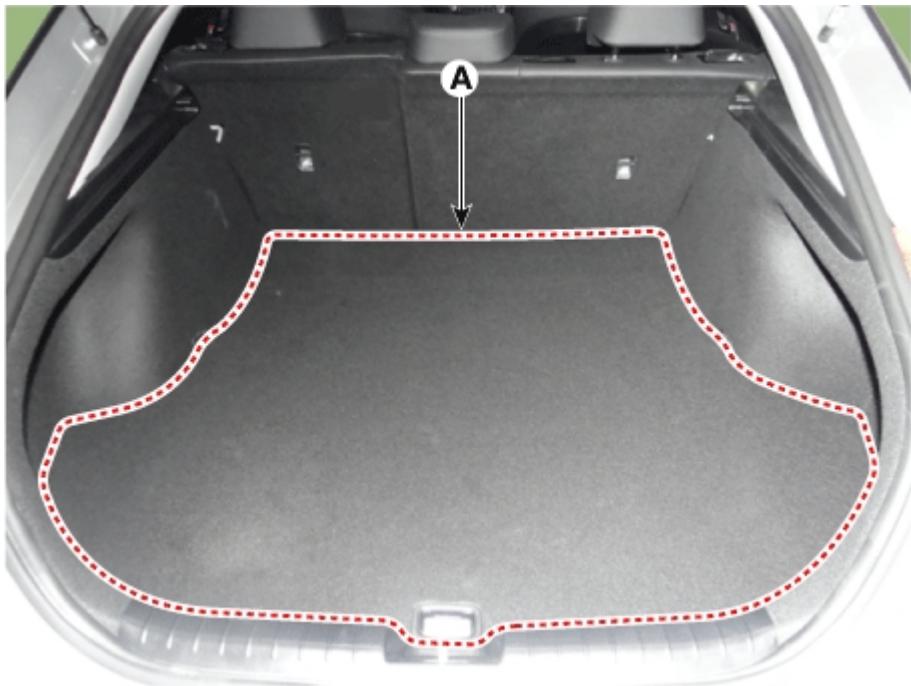


10. Remove the center tray (A).

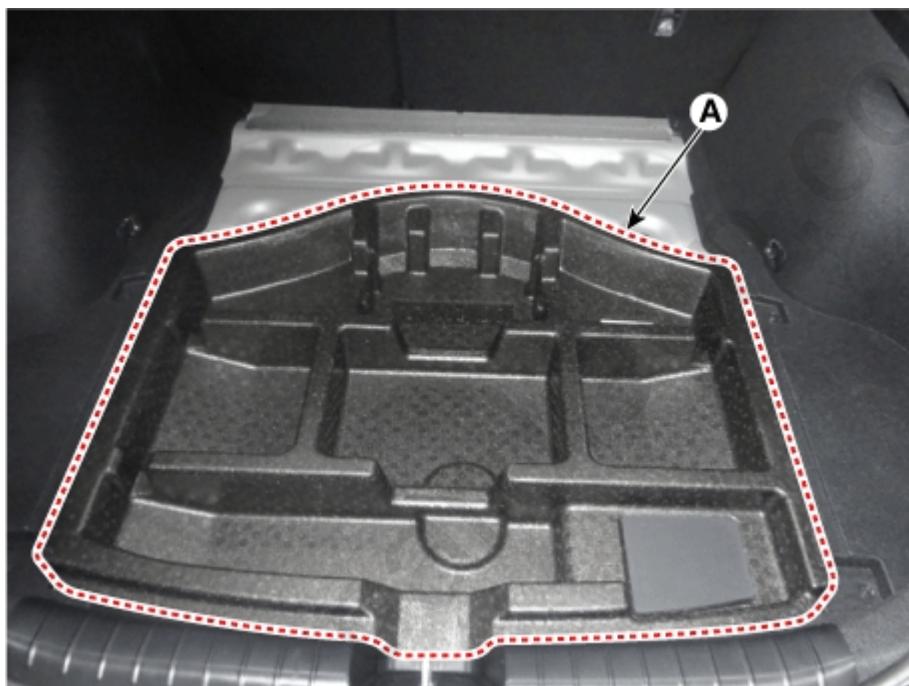

11. Remove the rear transverse trim (A).

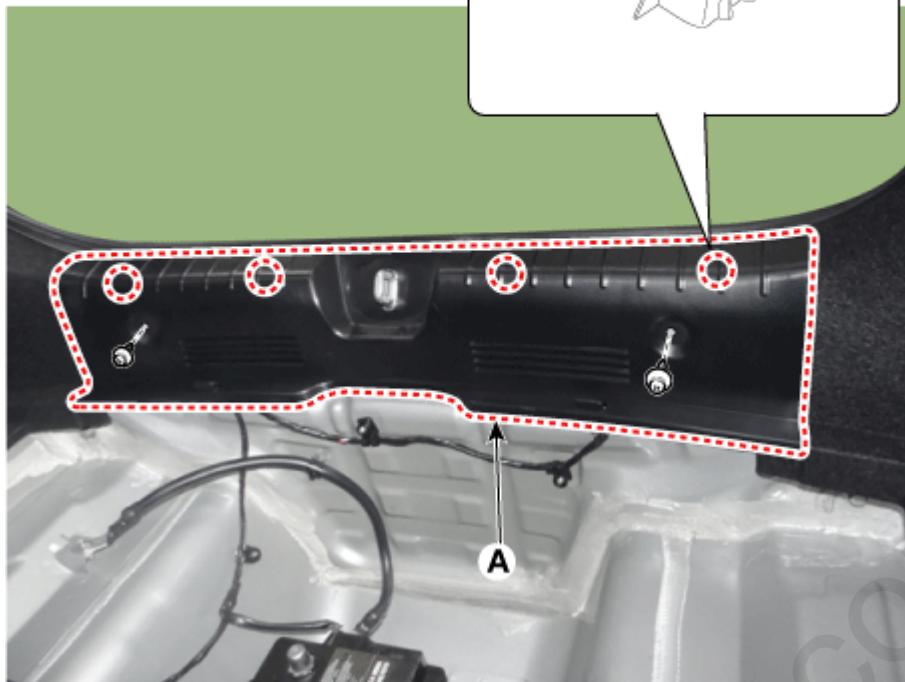

12. Separate the luggage side trim (A) after loosening the mounting screws.

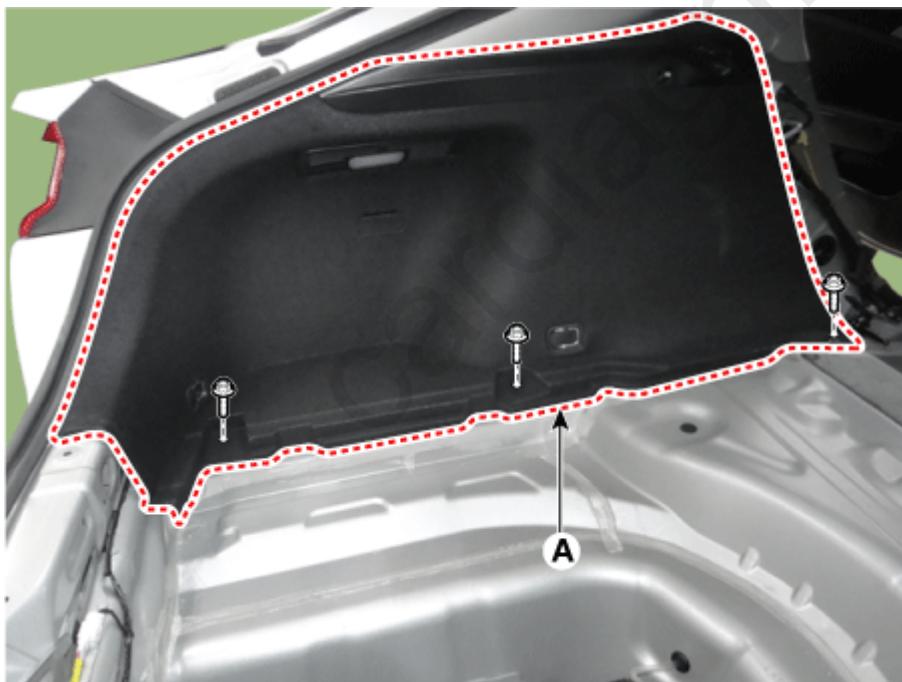


13. Remove the luggage side trim after disconnecting the luggage lamp connector (A).



14. Loosen the rear bumper beam mounting bolts.

**[LH]**

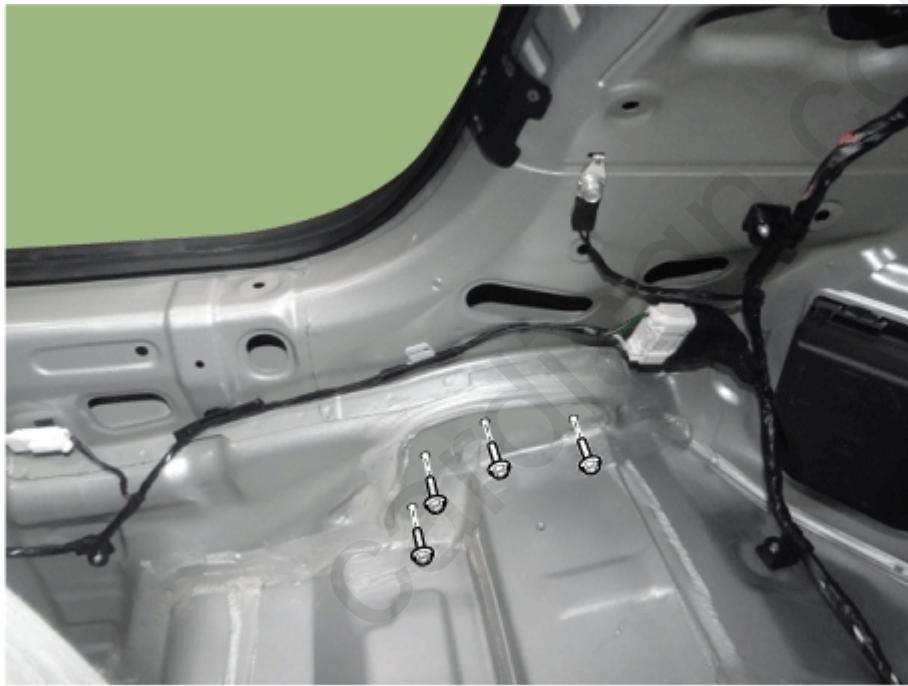


**[RH]**



15. Disconnect the rear bumper main connector (A).



16. Remove the rear bumper cover (A).

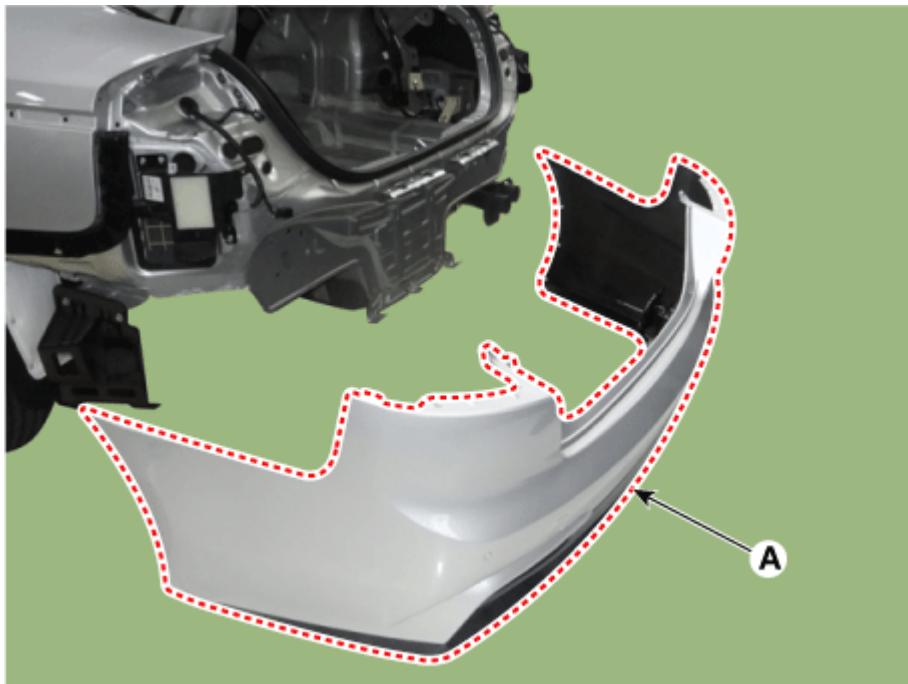

17. Install in the reverse order of removal.

 **Information**

- Make sure that the connector is connected properly.
- Replace any damage clips.

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.