

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT


CAUTION

Put on gloves to protect your hands.


Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the rear bumper cover.
(Refer to Rear Bumper - "Rear Bumper Assembly")
2. Disconnect the rear bumper beam mounting wiring harness.

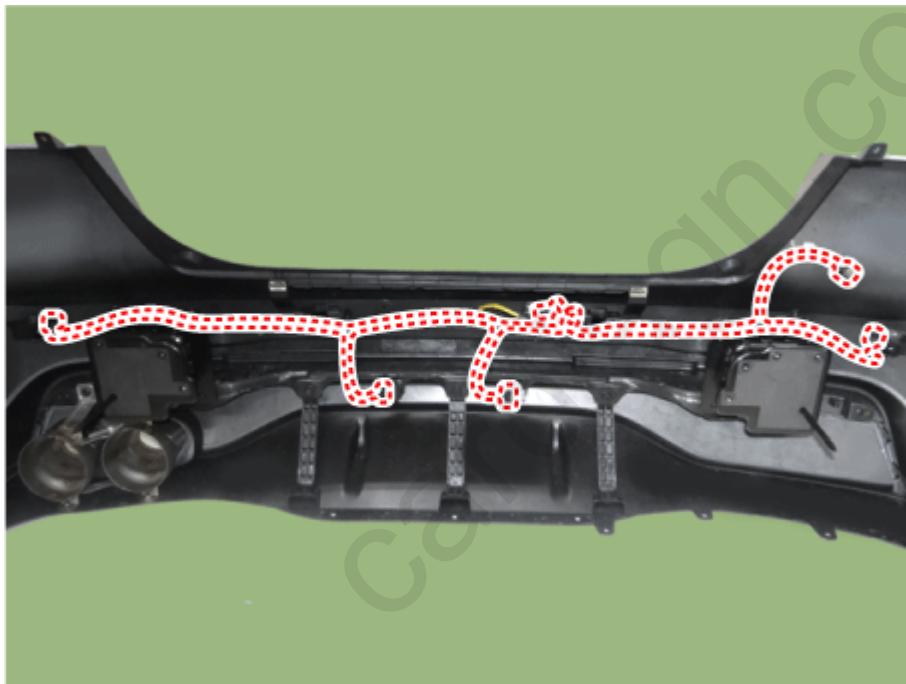

3. Remove the mounting clips (A), then remove the rear bumper beam assembly (B).

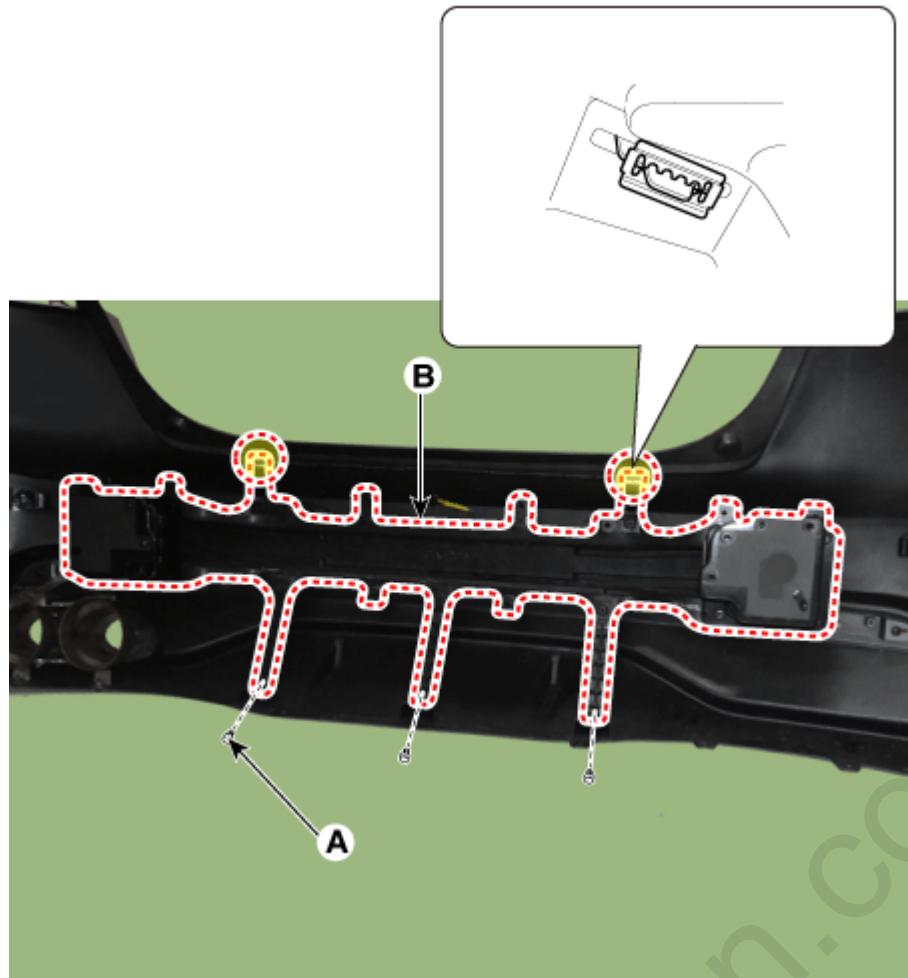

4. Install in the reverse order of removal.

Information

- Make sure that the connector is connected properly.
- Replace any damage clips.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.