

Please rate this document after reviewing at the bottom of this page.


ADJUSTMENT

Glass Adjustment


Information

Check the glass run channel for damage or deterioration, and replace if necessary.

1. Remove the rear door trim.
(Refer to Rear Door - "Rear Door Trim")
2. Remove the rear door window glass mounting hole plug (A).

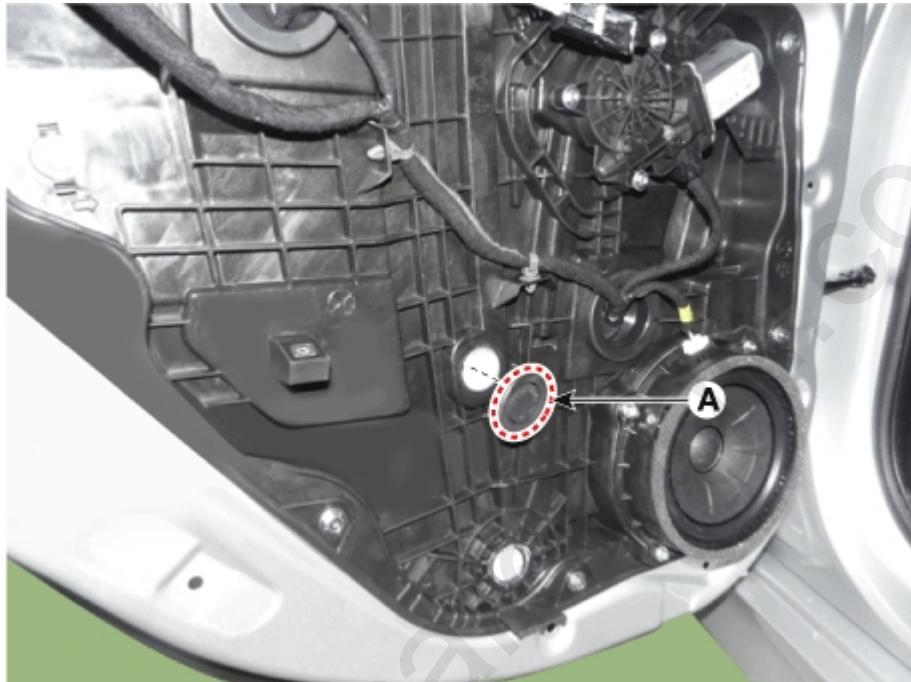

3. Carefully move the front door window glass (A) until the glass mounting bolts are visible, then loosen them.

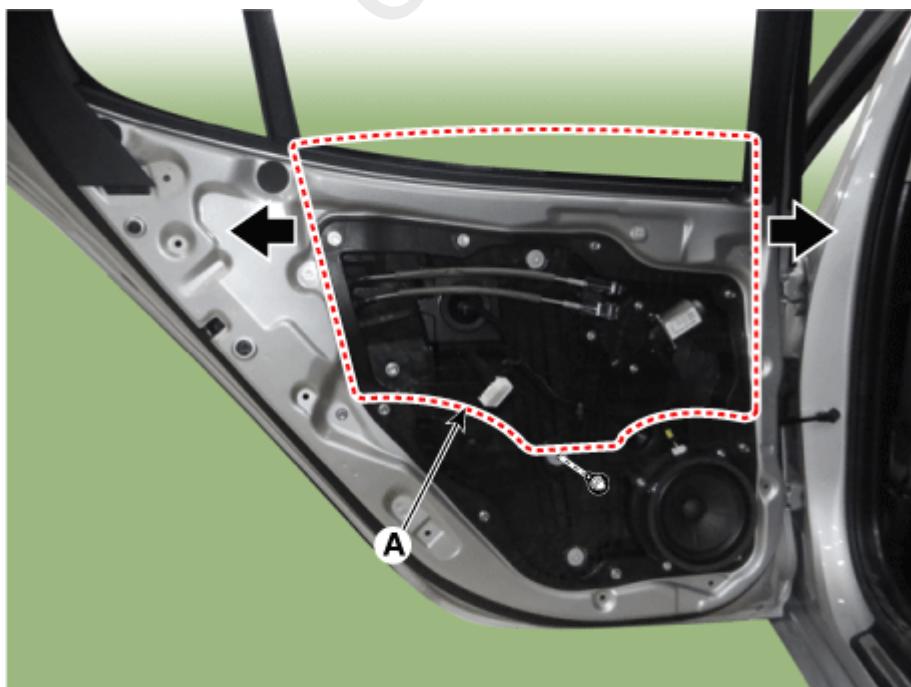

4. Check that the glass moves smoothly.


English 

Door Striker Adjustment

1. Remove the rear striker cover.
2. Loosen the bolts (A) just enough for the striker to move.

Tightening torque :

(B) : 16.7 - 21.6 N·m (1.7 - 2.2 Kgf·m, 12.3 - 15.9 lb·ft)

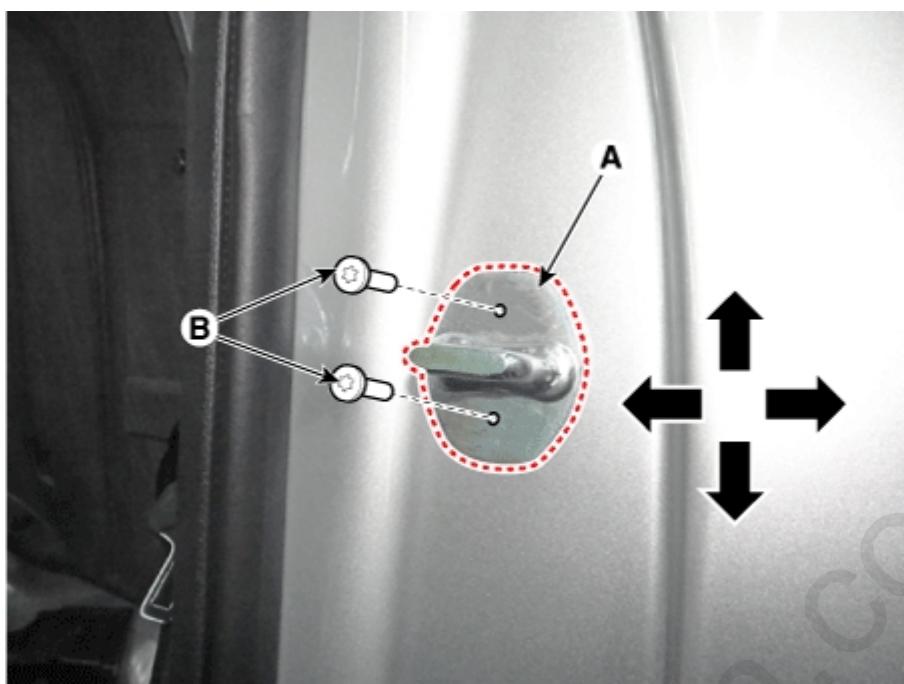


3. Tap on the striker with a plastic hammer to adjust the striker. The striker will not move much, but will give some adjustment.
4. Hold the outer handle out, and push the door against the body to be sure the striker allows a flush fit. If the door latches properly, tighten the screws and recheck.

Door Position Adjustment

Information

After installing the door, check for a flush fit with the adjacent body panels, then check for equal gaps between the front, rear, and bottom, door edges and the body. Check that the door and body edges are parallel. Before adjusting, replace the mounting bolts.

1. Check that the door and body edges are parallel.

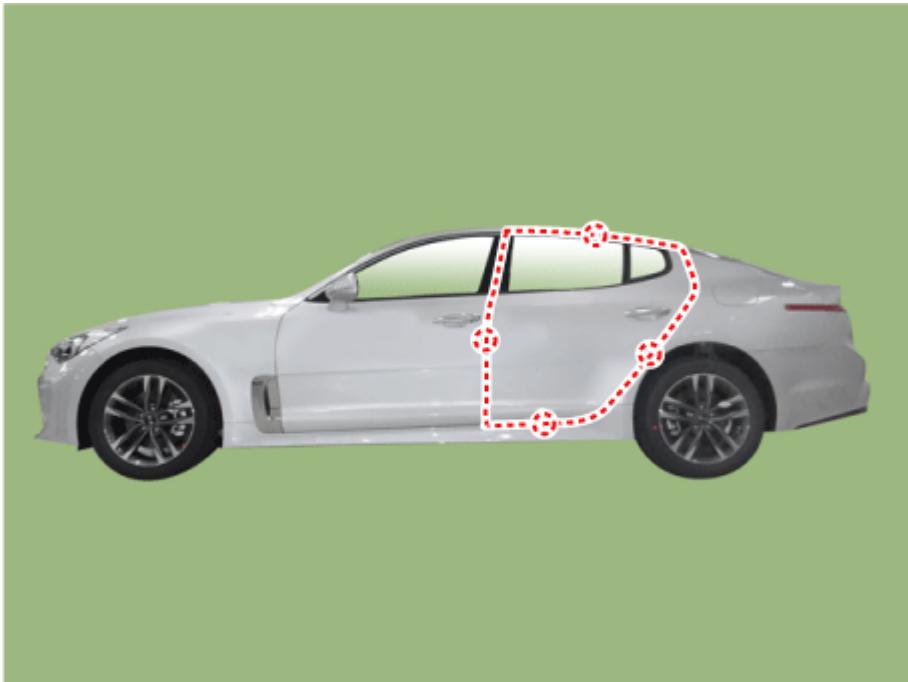

2. Place the vehicle on a firm, level surface when adjusting the doors.
3. Adjust at the hinges (A):
 - Loosen the door mounting bolts slightly, and move the door in and out until it aligns flush with the body.
 - Loosen the hinge mounting bolts slightly, and move the door backward and forward, or up and down as necessary to equalize the gaps.
 - Place a shop towel on the jack to prevent damage to the door when adjusting the door.

Tightening torque :

(B) : 21.6 - 26.5 N·m (2.2 - 2.7 Kgf·m, 15.9 - 19.5 lb·ft)

(C) : 37.3 - 41.2 N·m (3.8 - 4.2 Kgf·m, 27.5 - 30.4 lb·ft)



4. Grease the pivot portions of the hinges indicated by the arrows.
5. Check for water leaks.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**