


4. Remove the rear door outside handle pad (A).




5. Loosen the rear door outside handle base mounting screw (A).

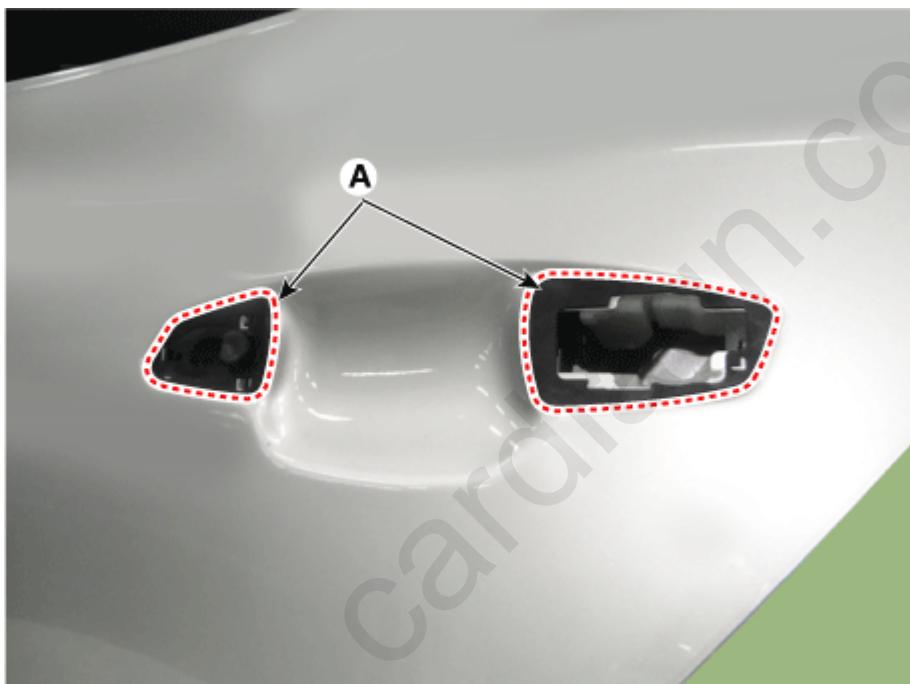


6. Disconnect the rear door main wiring connector (A).




7. Loosen the rear door latch mounting screw (A).

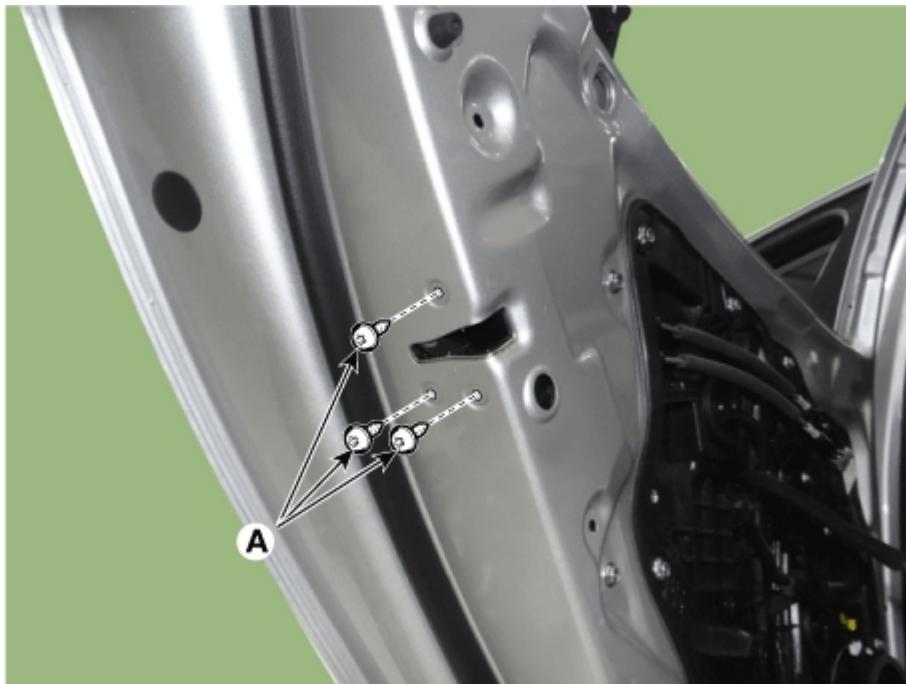


8. Remove the rear door module (A) after loosening the mounting bolts.

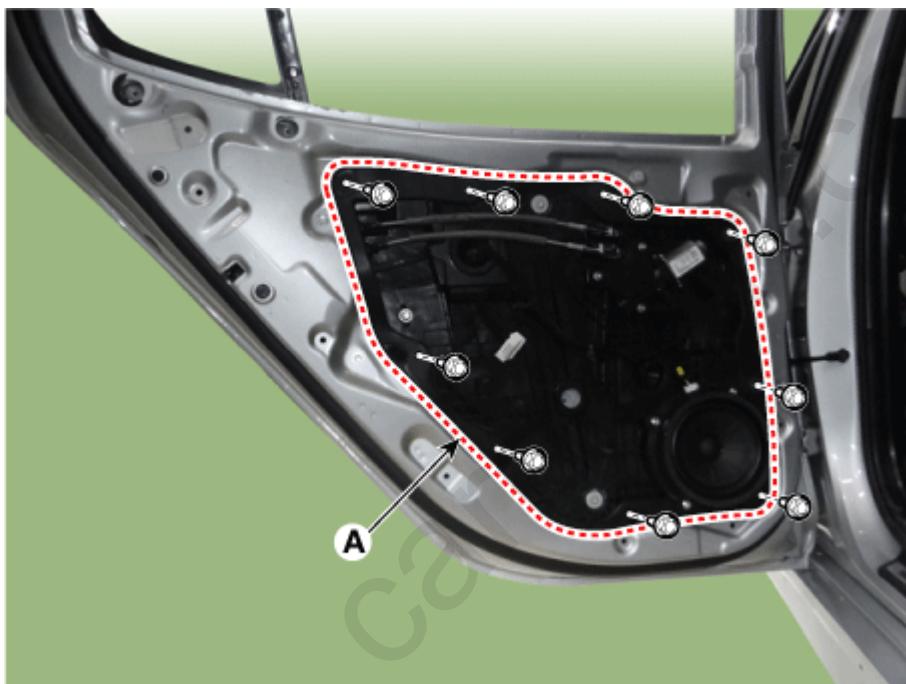

9. Remove the rear door channel (A) after loosening the mounting bolts.

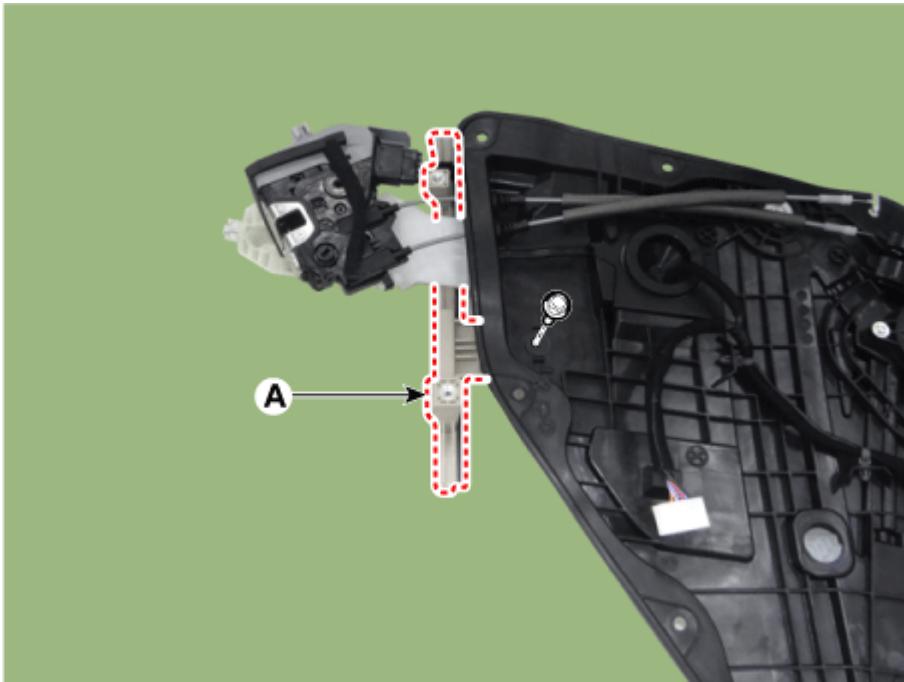

10. Remove the rear door latch (B) after disconnecting the latch connector (A).

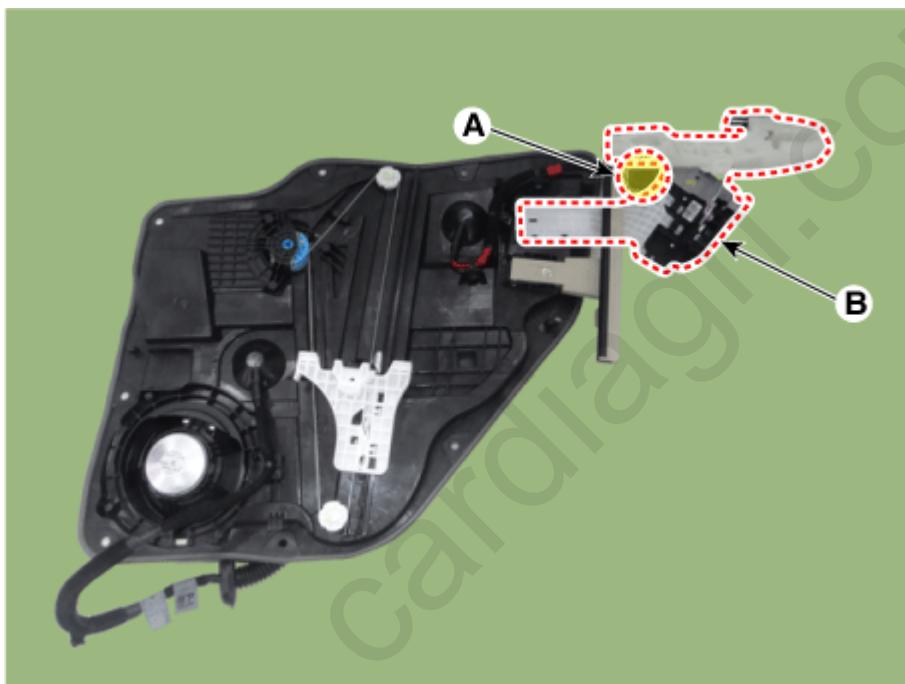

11. Remove the rear speaker.
(Refer to Body Electrical System - "Speakers")
12. Remove the rear power window motor.
(Refer to Body Electrical System - "Power Window Motor")
13. Remove the rear door wiring harness from the rear door module.
14. Install in the reverse order of removal.

 **Information**

- Roll the glass up and down to see if it moves freely without binding.
- Adjust glass position as needed.
- Make sure that the door locks and opens properly.
- Replace any damaged clips.

* Thanks for your cooperation for the more quality. Please surely rate this document before you leave.

English

Cardiagn.Com