

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT


CAUTION

Put on gloves to protect your hands.

Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Separate the rear seat cushion assembly (A).

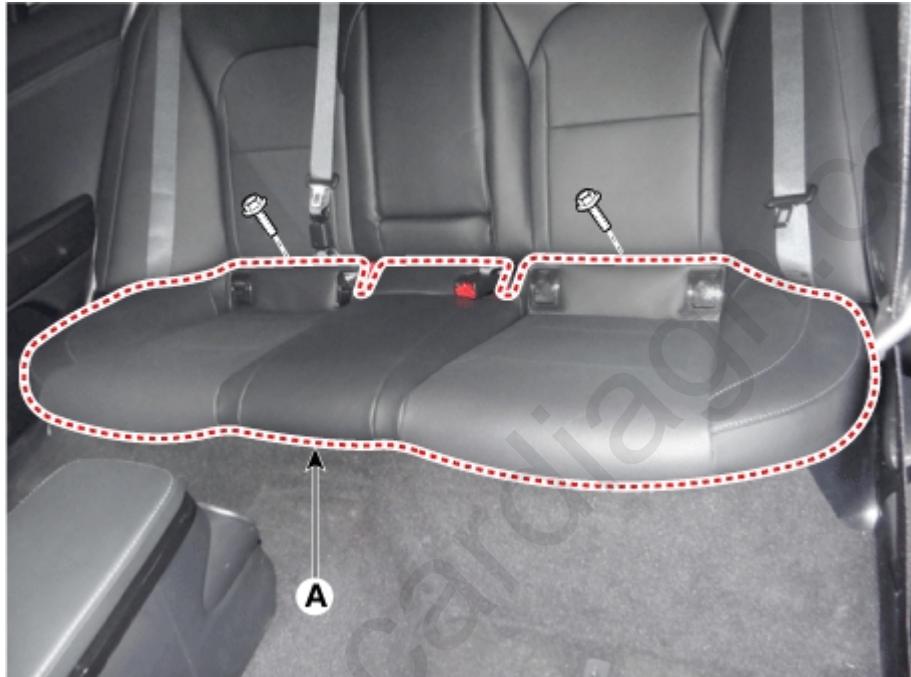

2. Remove the rear seat cushion assembly after disconnecting the rear seat heater connector (A).




3. Remove the rear back side seat (A) by pulling it up after loosening the mounting bolts.

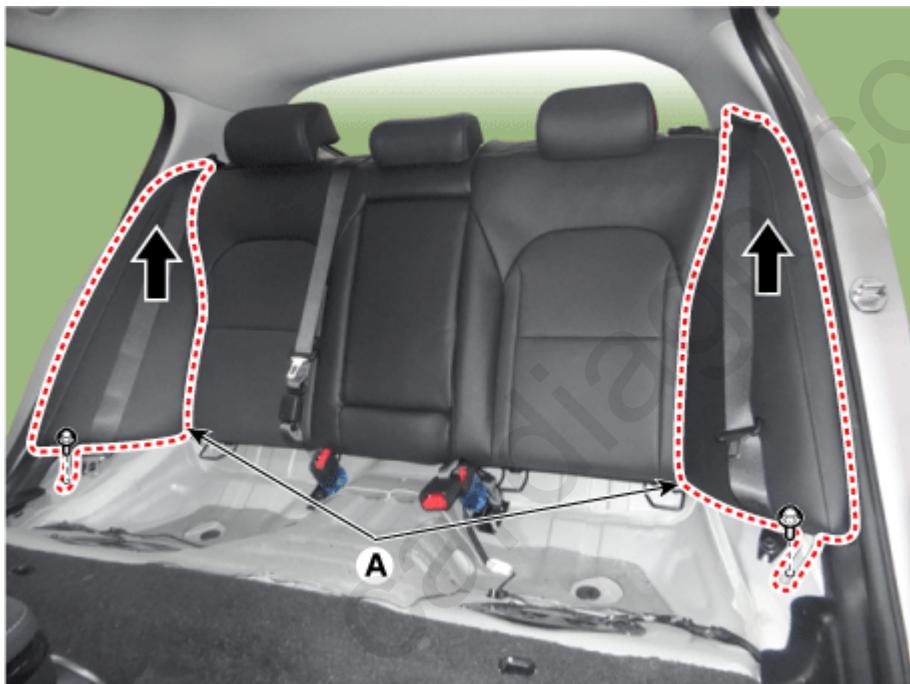


4. Disconnect the rear center seat belt (A) after pressing the groove in the direction of the arrow.




5. Fold the rear seat back assembly (A).

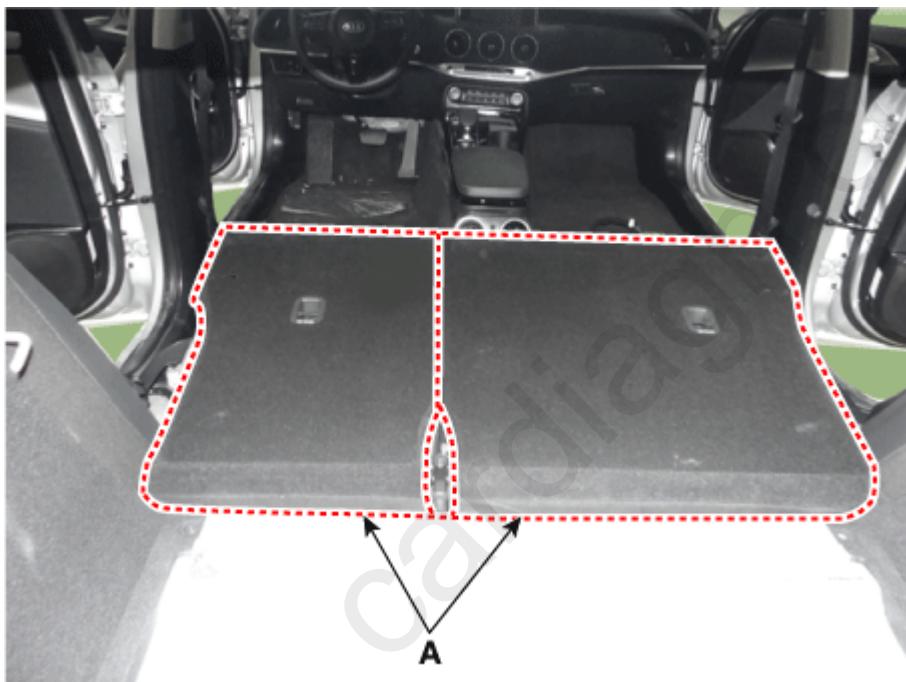

6. Open the hinge bracket cap (A) after loosening the mounting bolt.

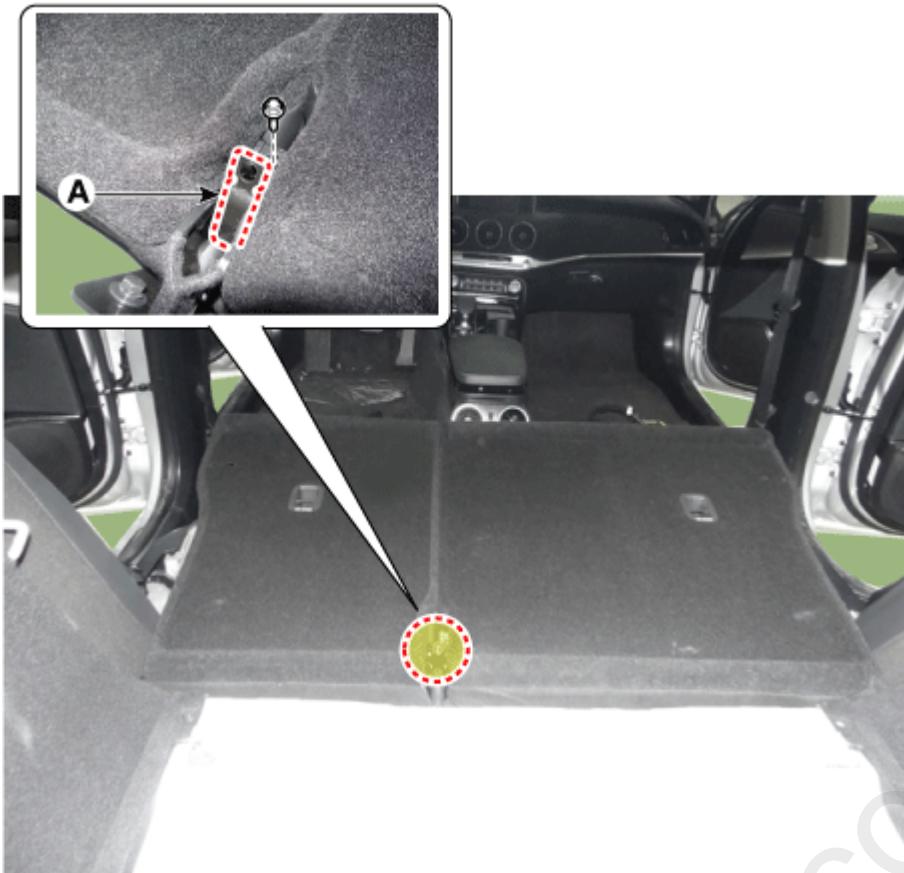

7. Remove the rear seat back assembly (A).

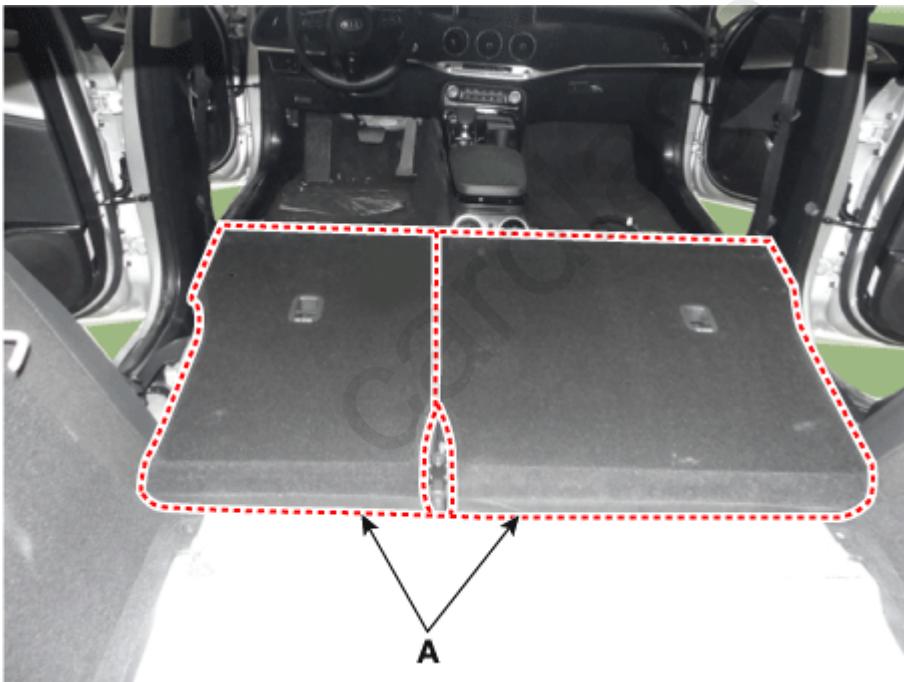

8. Install in the reverse order of removal.

⚠ CAUTION

- Make sure that the connector is connected properly.
- Replace any damage clips.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.