

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

CAUTION

Put on gloves to protect your hands.

Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

[LH]

1. Remove the rear seat assembly.
(Refer to Rear Seat - "Rear Seat Assembly")
2. Push the lock pin and remove the rear seat headrest (A).



3. Remove the rear seat back side hinge bush (A) by using a remover.



4. Remove the rear seat back folding knob cover (A) by using a remover.





5. Remove the child anchor cover (A) by using a remover.




6. Separate the rear seat back covering (A).



7. Pull out and remove the rear seat headrest guides (A) while holding both sides of the lower part of the guides.

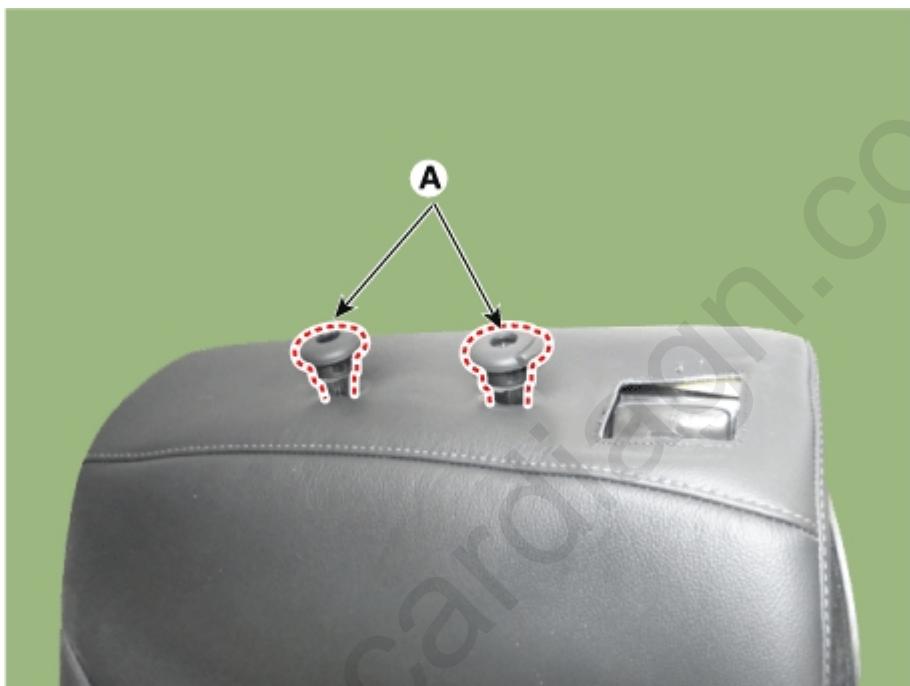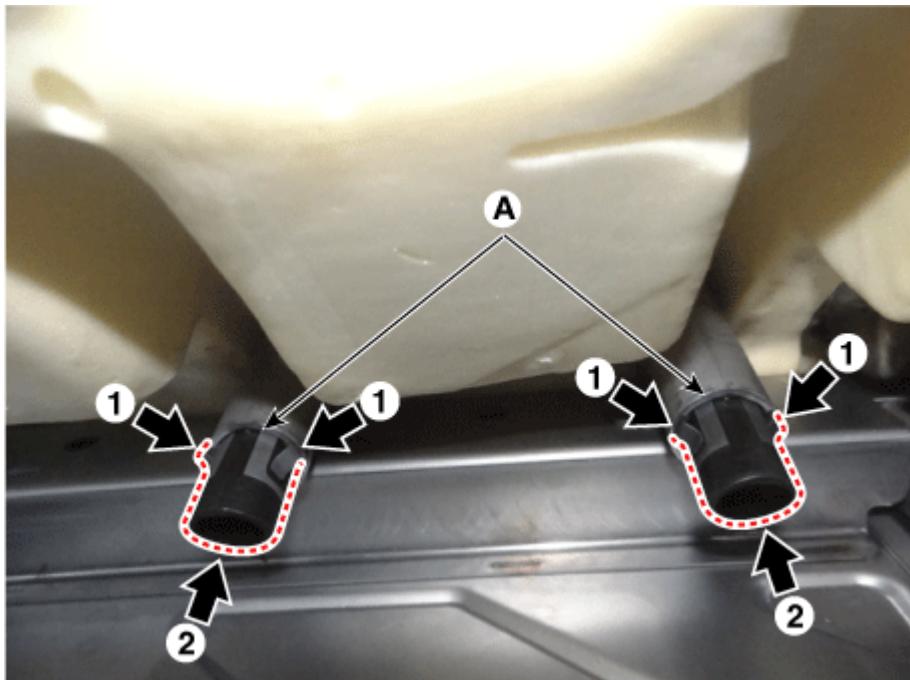


8. Remove the front seat back covering (C) after removing the velcro tape (A) and hog-ring clip (B).

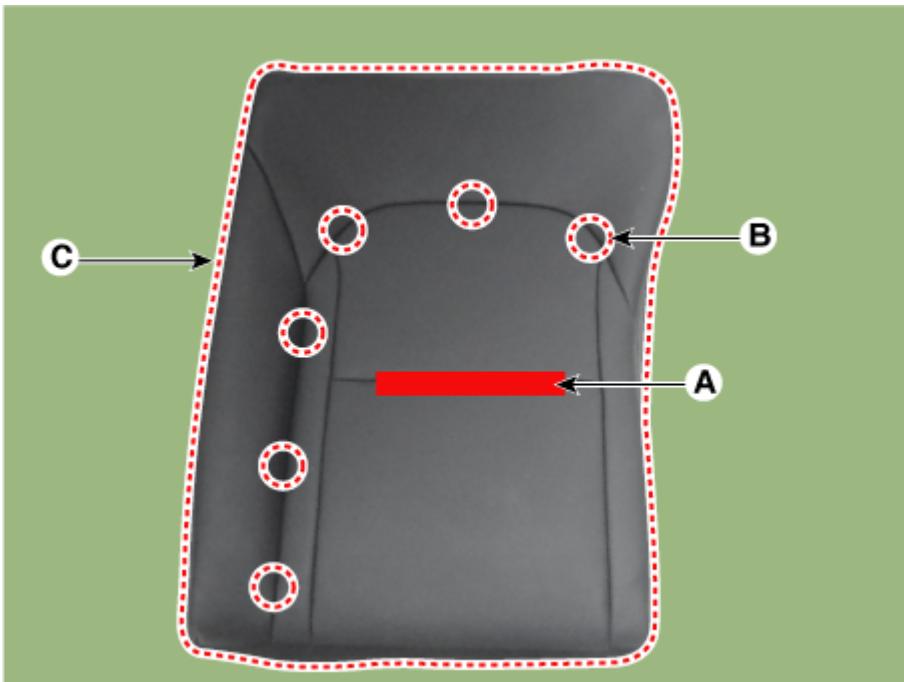

9. Install in the reverse order of removal.


 **Information**

- Make sure that the connectors are connected completely.
- Replace any damaged clips (or pin - type retainers).
- To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog - ring clips (A).
- Replace the hog-ring clips with new ones using special tool (C) (09880 - 4F000).

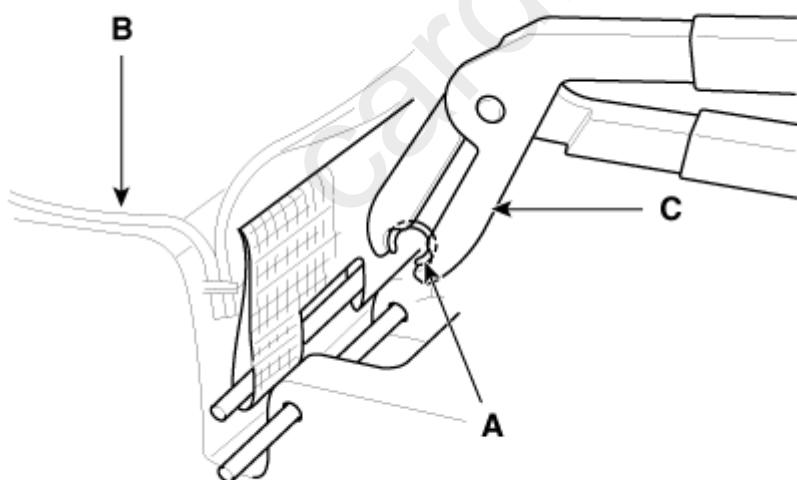


[RH]

1. Remove the rear seat assembly.
(Refer to Rear Seat - "Rear Seat Assembly")
2. Push the lock pin and remove the rear seat headrest (A).

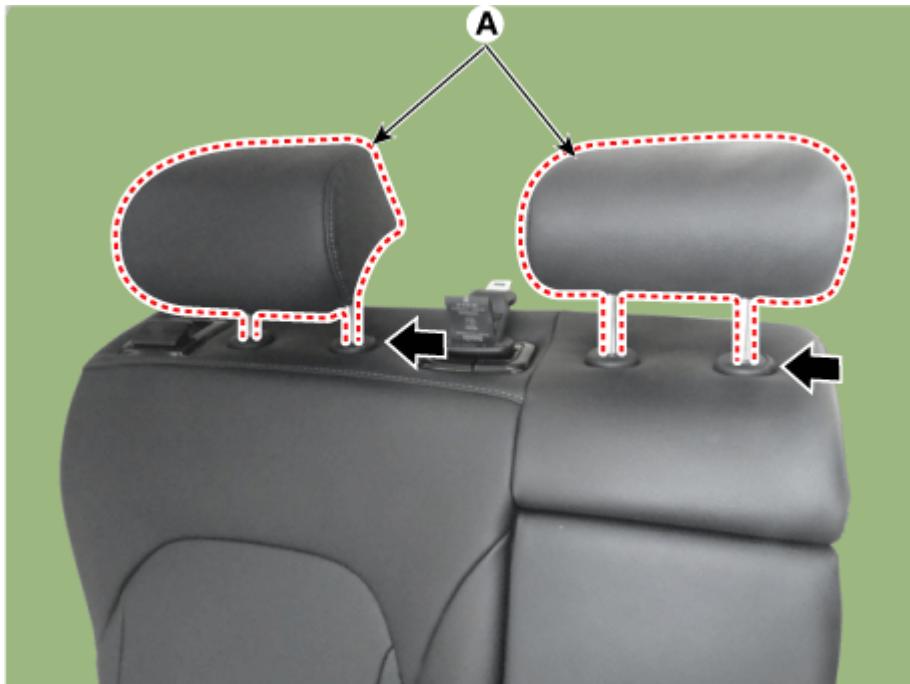

3. Remove the rear seat back side hinge bush (A) by using a remover.

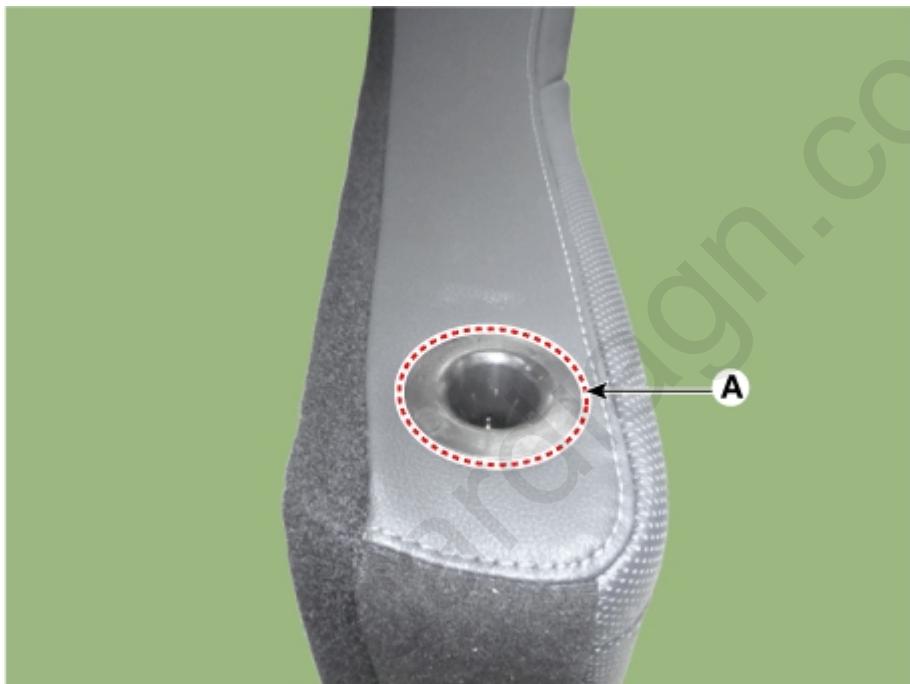


4. Remove the rear seat back folding knob cover (A) by using a remover.




5. Remove the rear center seat belt cover (A) by using a remover.




6. Remove the child anchor cover (A) by using a remover.

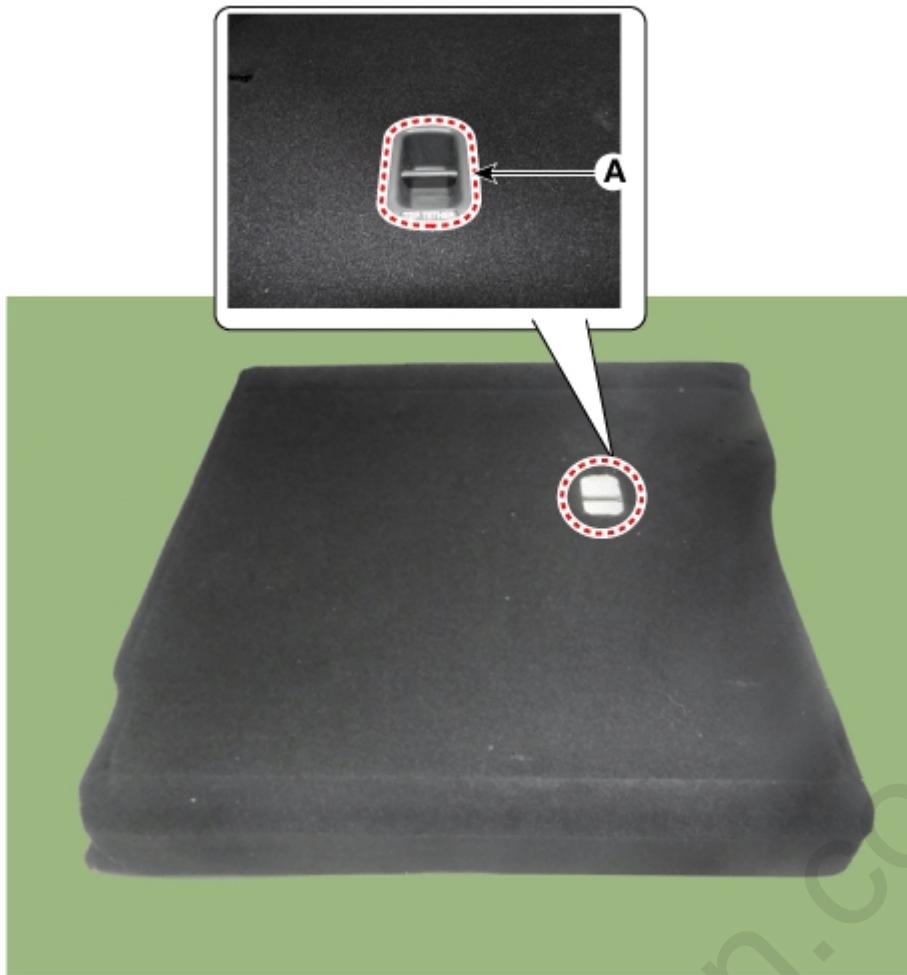

7. Separate the rear seat back covering (A).

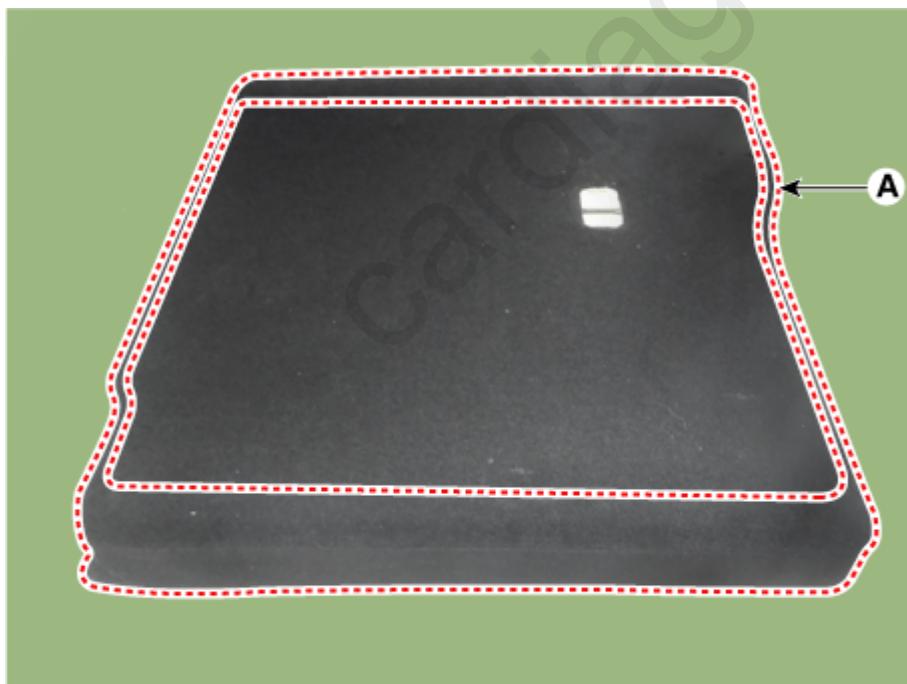



8. Remove the rear back armrest (C) after removing the cap(A) and then loosening the bolt (B).

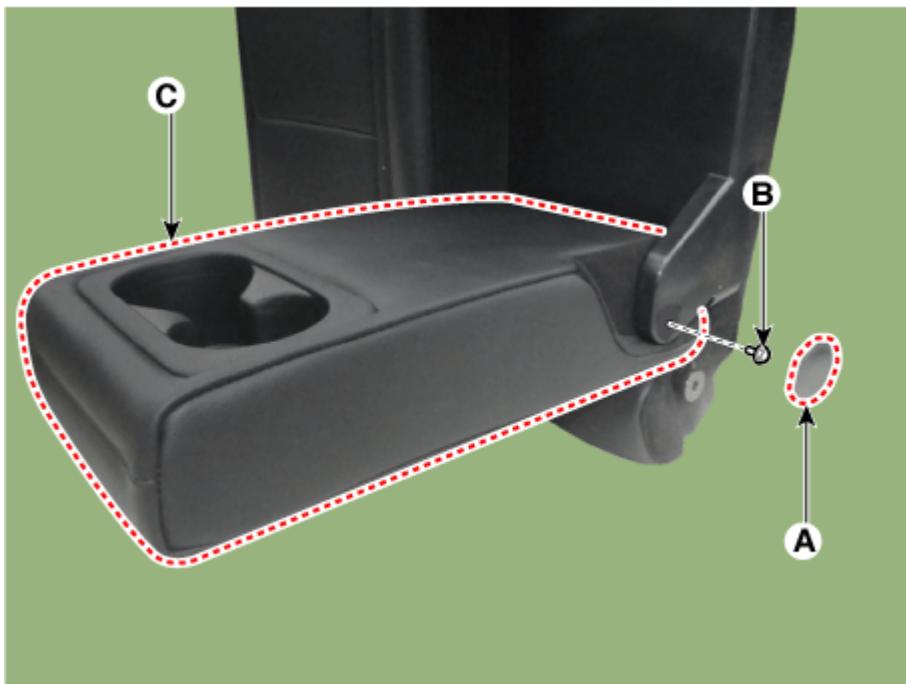

9. Remove the rear seat armrest back board (A).



10. Pull out and remove the rear seat headrest guides (A) while holding both sides of the lower part of the guides.

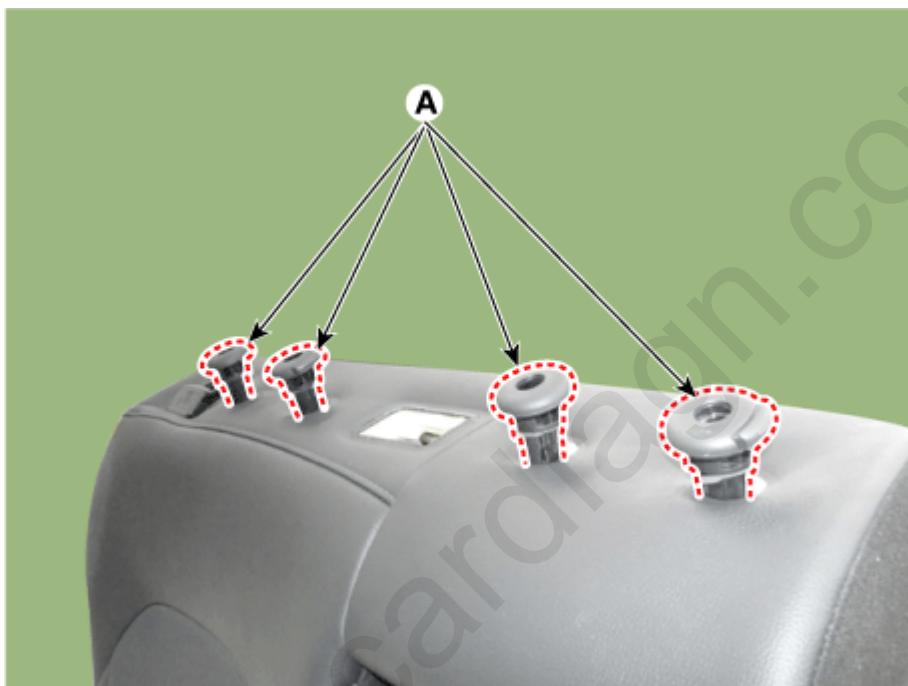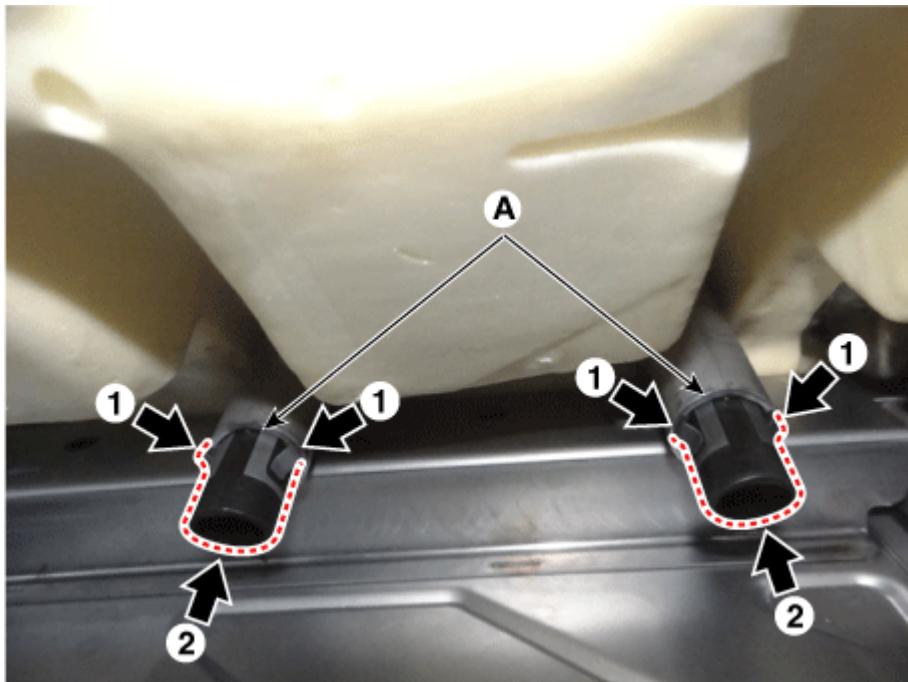


11. Remove the front seat back covering (C) after removing the velcro tape (A) and hog-ring clip (B).



12. Install in the reverse order of removal.

 **Information**

- Make sure that the connectors are connected completely.
- Replace any damaged clips (or pin - type retainers).
- To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog - ring clips (A).
- Replace the hog-ring clips with new ones using special tool (C) (09880 - 4F000).

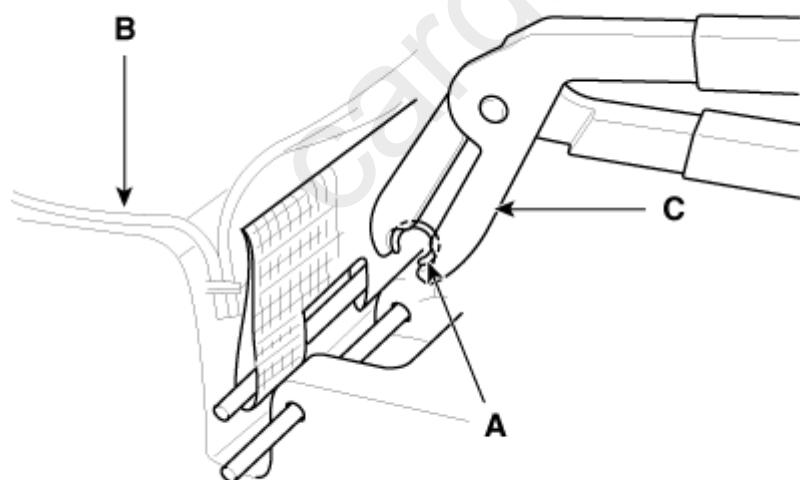

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.