

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

NOTICE

When installing the belt, be careful not to damage the retractor.

1. Remove the rear pillar trim.
(Refer to Interior Trim - "Rear Pillar Trim")
2. Disconnect the rear seat belt retractor connector (A).
[LH]



[RH]




3. Remove the rear seat belt retractor (A) after loosening the mounting bolts.

Tightening torque :


39.2 - 53.9 N·m (4.0 - 5.5 Kgf·m, 28.8 - 39.8 lb·ft)

English 

[LH]

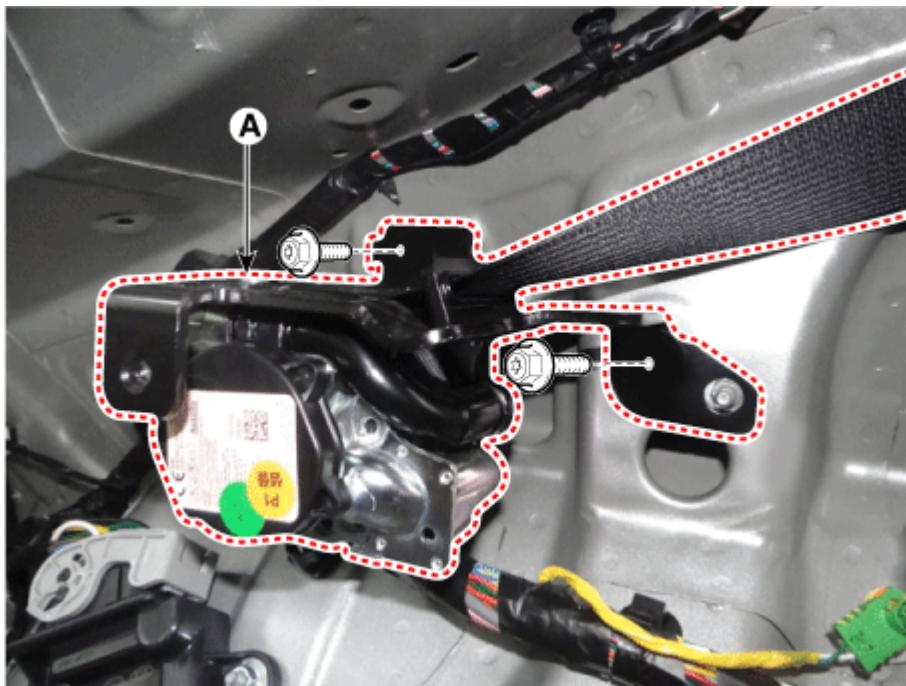

[RH]

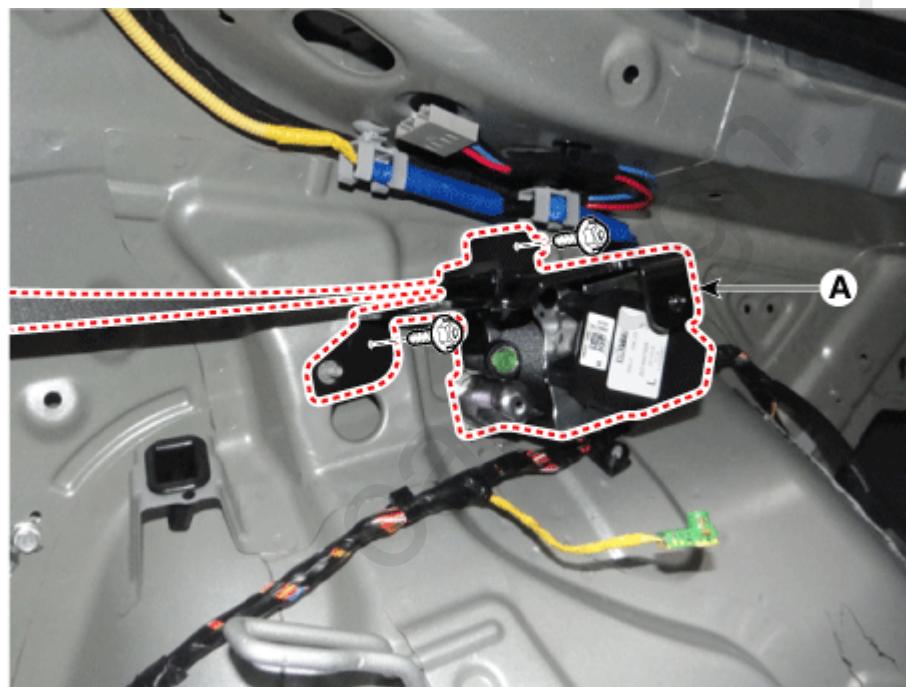

4. Install in the reverse order of removal.

 **Information**

- Replace any damaged clips.
- Make sure that the connector is connected properly.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.