


Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

NOTICE

When installing the belt, be careful not to damage the retractor.

1. Remove the rear seat back cover [RH].
(Refer to Rear Seat - "Rear Seat Back Cover")
2. Remove the rear center seat belt retractor (A) after loosening the mounting bolt.
Tightening torque :
39.2 - 53.9 N·m (4.0 - 5.5 Kgf·m, 28.8 - 39.8 lb·ft)

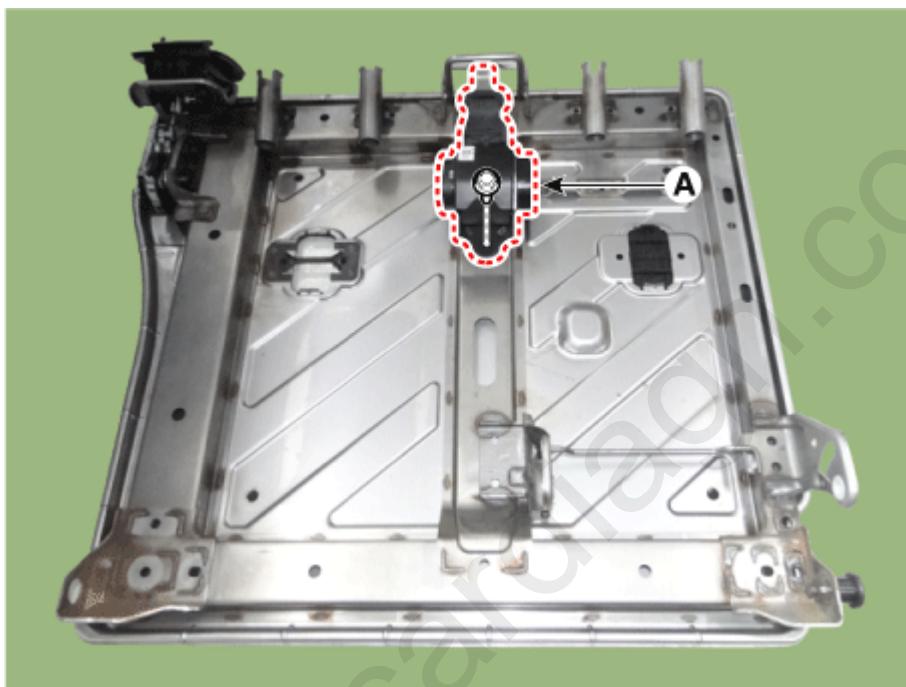

3. Install in the reverse order of removal.

Information

Replace any damaged clips.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.