

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT


CAUTION

Put on gloves to protect your hands.

Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Separate the rear seat cushion assembly (A).

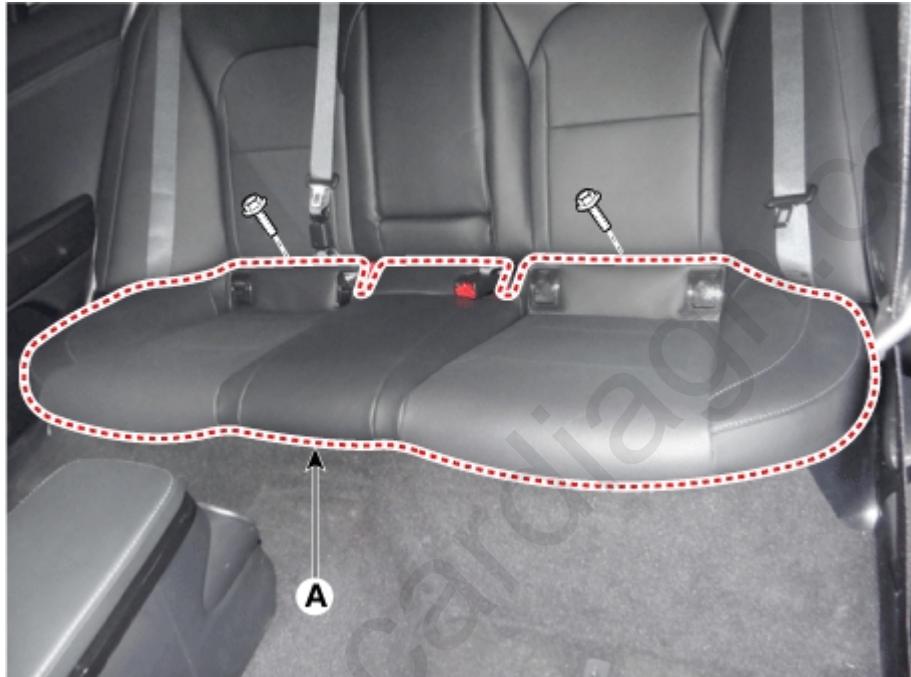

2. Remove the rear seat cushion assembly after disconnecting the rear seat heater connector (A).



3. Disconnect the rear seat belt buckle connector (A).

[LH]




[RH]



4. Remove the rear seat belt buckle (A) after loosening the mounting bolt.

[LH]

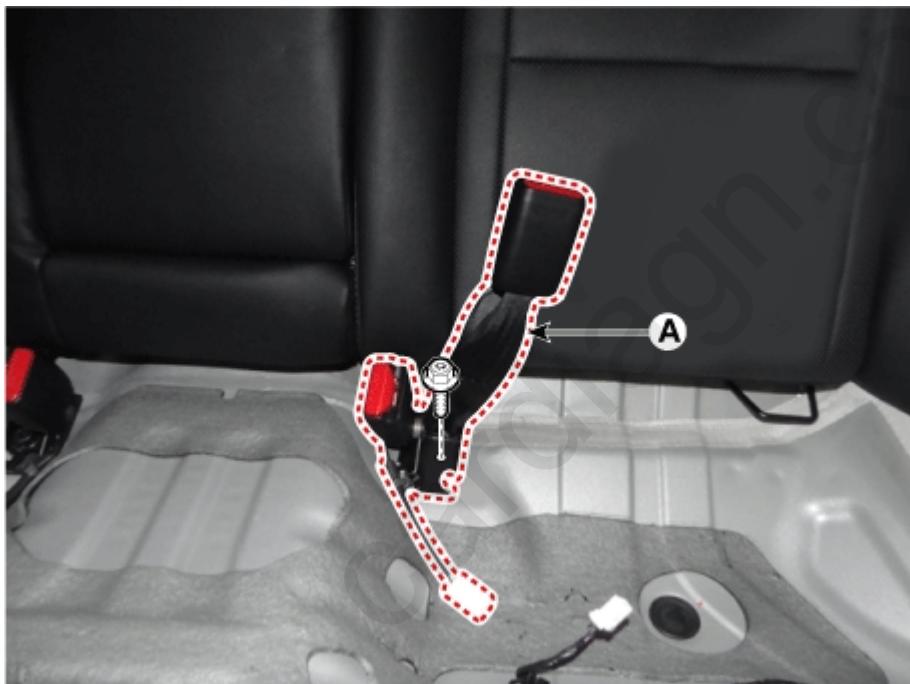

[RH]



5. Install in the reverse order of removal.

 **Information**

- Make sure that the connector is connected properly.
- Replace any damage clips.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.