

**Please rate this document after reviewing at the bottom of this page.**

## REPLACEMENT


**⚠ CAUTION**

Wear gloves to protect hands from injury.


## Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the tailgate trim.  
**(Refer to tailgate - "tailgate Trim")**
2. Disconnect the tailgate latch connector (A).

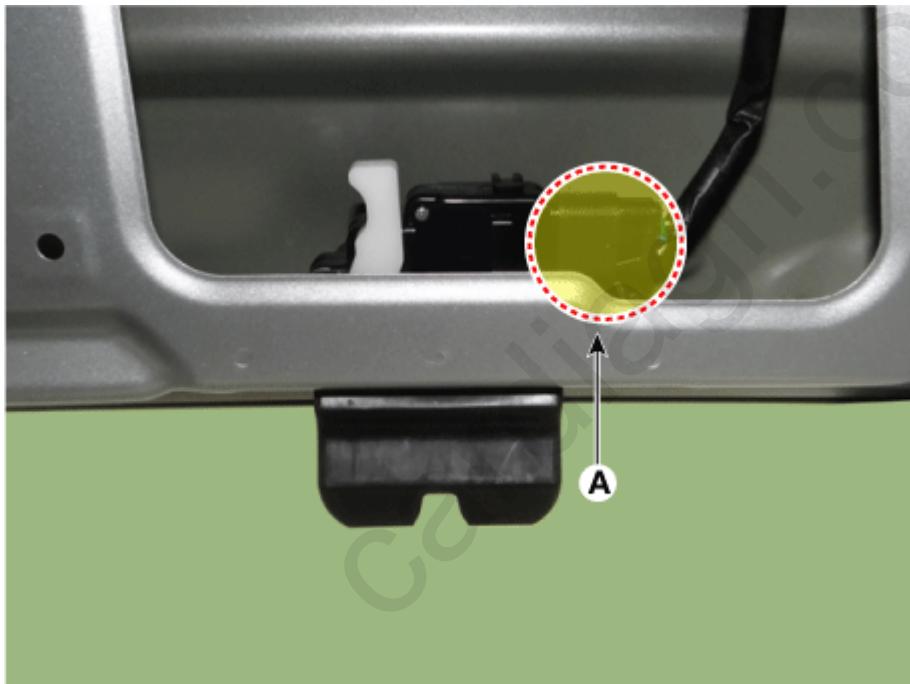

3. Remove the tailgate latch assembly after loosening the mounting bolts (A).

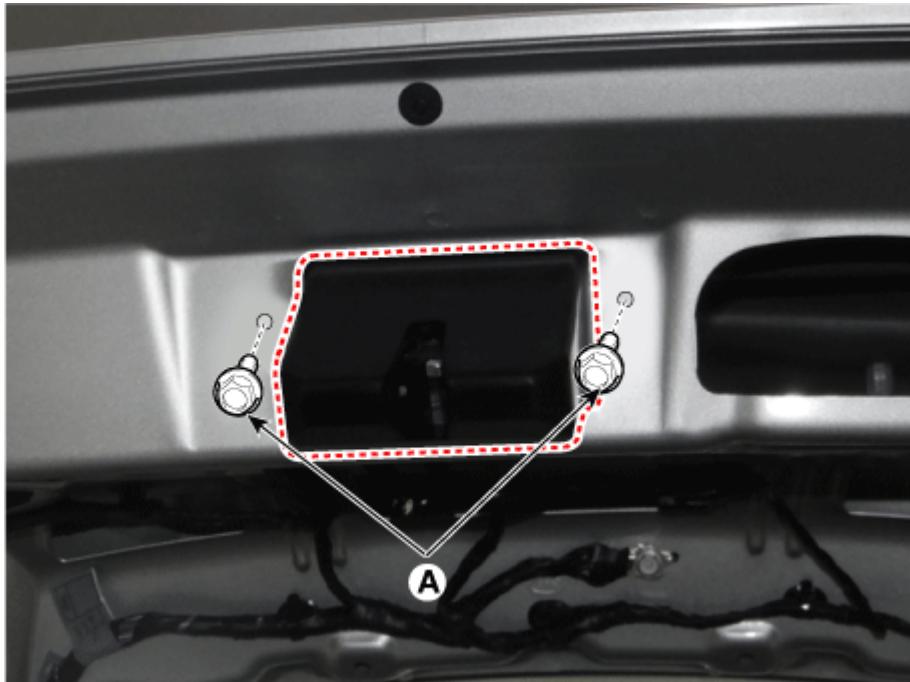

4. Install in the reverse order of removal.

 **Information**

- Make sure the tail gate locks/unlocks and opens/closes properly.
- Adjust the tail gate alignment.
- Make sure the connectors are connected in properly.
- Replace any damaged clips.

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.