


**Please rate this document after reviewing at the bottom of this page.**

## REPLACEMENT

## Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the tailgate trim.  
**(Refer to tailgate - "tailgate Trim")**
2. Disconnect the rear combination lamp connector [inside] (A).

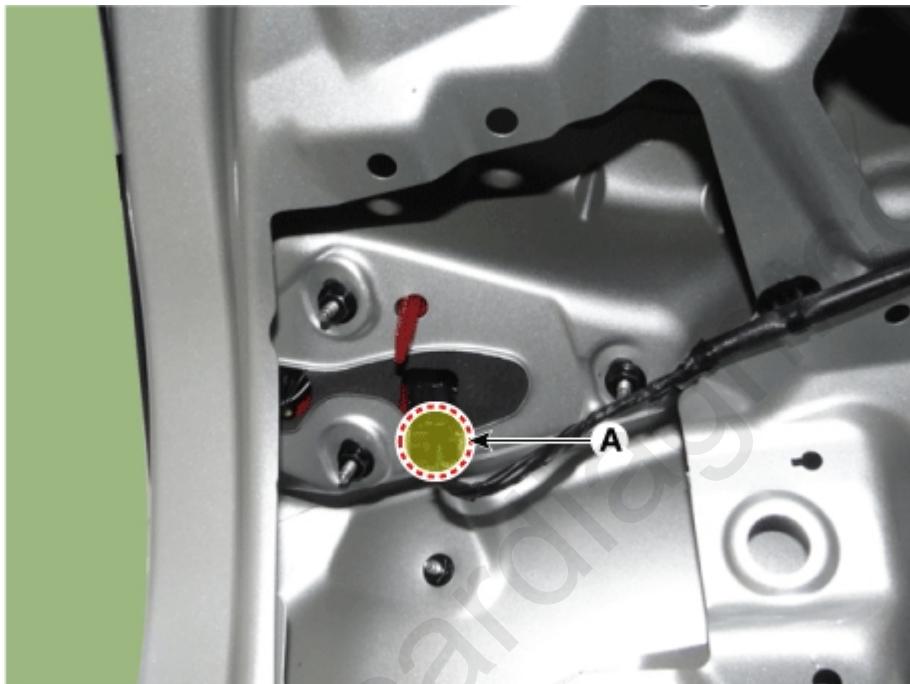

3. Remove the rear combination lamp [inside] (A) after loosening the mounting nuts.



4. Remove the tailgate back panel (A) by using a remover.

English 



5. Install in the reverse order of removal.

 **Information**

- Make sure that the connector is connected properly.
- Replace any damage clips.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**