




Removal


NOTICE

- When prying with a flat-tip screwdriver or use a prying trim tool, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad passenger side panel.
(Refer to Body - "Crash Pad Center Panel")
3. Remove the side airvent duct [RH] (A) after loosening the mounting screw.

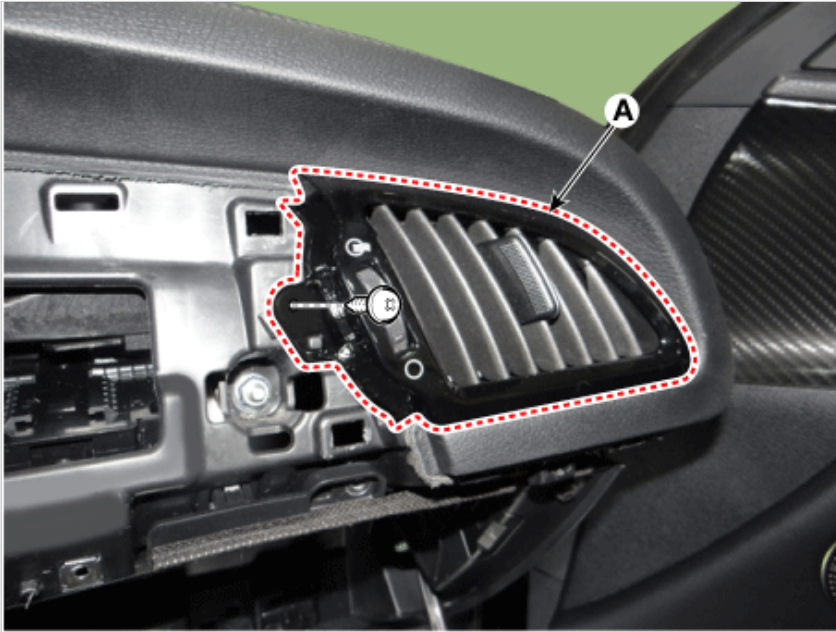

4. Disconnect AFS unit connector (A) after loosening the mounting bolt.

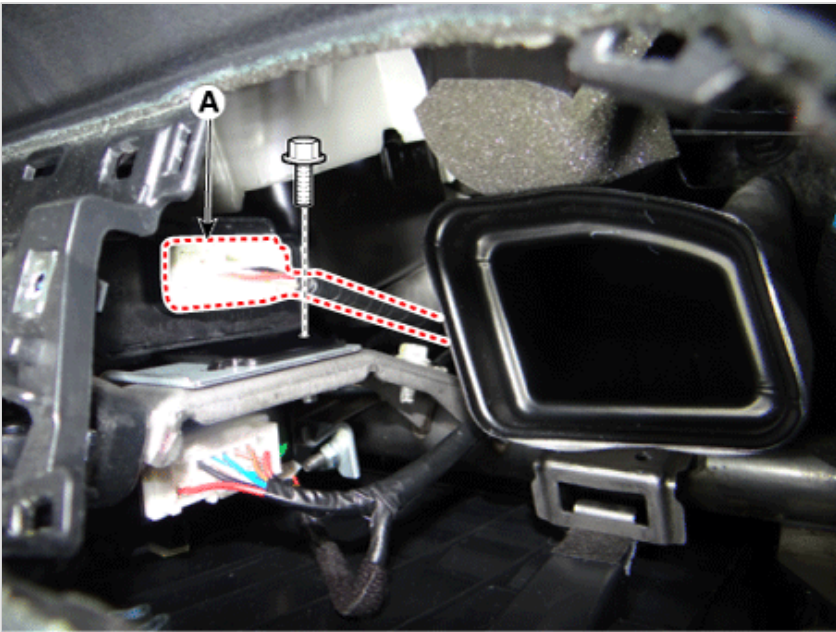

5. Remove the AFS unit (A).

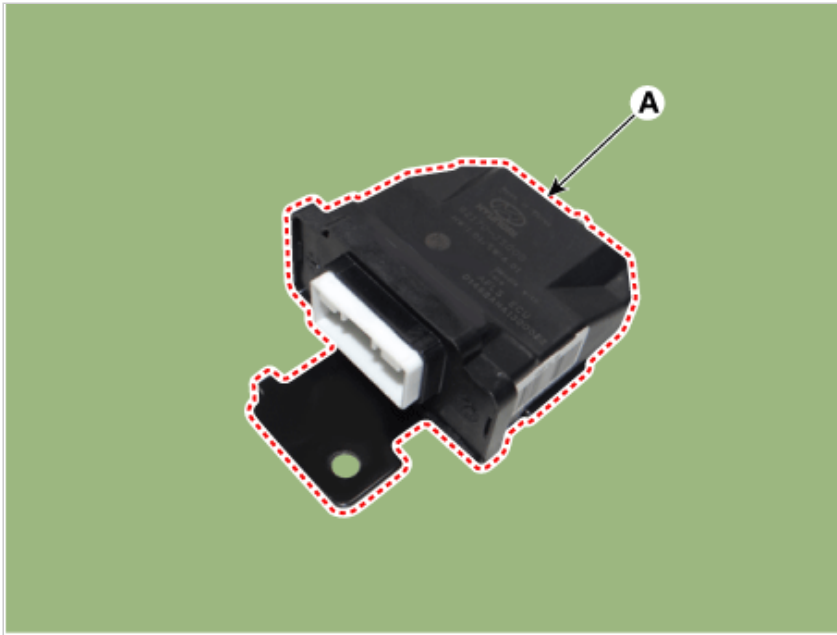

Installation

1. Install the AFS unit.
2. Connect the AFS unit connector.
3. Install the side airvent duct [RH].
4. Install the crash pad passenger side panel.
5. Connect the negative (-) battery terminal.

NOTICE

Make sure that the connectors are plugged in properly.