



Description

Height sensor sense a change of vehicle height and send this signal to AFS ECU. Height sensor is comprised of rotor/stator, PCB coil and sensor lever.

Sensor check the lever angle value which is calculated by the magnetic field of stator.